

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RYOBI](#) /

› [Ryobi ONE+ 18V Cordless Verse Clamp Speaker PCL615B User Manual](#)

## RYOBI PCL615B

# Ryobi ONE+ 18V Cordless Verse Clamp Speaker PCL615B User Manual

Model: PCL615B

## INTRODUCTION

Thank you for choosing the Ryobi ONE+ 18V Cordless Verse Clamp Speaker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your speaker. Please read it thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the speaker.
- Do not expose the speaker to rain or wet conditions. This product is **not waterproof**.
- Use only with Ryobi ONE+ 18V batteries.
- Do not operate the speaker if it has been dropped or damaged.
- Keep children and bystanders away while operating.

## COMPONENTS INCLUDED

- (1) Ryobi ONE+ 18V Verse Clamp Speaker (PCL615)
- User Guide

*Note: Battery and charger are sold separately.*

## SETUP

### 1. Battery Installation

1. Ensure the speaker is powered off.
2. Align a charged Ryobi ONE+ 18V battery with the battery port on the base of the speaker.
3. Slide the battery into the port until it clicks securely into place.
4. To remove the battery, press the release latches on the battery and slide it out.

### 2. Clamping the Speaker

The speaker features a robust clamp for secure attachment to various surfaces.

- Locate the clamp mechanism at the base of the speaker.
- Press the clamp lever to open the jaws.
- Position the speaker on a stable surface (e.g., a workbench, railing, or table edge) and release the lever to secure the clamp. The clamp has rubberized grips for enhanced stability.
- The speaker head can pivot 360 degrees to direct sound as needed.



Image: The Ryobi ONE+ 18V Cordless Verse Clamp Speaker, showing its clamp mechanism and adjustable head.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- Press and hold the **Power button** (circle with a vertical line) located on the top panel of the speaker to turn it on or off.
- A light indicator will confirm the power status.

## 2. Bluetooth Pairing

1. With the speaker powered on, press the **Bluetooth button** (Bluetooth symbol) on the top panel. The indicator light will flash, indicating pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "RYOBI VERSE SPEAKER" from the list.
4. Once connected, the indicator light will become solid.

## 3. Volume Control

- Use the '+' button to increase volume and the '-' button to decrease volume.

## 4. Playback Control

- Press the **Play/Pause button** (play/pause symbol) to start or pause audio playback.

## 5. Linking Multiple Speakers (VERSE Technology)

The Ryobi Verse Clamp Speaker can connect with over 100 other VERSE speakers for a synchronized audio experience.

1. Ensure all speakers are powered on and within range.
2. Pair one speaker to your device via Bluetooth (this will be the primary speaker).
3. On the primary speaker, press the **Link button** (interlocking chain symbol). The indicator light will flash.
4. On each additional VERSE speaker you wish to link, press its **Link button**. They will automatically connect to the primary speaker.
5. Once linked, all speakers will play the same audio.



Image: Detailed view of the speaker's control panel, highlighting the various function buttons.

## MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a dry, clean area away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Always use and charge Ryobi ONE+ 18V batteries according to their respective instruction manuals.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery not installed or discharged.	Ensure a charged Ryobi ONE+ 18V battery is correctly installed.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Press the Bluetooth button to enter pairing mode. Ensure Bluetooth is enabled on your device. Move device closer to the speaker (within 250 feet).
No sound or low volume.	Volume too low on speaker or device; device not connected.	Increase volume using the '+' button on the speaker and on your connected device. Verify Bluetooth connection.
Multiple speakers not linking.	Speakers not in linking mode; too far apart.	Ensure all speakers are in linking mode (press Link button). Keep speakers within range for linking.

## SPECIFICATIONS

- **Model:** PCL615B
- **Input Voltage:** 18 Volts
- **Speaker Type:** Portable Wireless Bluetooth Speaker
- **Speaker Size:** 3.5 Inches
- **Speaker Maximum Output Power:** 12 Watts
- **Connectivity Technology:** Bluetooth
- **Maximum Range:** 250 Feet (Bluetooth streaming)
- **Special Feature:** Connect 100+ VERSE Clamp Speakers or Utilize Independently
- **Mounting Type:** Handlebar Mount (Clamp)
- **Material:** Plastic
- **Item Weight:** 1.63 pounds
- **Product Dimensions:** 3 x 6 x 12 inches
- **Water Resistance Level:** Not Water Resistant

## WARRANTY AND SUPPORT

This Ryobi product comes with a **Limited Warranty**. For detailed warranty information, product registration, or technical support, please refer to the official Ryobi website or contact their customer service. The user guide included in the box also contains specific warranty terms.

**Manufacturer:** RYOBI Tools

## Related Documents - PCL615B




### [Ryobi ONE+ Verse Clamp Speaker Quick Start Guide](#)

Quick start guide for the Ryobi ONE+ Verse Clamp Speaker, detailing single speaker setup and connecting multiple speakers. Includes FCC and IC regulatory information.




### [RYOBI R18HTR40 Cordless Hedge Trimmer User Manual & Safety Guide](#)

Comprehensive user manual for the RYOBI R18HTR40 cordless hedge trimmer, covering intended use, safety warnings, operating instructions, maintenance, and product specifications. Learn how to safely and effectively use your RYOBI hedge trimmer.

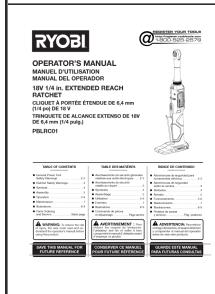


### [RYOBI 18V 1/4 in. Extended Reach Ratchet Operator's Manual](#)

This operator's manual provides essential safety warnings, assembly instructions, operation guidelines, maintenance procedures, and troubleshooting information for the RYOBI 18V 1/4 in. Extended Reach Ratchet (Model PBLRC01).

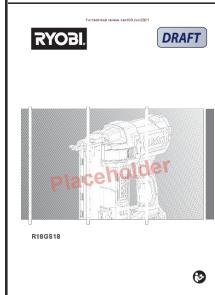

### [Ryobi R18GS18 Cordless Stapler/Nailer: User Manual and Safety Guide](#)

Comprehensive user manual and safety guide for the Ryobi R18GS18 cordless stapler/nailer, covering intended use, safety warnings, operation, maintenance, troubleshooting, specifications, and warranty.

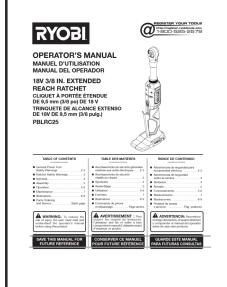	<p><b>Ryobi 18V PEX Pinch Clamp Operator's Manual</b></p> <p>This manual provides safety warnings, operating instructions, and maintenance guidelines for the Ryobi 18V PEX Pinch Clamp (Model P660). It covers general power tool safety, electrical safety, personal safety, and specific warnings related to the PEX pinch clamp tool.</p>
	<p><b>Ryobi 18V 3/8" Extended Reach Ratchet Operator's Manual (PBLRC25)</b></p> <p>Operator's manual for the Ryobi 18V 3/8" Extended Reach Ratchet (Model PBLRC25). Covers safety warnings, assembly, operation, maintenance, and troubleshooting for this cordless power tool.</p>