

[Manuals.plus](#) /

› [BoostArea](#) /

› BoostArea Arc Floor Lamp User Manual

BoostArea B1361

BoostArea Arc Floor Lamp User Manual

Model: B1361

1. INTRODUCTION

Thank you for purchasing the BoostArea Arc Floor Lamp. This modern standing lamp is designed to provide versatile lighting for your living room, bedroom, study, or office. It features stepless dimmable brightness and adjustable color temperature, controlled conveniently via a remote or foot switch. Please read this manual thoroughly before assembly and operation to ensure safe and optimal use of your new lamp.



Image 1.1: The BoostArea Arc Floor Lamp with its remote control, showcasing its adjustable brightness and color temperature capabilities.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before installation and use.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact customer support.
- Ensure the lamp is unplugged before cleaning or replacing the bulb.
- This lamp is designed for indoor use only. Do not expose to water or high humidity.
- Keep the lamp away from heat sources and direct sunlight.
- The lamp base is weighted for stability. Ensure it is placed on a flat, stable surface to prevent tipping.
- Use only E26 LED dimming bulbs, with a maximum wattage of 60W.
- Keep the remote control and its batteries out of reach of children.

3. WHAT'S INCLUDED

Please check the package contents to ensure all parts are present and undamaged:

- Lamp Base (1)
- Lamp Pole Sections (6)
- Arc Lamp Head (1)
- Linen Lampshade (1)
- Dimmable LED Bulb (E26, 10W/1200LM) (1)
- Remote Control (1)
- AAA Batteries for Remote (2)
- User Manual (This document)



Image 3.1: Overview of the lamp's main components and approximate dimensions.

4. ASSEMBLY INSTRUCTIONS

Assembly is quick and easy, typically taking about 5 minutes. No tools are required.

1. **Assemble the Lamp Pole:** Carefully screw the six lamp pole sections together clockwise. Ensure each section is securely tightened to form a straight and stable pole. Gently pull the power cord from the base as you assemble to prevent tangling.
2. **Attach Lamp Head:** Screw the arc lamp head onto the top of the assembled lamp pole.
3. **Attach to Base:** Screw the bottom of the assembled lamp pole into the lamp base, ensuring it is firm and stable.
4. **Assemble Lampshade:** The linen lampshade comes flat. Form it into a cylinder and secure the edges with the built-in Velcro strip. Attach the lampshade to the lamp head using the provided clips, ensuring the top ring is oriented correctly (indent down).
5. **Install Bulb:** Screw the provided E26 LED bulb into the lamp head socket.
6. **Insert Remote Batteries:** Open the battery compartment on the remote control and insert the two AAA batteries, observing polarity.



Image 4.1: Visual guide for the easy assembly process, including pole and lampshade setup.

5. OPERATING INSTRUCTIONS

Your BoostArea Arc Floor Lamp can be operated using the included remote control or the integrated foot switch.

5.1. Using the Remote Control

The magnetic remote control allows for convenient adjustment from up to 16.5 feet away. It can be attached to any iron-made surface, including the lamp pole itself.

- **Power Button:** Press to turn the lamp ON or OFF.
- **Brightness Adjustment:** Use the + and - buttons to steplessly adjust brightness from 10% to 100%.
- **Color Temperature Adjustment:** Use the K+ and K- buttons to steplessly adjust color temperature from 2700K (warm white) to 6500K (cool white).
- **Preset Modes:** The remote features several preset lighting modes for different activities:
 - **Moon Mode:** Soft, low light for nightlight or relaxation.
 - **Nursery Mode:** Gentle illumination suitable for nurseries.
 - **Reading Mode:** Optimized brightness and color for reading.
 - **Working Mode:** Bright, clear light for tasks and work.
- **1-Hour Timer:** Press the timer button to set the lamp to automatically turn off after one hour.

Four Lighting modes easy for your Choose



Image 5.1: Detailed view of the remote control and its various lighting modes.

Mid Century Dimmable Floor Lamp

Stepless Color Temperature Dimming



Stepless Brightness Dimming

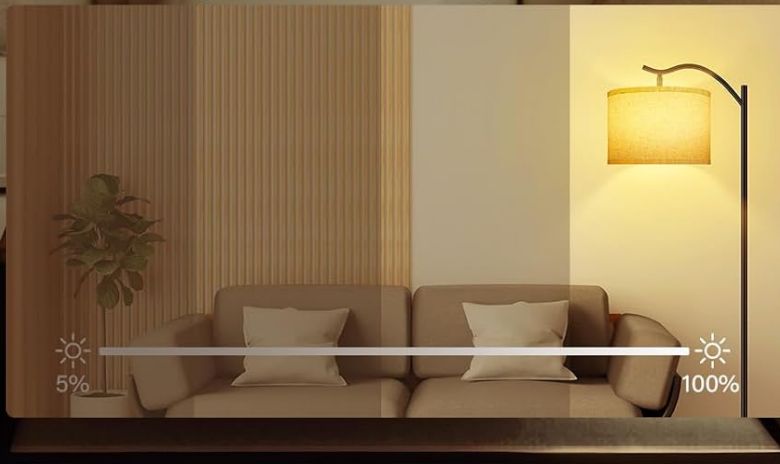


Image 5.2: Visual representation of the lamp's stepless dimming and color temperature adjustment.

Create a Comfortable Atmosphere

Angle adjustable & magnet adsorption design



Image 5.3: The lampshade can be adjusted to direct light as needed.

5.2. Using the Foot Switch

A convenient foot switch is integrated into the power cord near the base of the lamp. Simply press the switch with your foot to turn the lamp ON or OFF.

6. MAINTENANCE AND CARE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the metal parts with a soft, dry cloth. The linen lampshade can be cleaned with a damp cloth. Avoid using abrasive cleaners or solvents.
- **Bulb Replacement:** Always unplug the lamp before replacing the bulb. Allow the bulb to cool completely. Replace with an E26 LED dimming bulb, maximum 60W.
- **Storage:** If storing the lamp for an extended period, disassemble it and store in its original packaging in a dry, cool place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in; Power outlet not working; Bulb loose or faulty; Remote batteries dead.	Check power connection; Test outlet with another device; Tighten or replace bulb; Replace remote batteries.
Remote control not working.	Batteries dead or incorrectly inserted; Remote out of range; Interference.	Replace batteries, ensuring correct polarity; Move closer to the lamp (within 16.5 ft); Remove obstacles.
Lamp flickers or dims unexpectedly.	Loose bulb; Incompatible bulb; Power fluctuations.	Tighten bulb; Ensure bulb is E26 LED dimmable (max 60W); Try a different power outlet.
Lamp is unstable.	Pole sections not fully tightened; Uneven surface.	Ensure all pole sections are securely screwed together; Place lamp on a flat, stable surface.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	B1361
Dimensions	10"D x 10"W x 64"H (approx. 25.4cm D x 25.4cm W x 162.5cm H)
Item Weight	8.68 pounds (approx. 3.94 kg)
Material	Metal (Base: Iron), Linen (Shade)
Finish Type	Matte
Bulb Type	LED (E26 Base, Dimmable)
Max Wattage	60W
Brightness	1200 Lumens (with included bulb)
Color Temperature	2700K - 6500K (Warm White to Cool White)
Control Method	Remote Control, Foot Switch
Remote Range	Up to 16.5 feet
Power Source	Corded Electric (1.2E+2 Volts AC)
Batteries (Remote)	2 x AAA (included)
Lifespan (LED)	>50,000 hours
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

BoostArea products are manufactured with quality and performance in mind. For warranty information, technical support, or any questions regarding your product, please contact BoostArea customer service.

You can typically find contact information on the product packaging or the official BoostArea website. Please have your model number (B1361) and purchase details ready when contacting support.

Visit the official BoostArea Store: [BoostArea Store on Amazon](#)

© 2024 BoostArea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question