

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

RIOWOIS B0CM8L913K

Saiyin Remote Control Replacement for Soundbar User Manual

Model: B0CM8L913K

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Saiyin Remote Control Replacement for Soundbar. Please read this manual thoroughly before using the remote control to ensure proper functionality and longevity.

This remote control is designed as a direct replacement for original Saiyin Sound Bar and bookshelf Speakers remote controls. It is compatible with a wide range of Saiyin models.

PRODUCT OVERVIEW





Figure 1: Front view of the Saiyin Remote Control Replacement. This image displays the ergonomic design and button layout, including power, volume, mute, input selection, and mode buttons.

The Saiyin Remote Control Replacement is a compact and lightweight device designed for seamless control of your Saiyin soundbar or bookshelf speakers. It features an intuitive button layout for easy navigation and function access.

Key Features:

- Direct replacement for original Saiyin soundbar remotes.
- Dedicated buttons for various audio modes (Movie, Music, News).
- Input selection buttons (BT, ARC/COAX, OPT, AUX).
- Standard volume and mute controls.
- Subwoofer level adjustment.

COMPATIBLE MODELS

This remote control is compatible with the following Saiyin Sound Bar and bookshelf Speaker models:

- DS6301, DS6302, DS6302L, DS6343S, DS6345S
- DS6401D, DS6401D+, DS6401S, DS6403, DS6405, DS6441, DS6445S
- DS6541S, DS6551, DS6701, DS6701S, DS6741S
- DS6801, DS6801K, DS6801S, DS6841S
- DS6541SPB, DS6400M, DS6701UP, DS6541SB
- DS6301S, DS6301H-Pro, DS6301H-Plus

Note: This remote control is only applicable to Saiyin brand sound bars and bookshelf speakers. It is not universally compatible with other brands.

SETUP

1. Battery Installation

The remote control requires **two AAA batteries** (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

2. Initial Pairing (No Pairing Required)

This remote control is designed as a direct replacement and typically does not require any pairing or programming for compatible Saiyin soundbars or bookshelf speakers. Once batteries are installed, it should function immediately. If the remote does not respond, ensure the soundbar is powered on and there are no obstructions between the remote and the soundbar's IR receiver.

OPERATING INSTRUCTIONS

Button Functions:

Button	Function
 Power (Red Button)	Turns the soundbar/speakers on or off.
BT	Switches the input source to Bluetooth.
+/- (Volume)	Increases or decreases the main volume level.
MUTE	Mutes or unmutes the audio output.
K< Sub- / >> Sub+	Adjusts the subwoofer volume level (decrease/increase).
ARC/COAX	Switches the input source to ARC (Audio Return Channel) or Coaxial.
movie	Activates Movie sound mode for enhanced cinematic audio.

Button	Function
news	Activates News sound mode for clear dialogue.
music	Activates Music sound mode for optimized music playback.
OPT	Switches the input source to Optical.
AUX boost	Switches the input source to Auxiliary and may provide an audio boost.

To operate, point the remote control directly at the soundbar's infrared (IR) receiver. Ensure there are no obstacles between the remote and the soundbar.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Care:

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

Storage:

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote not responding.	Obstruction between remote and soundbar.	Ensure a clear line of sight to the soundbar's IR receiver.
Remote not responding.	Soundbar is off or unplugged.	Verify the soundbar is powered on and connected to a power source.
Limited range or intermittent response.	Weak batteries.	Replace batteries.
Specific button not working.	Button stuck or damaged.	Gently press the button multiple times. If still unresponsive, the remote may be faulty.

If troubleshooting steps do not resolve the issue, please contact customer support for further assistance.

SPECIFICATIONS

- **Model:** B0CM8L913K
- **Brand:** RIOWOIS (Compatible with Saiyin products)
- **Product Dimensions:** 6.49 x 1.69 x 0.62 inches
- **Item Weight:** 1.44 ounces
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Compatible Devices:** Saiyin Sound Bar, Saiyin Bookshelf Speakers

WARRANTY AND SUPPORT

RIOWOIS offers a **free replacement service within one year** from the date of purchase for this remote control. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any inquiries, please contact RIOWOIS customer service through the platform where you purchased the product or visit the official RIOWOIS store page on Amazon:

[Visit the RIOWOIS Store on Amazon](#)

Professional 24/7 customer service is available to assist you.