



[Manuals.plus](#) /

› [FASTWD](#) /

› FASTWD L361 Android 13 Tablet User Manual - 14-inch 2K Display, 5G WiFi, 11580mAh Battery

## FASTWD L361

# FASTWD L361 Android 13 Tablet User Manual

Model: L361 | Brand: FASTWD

## 1. INTRODUCTION

Welcome to the user manual for your new FASTWD L361 Android 13 Tablet. This guide provides essential information to help you set up, operate, and maintain your device. The FASTWD L361 features a vibrant 14-inch 2K Incell FHD display, powered by Android 13, with robust 5G WiFi connectivity, an 11580mAh battery, 19GB RAM, and 256GB of internal storage.

## 2. PACKAGE CONTENTS

Please check the box for the following items:

- FASTWD L361 Android 13 Tablet
- Protective Case
- USB Charging Cable
- Power Adapter
- User Manual (this document)

## 3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your tablet.

# 14 Inch 2K eye-protecting giant screen new arrival

**2K**

**14 Inch  
2K Full screen**



**2000\*1200  
incell FHD**

**93%**

**93% high  
screen-to-body ratio**



**Rheinland TÜV  
certification**



Image 3.1: Front and back view of the FASTWD L361 Tablet, showcasing its sleek design and camera placement.

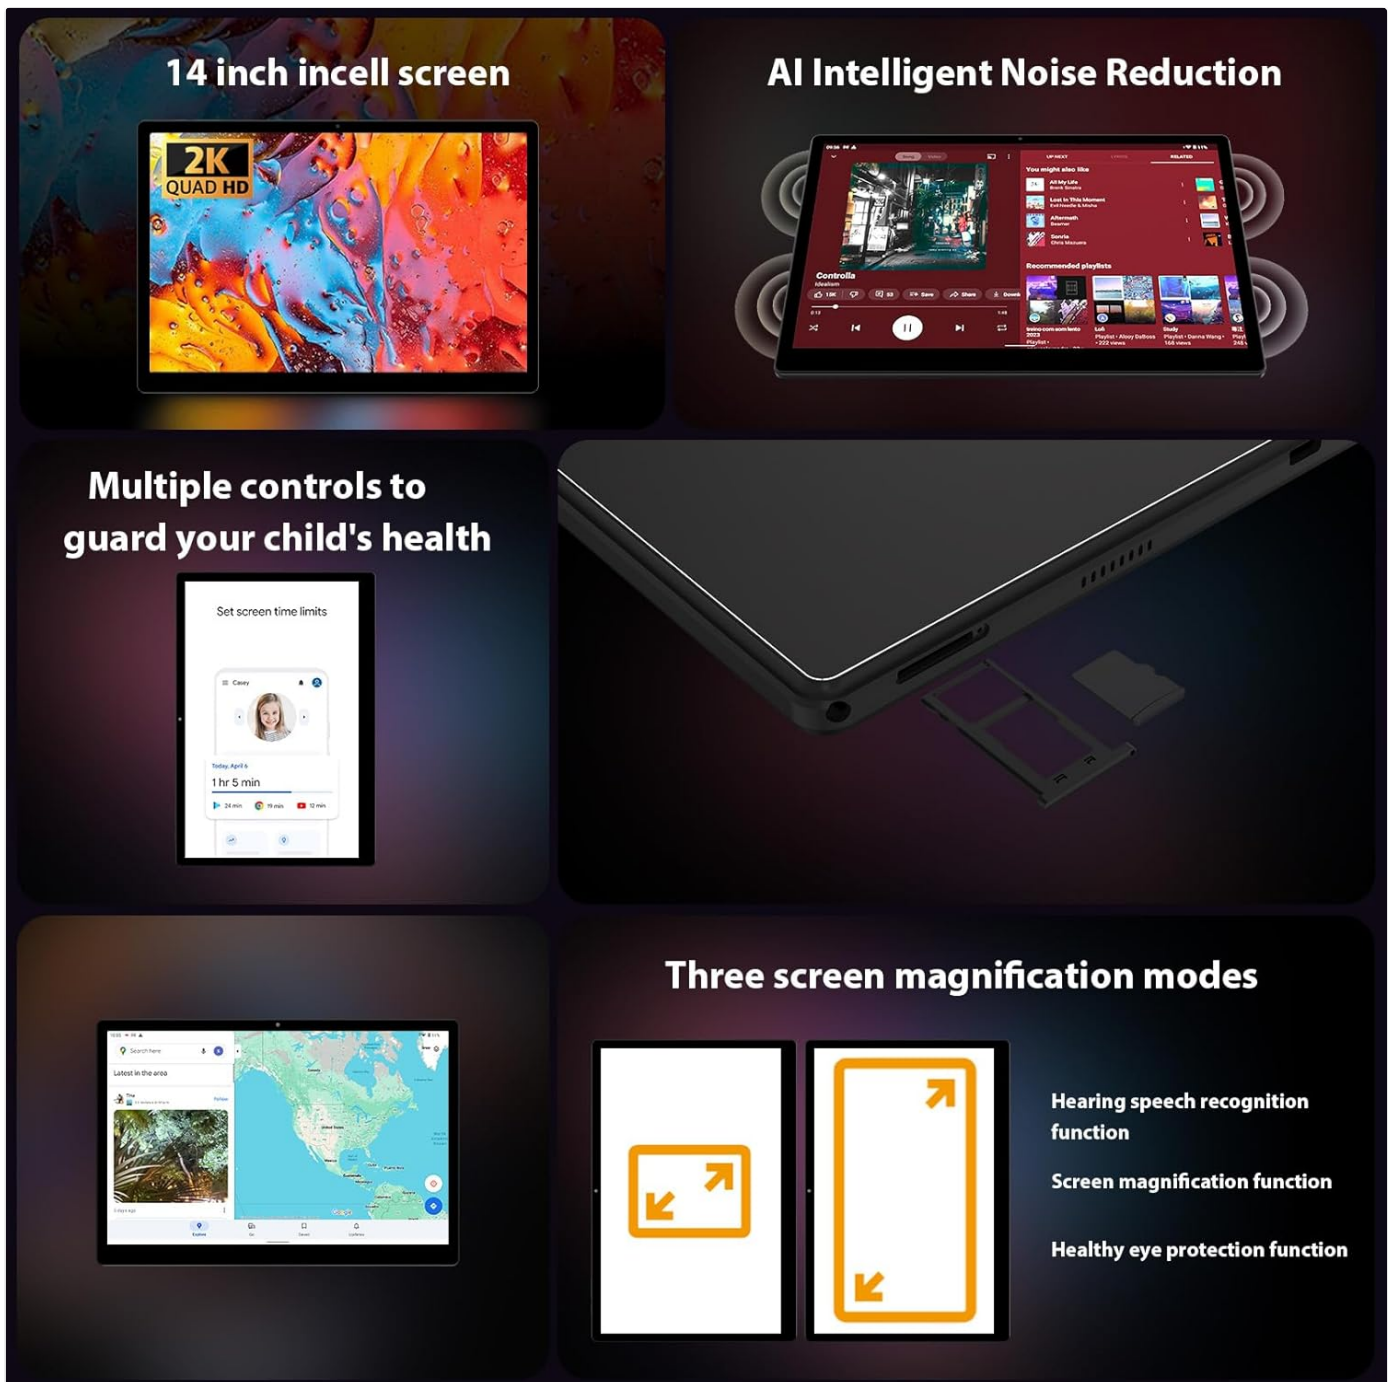 


Image 3.2: Side view of the FASTWD L361 Tablet, highlighting the USB port, power button, volume controls, and the SIM/MicroSD card slot.

## Key Components:

- **Power Button:** Press and hold to turn on/off or restart. Press briefly to wake/sleep the screen.
- **Volume Buttons:** Adjust the audio volume.
- **USB Port:** For charging and data transfer.
- **Front Camera:** For video calls and selfies (8MP).
- **Rear Camera:** For photos and videos (13MP + 2MP Macro).
- **MicroSD Card Slot:** Expand storage up to 1TB.
- **Speakers:** For audio output.

## 4. INITIAL SETUP

### 4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB charging cable to the tablet's USB port and the power adapter, then plug the adapter into a power outlet. The tablet supports 12W fast charging.

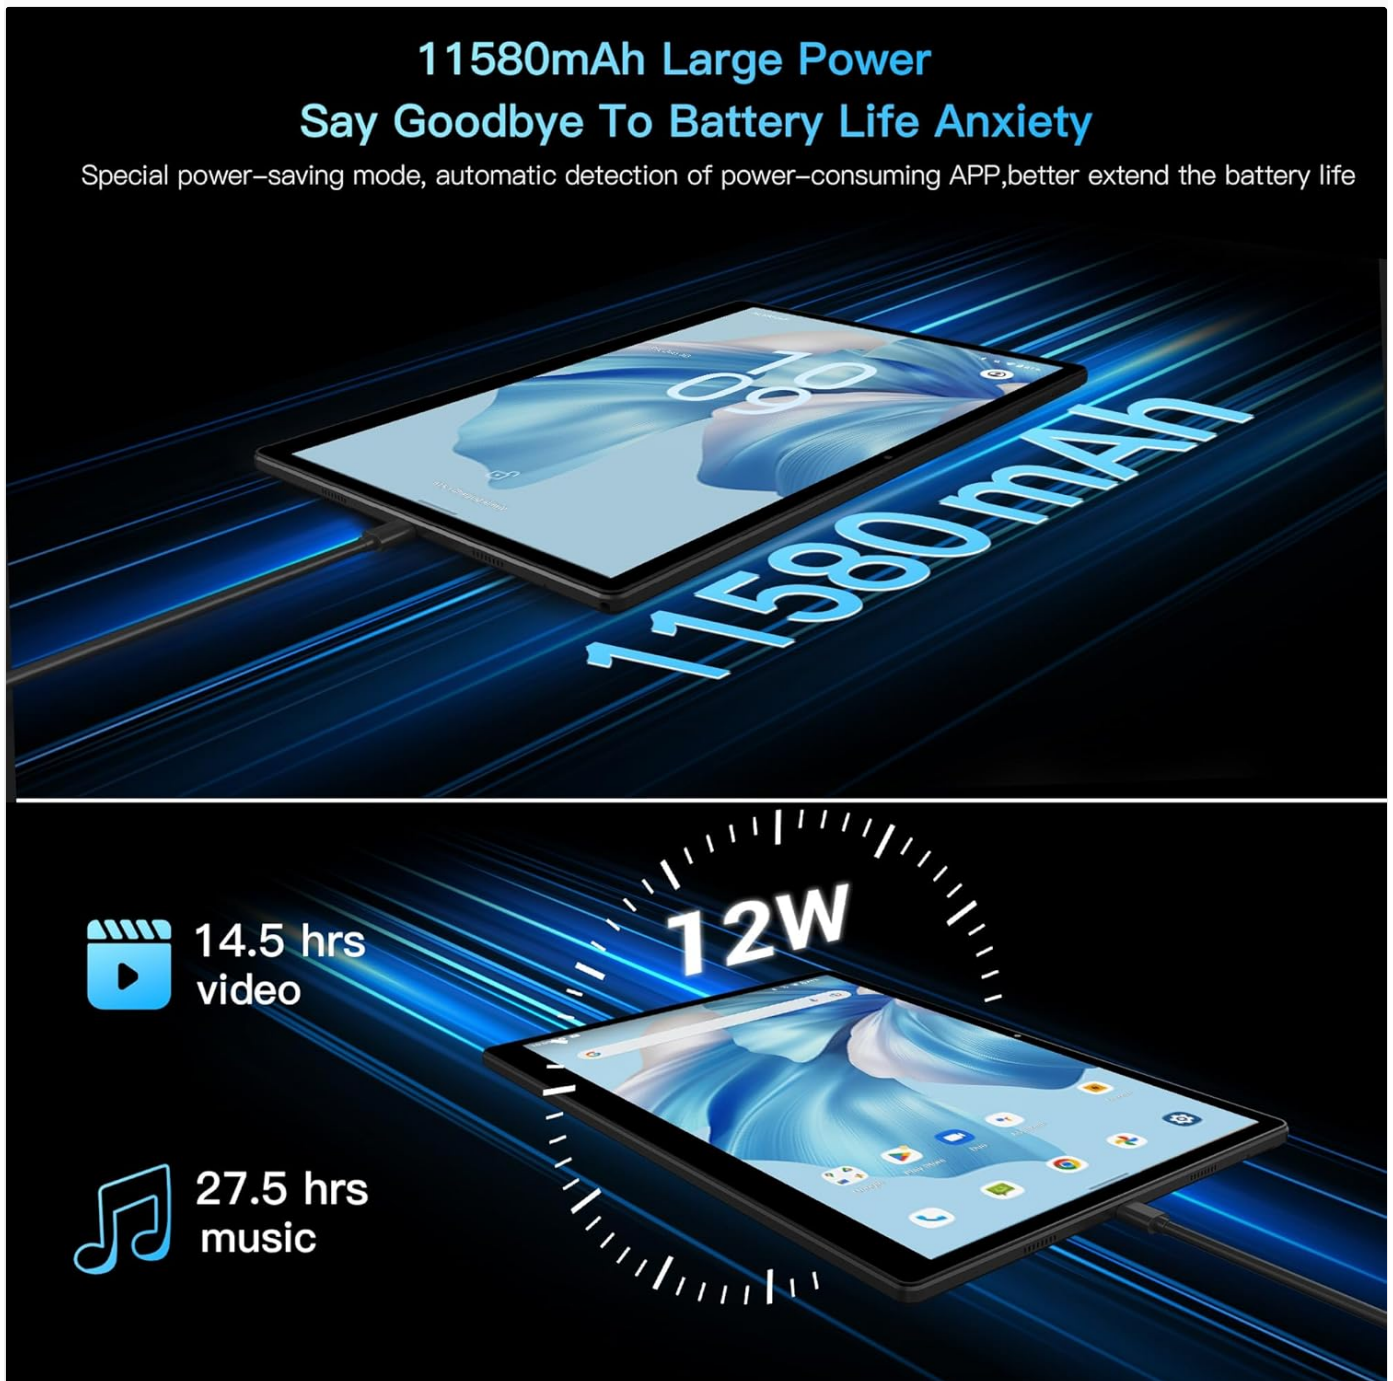 


Image 4.1: Illustration of the FASTWD L361 Tablet being charged, highlighting its 11580mAh battery and 12W fast charging capability.

## 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the FASTWD logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

## 4.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.

4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, password, or Face ID).

#### 4.4 Inserting a MicroSD Card

To expand storage, insert a MicroSD card (up to 1TB) into the designated slot on the side of the tablet. Ensure the tablet is powered off before inserting or removing the card.

## 5. OPERATING YOUR TABLET

### 5.1 Display and Eye Protection

The FASTWD L361 features a 14-inch Incell FHD display with a resolution of 2000 x 1200 pixels. It is TÜV certified for eye protection, reducing eye strain during prolonged use.



Image 5.1: Visual representation of the FASTWD L361 Tablet's 14-inch 2K Incell FHD display, highlighting its 2000x1200 resolution and TÜV eye protection certification.

## 5.2 Connectivity

Your tablet supports advanced wireless connectivity:

- **5G WiFi:** Connect to high-speed wireless networks for fast internet access.
- **Bluetooth 5.0:** Pair with wireless headphones, speakers, and other Bluetooth-enabled devices.

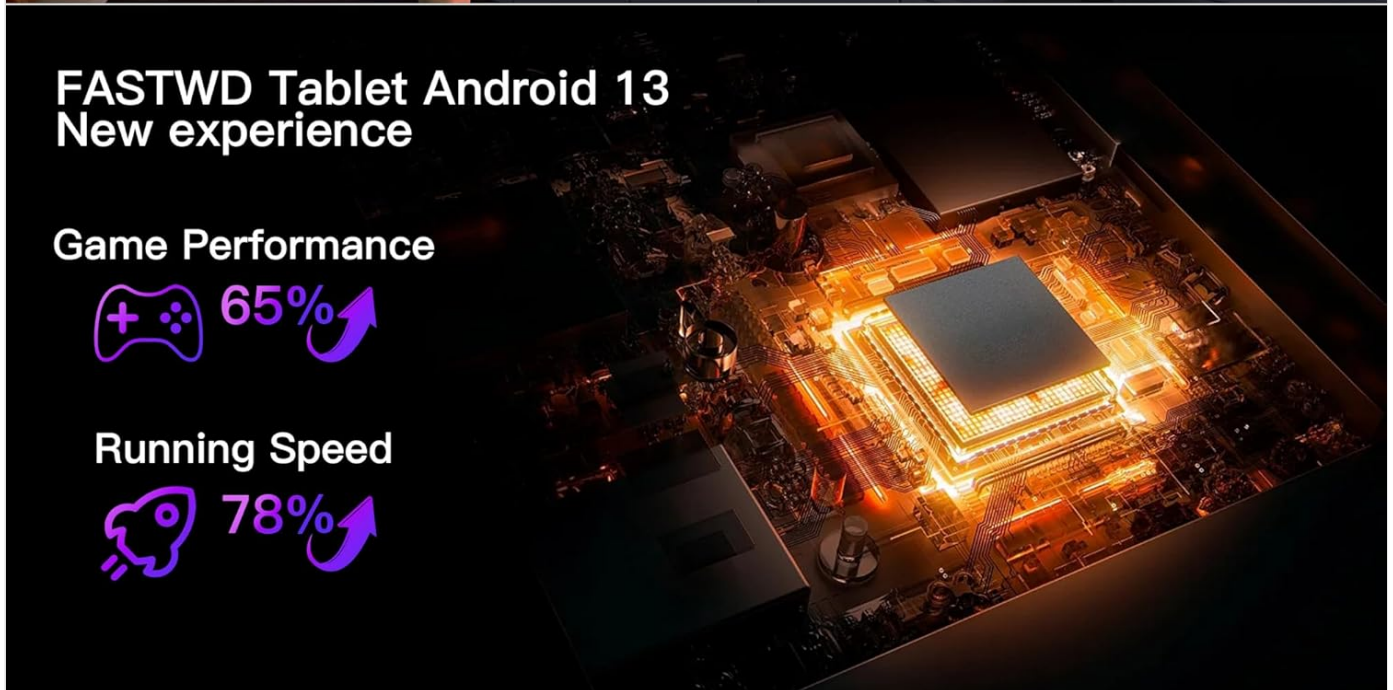 


Image 5.2: Depiction of the FASTWD L361 Tablet's 5G WiFi capabilities, 19GB RAM, 256GB ROM, and support for 1TB MicroSD expansion.

## 5.3 Cameras

The tablet is equipped with dual cameras:

- **Front Camera:** 8 Megapixels, ideal for video calls and self-portraits.
- **Rear Camera:** 13 Megapixels with a 2 Megapixel Macro lens, suitable for capturing detailed photos and videos.

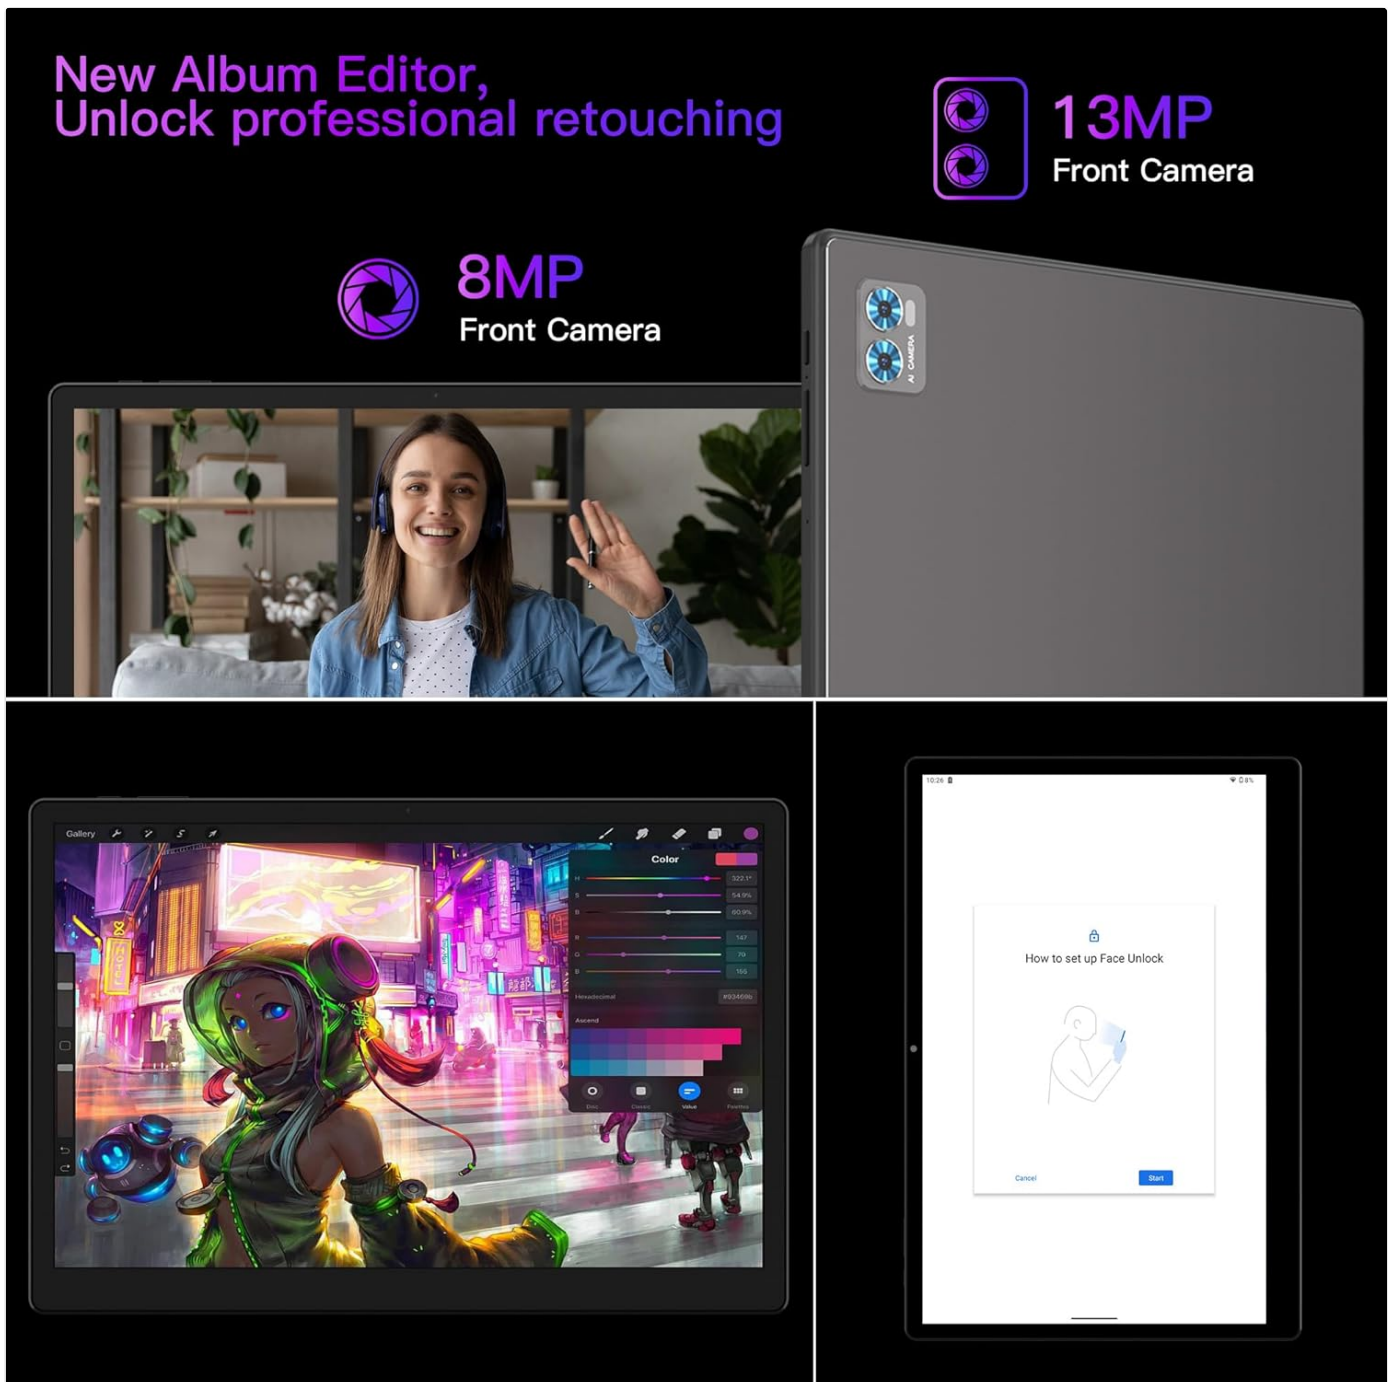 


Image 5.3: Visuals demonstrating the FASTWD L361 Tablet's 8MP front camera, 13MP rear camera, and the process for setting up Face ID for secure unlocking.

#### 5.4 Face ID

Unlock your tablet securely using Face ID. To set up:

1. Go to **Settings > Security > Face Unlock**
2. Follow the on-screen instructions to register your face.

#### 5.5 AI Intelligent Noise Reduction

The tablet integrates AI Intelligent Noise Reduction technology to filter out ambient sounds, enhancing audio clarity during calls and media playback.

#### 5.6 Multitasking with Multi-Window

Utilize the multi-window feature to run two applications simultaneously, enhancing productivity and user experience.

# Hover/Split Multi-Window More Freedom of Operation

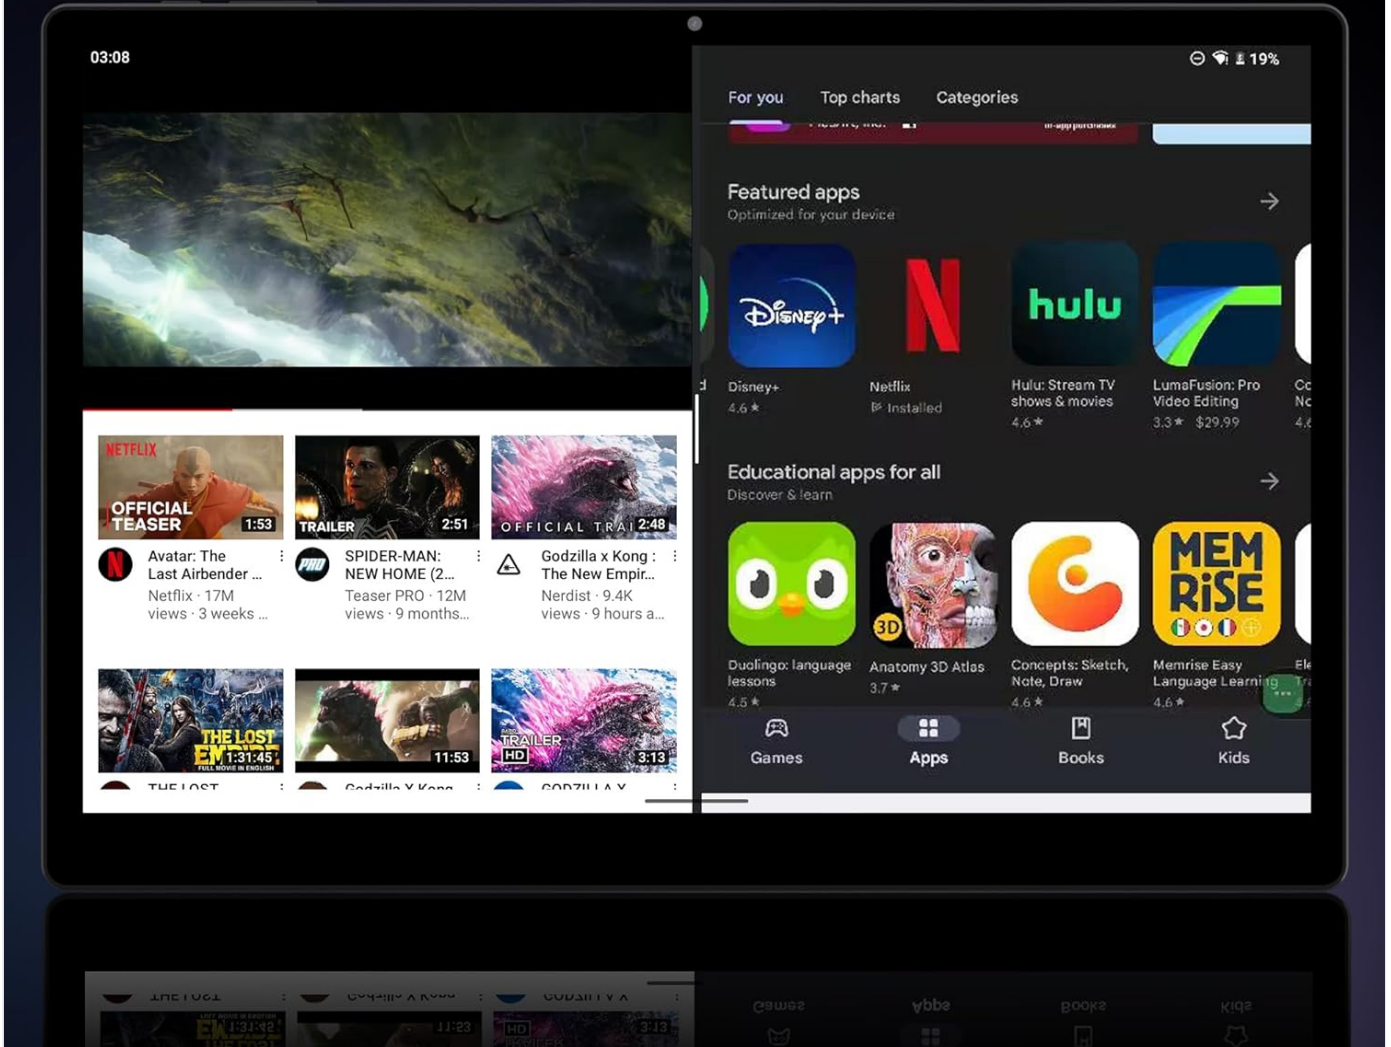 


Image 5.4: The FASTWD L361 Tablet displaying its multi-window and split-screen capabilities, allowing users to operate multiple applications simultaneously.

## 6. MAINTENANCE

### 6.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

### 6.2 Battery Care

The tablet is equipped with an 11580mAh battery. To prolong battery life:

- Avoid exposing the tablet to extreme temperatures.
- Do not let the battery drain completely before recharging regularly.
- Use the provided charger for optimal charging performance.

## 6.3 Software Updates

Ensure your tablet's software is up to date to benefit from the latest features and security enhancements. Go to **Settings > System > System update** to check for and install updates.

## 7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Check Wi-Fi settings on the tablet to ensure it's connected to the correct network.
Tablet is slow or unresponsive	Close unnecessary apps running in the background. Clear cache from apps. Restart the tablet. If issues persist, consider a factory reset (back up data first).
Face ID not working	Ensure your face is well-lit and not obstructed. Re-register your face in settings if necessary.

### 7.1 Factory Reset

If troubleshooting steps do not resolve the issue, you may need to perform a factory reset. This will erase all data on your tablet, so ensure you back up important files before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision.

## 8. SPECIFICATIONS

Feature	Detail
Model	L361
Operating System	Android 13
Display	14-inch Incell FHD, 2000 x 1200 pixels, TÜV Certified
Processor Speed	2 GHz
RAM	19 GB (8GB + 11GB virtual)
Internal Storage	256 GB
Expandable Storage	Up to 1 TB MicroSD
Battery Capacity	11580 mAh

Feature	Detail
Charging	12W Fast Charging
Front Camera	8 MP
Rear Camera	13 MP + 2 MP Macro
Connectivity	5G WiFi, Bluetooth 5.0
Security Features	Face ID
Special Features	AI Noise Reduction, GMS Certified
Dimensions	41.79 x 25.1 x 3.7 cm
Weight	2.08 kilograms

## 9. WARRANTY AND SUPPORT

Your FASTWD L361 Tablet comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official FASTWD website.

For technical support, product inquiries, or warranty claims, please contact FASTWD customer service through the contact information provided on the official website or your purchase documentation.