

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EUHOMY](#) /

› [EUHOMY Stainless Steel Ice Maker Machine Instruction Manual](#)

EUHOMY B0CM92KNZ1

EUHOMY Stainless Steel Ice Maker Machine Instruction Manual

Model: B0CM92KNZ1

INTRODUCTION

Thank you for choosing the EUHOMY Stainless Steel Ice Maker Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image: The EUHOMY Stainless Steel Ice Maker Machine, featuring a sleek design, an ice scoop, and a refreshing glass of iced beverage.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Ensure the power outlet voltage matches the appliance's requirements.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the ice maker from the power outlet before cleaning or when not in use.
- Keep the appliance away from heat sources and direct sunlight.
- Do not operate the appliance with a damaged cord or plug.
- Supervise children when the appliance is in use.
- Use only potable water in the ice maker.
- Do not block ventilation openings.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your ice maker:

INTELLIGENTER BILDSCHIRM

Einfach zu bedienen

TIMER/ REINIGUNG	EIN/AUS	FULL/ADD	"+,-"
Zeiteinstellung Selbstreinigung	Taste Power	Wasser-Sensor Pannenhilfe	Steuerung Eisherstellung Zeit

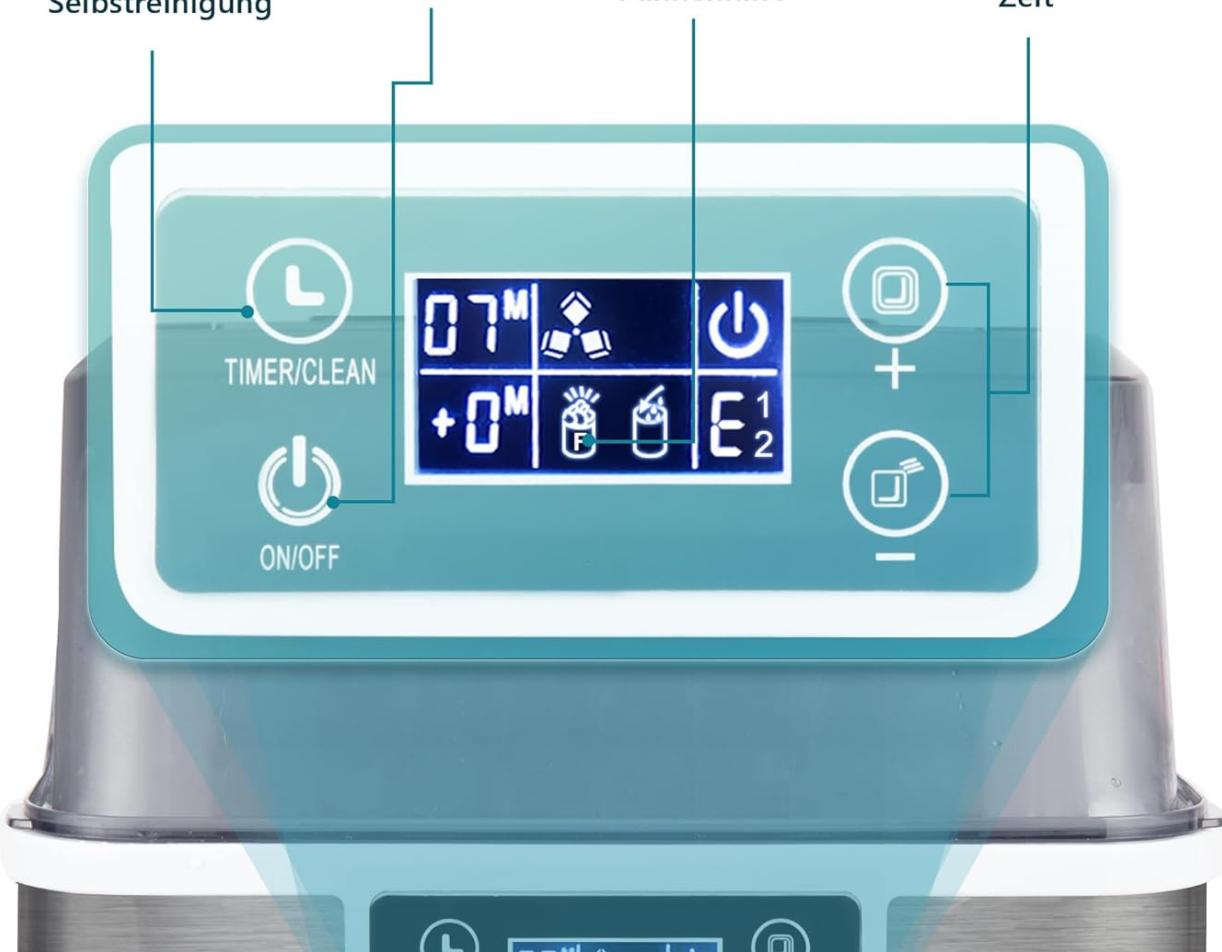


Image: The intelligent control panel features buttons for Timer/Clean, On/Off, Full/Add Water indicator, and ice making time adjustment (+/-).

- **Control Panel:** LCD display with buttons for operation.
- **Ice Basket:** Removable basket for collecting ice cubes.
- **Ice Scoop:** Included for convenient ice retrieval.
- **Water Reservoir:** Internal tank for water storage (3.2L capacity).
- **Transparent Window:** Allows observation of the ice making process.
- **Water Inlet:** For manual water filling or attaching a water bottle.


SETUP

- Unpacking:** Carefully remove the ice maker from its packaging. Remove all packing materials, including any tape or protective film.
- Placement:** Place the ice maker on a stable, level surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
- Initial Cleaning:** Before first use, clean the interior of the ice maker according to the "Maintenance" section.
- Water Filling:**
 - Manual Fill:** Open the lid and pour potable water directly into the water reservoir, up to the MAX fill line (maximum 3.2 liters).
 - Water Bottle Method:** Place a compatible water bottle (not included) onto the designated area on top of the ice maker.

2 MÖGLICHKEITEN, WASSER



Manuell
Wasser hinzufügen

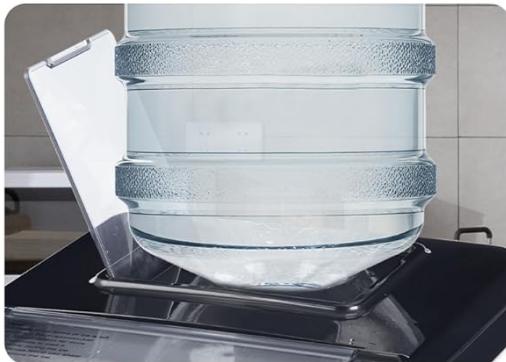

Wasser-Eimer

Image: Illustration of the two water filling options: manually adding water to the reservoir or using an external water bottle.

- Power Connection:** Plug the ice maker into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On:** Press the **ON/OFF** button to turn on the ice maker.

2. **Ice Production:**

- The machine will automatically begin the ice-making cycle.
- The first batch of 24 ice cubes will be ready in approximately 13 to 25 minutes, depending on ambient temperature.
- The transparent window allows you to monitor the ice production.



EHHOMY Eiswürfelmaschine



**24 Eiswürfel
/ 13 Minuten**



**20,5 kg
/ 24 Stunden**



**3,2-Liter
-Wasser**

Image: The ice maker produces 24 ice cubes in approximately 13 minutes, with a daily capacity of 20.5 kg and a 3.2-liter water reservoir.

3. **Adjusting Ice Thickness:** Use the "+" and "-" buttons on the control panel to adjust the ice-making time, which influences the thickness of the ice cubes.

4. **Ice Full Indicator:** When the ice basket is full, the "Ice Full" indicator will illuminate, and the machine will pause ice production. Remove ice to resume.

5. **Add Water Indicator:** If the water reservoir is low, the "Add Water" indicator will illuminate. Add more water to continue ice production.

6. **Timer Function:**

- A short press of the **TIMER/CLEAN** button activates the timer setting mode.

- You can set a delay of up to 8 hours for the machine to start or stop.

7. **Separating Ice Cubes:** The machine produces 24 ice cubes connected in a sheet. Use the provided ice scoop to separate them before use.



Image: Close-up view of the square ice cubes produced by the machine.

8. **Power Off:** Press the **ON/OFF** button to turn off the ice maker.

MAINTENANCE

Automatic Self-Cleaning

1. Ensure the water reservoir is filled with clean water.
2. Press and hold the **TIMER/CLEAN** button for more than 5 seconds.
3. The machine will initiate a 20-minute automatic cleaning cycle.
4. After the cycle, drain the water from the reservoir.

AUTOMATISCHE SELBSTREINIGUNG

Drücken Sie die ON/OFF-Taste für 5 Sekunden, um die Selbstreinigung zu starten.



Image: Visual representation of the automatic self-cleaning function, showing water circulation within the machine.

Regular Cleaning

- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- **Interior:** Regularly clean the water reservoir and ice basket with a mild detergent and warm water. Rinse thoroughly to remove any residue.
- **Draining:** Periodically drain any remaining water from the reservoir to prevent mineral buildup.
- **Storage:** If storing the ice maker for an extended period, ensure it is thoroughly cleaned and dried. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Ice maker not turning on.	No power, loose plug.	Check power connection, ensure outlet is functional.
"Add Water" indicator is on.	Water reservoir is empty or low.	Fill the water reservoir with potable water.
"Ice Full" indicator is on.	Ice basket is full.	Remove ice from the basket.
Ice production is slow or ice cubes are small.	High ambient temperature, insufficient water, or incorrect ice thickness setting.	Ensure proper ventilation, add water, adjust ice thickness using the "+" button.
Unusual noise during operation.	Normal operation sounds (compressor, water pump) or potential obstruction.	<p>Most noises are normal. If excessive, check for obstructions or contact support. The operating noise level is approximately 45 dB.</p>  <p>GERÄUSCHARM</p> <p>Weniger als 35 dB, damit Sie ruhig genießen können.</p> <p>30dB Flüstern 45dB Eisbereiter 55dB Normaler Chat 70dB Musik</p>

Image: Noise level comparison chart, indicating the ice maker operates at approximately 45 dB.

SPECIFICATIONS

- Model:** B0CM92KNZ1
- Brand:** EUHOMY
- Dimensions (L x W x H):** 36 x 25.14 x 37 cm (14.17 x 9.9 x 14.57 inches)
- Weight:** 11.27 kg (24.85 lbs)

- **Water Reservoir Capacity:** 3.2 Liters
- **Ice Production Rate:** 24 ice cubes per cycle (approx. 13-25 minutes)
- **Daily Ice Production:** Up to 20.5 kg (45 lbs) per 24 hours
- **Noise Level:** Approximately 45 dB
- **Self-Cleaning Function:** Yes
- **Timer Function:** Up to 8 hours delay

WARRANTY AND SUPPORT

Your EUHOMY Ice Maker Machine is covered by a **12-month warranty** from the original date of purchase. Additionally, lifetime technical support is provided.

For any questions regarding the use of your ice maker, or for technical assistance, please contact EUHOMY customer service. Our support team is available 24/7 to assist you.

Please refer to your purchase documentation for specific contact details or visit the official EUHOMY website for support information.

© 2023 EUHOMY. All rights reserved.