

[manuals.plus](#) /› [FASTWD](#) /› [FASTWD 14-inch Android 13 Tablet User Manual \(Model L361\)](#)

FASTWD L361

FASTWD 14-inch Android 13 Tablet User Manual

Model: L361

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your FASTWD 14-inch Android 13 Tablet, Model L361. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.



Image 1.1: FASTWD 14-inch Android 13 Tablet with included accessories.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- FASTWD L361 Tablet
- Protective Case
- Stylus
- Charger
- Type-C Cable
- Instruction Manual



Image 2.1: Included accessories with the FASTWD L361 Tablet.

3. SETUP

3.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's charging port and the charger to a power outlet. The battery indicator on the screen will show charging status.

3.2 Powering On/Off

1. **To Power On:** Press and hold the Power button until the screen lights up.
2. **To Power Off:** Press and hold the Power button, then select 'Power off' from the options displayed on the screen.

3.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes:

- Selecting your preferred language.
- Connecting to a Wi-Fi network.
- Setting up your Google account (required for accessing the Google Play Store and other Google services).
- Setting up Face ID for secure unlocking.



Image 3.1: Front view of the tablet, showing the display.

4. OPERATING THE TABLET

4.1 Basic Navigation

The tablet features a touch-sensitive screen. Use the following gestures for navigation:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move icons.

4.2 Connectivity

- **Wi-Fi:** Connect to 5G Wi-Fi networks via Settings > Network & internet > Wi-Fi.
- **Bluetooth:** Pair with Bluetooth devices (e.g., headphones, speakers) via Settings > Connected devices > Bluetooth.
- **GPS:** The tablet supports GPS for location services and navigation apps.
- **Cellular:** This tablet supports cellular connectivity (unlocked). Insert a compatible SIM card to use mobile data.

4.3 Camera Usage

The tablet is equipped with a 13MP rear camera and an 8MP front camera. Open the Camera app to capture photos and videos.

4.4 Split-Screen Multitasking

Utilize the split-screen feature of Android 13 to run two applications simultaneously. This enhances productivity by allowing you to view content and take notes, or browse and chat at the same time.



Image 4.1: Tablet in use with keyboard and stylus.

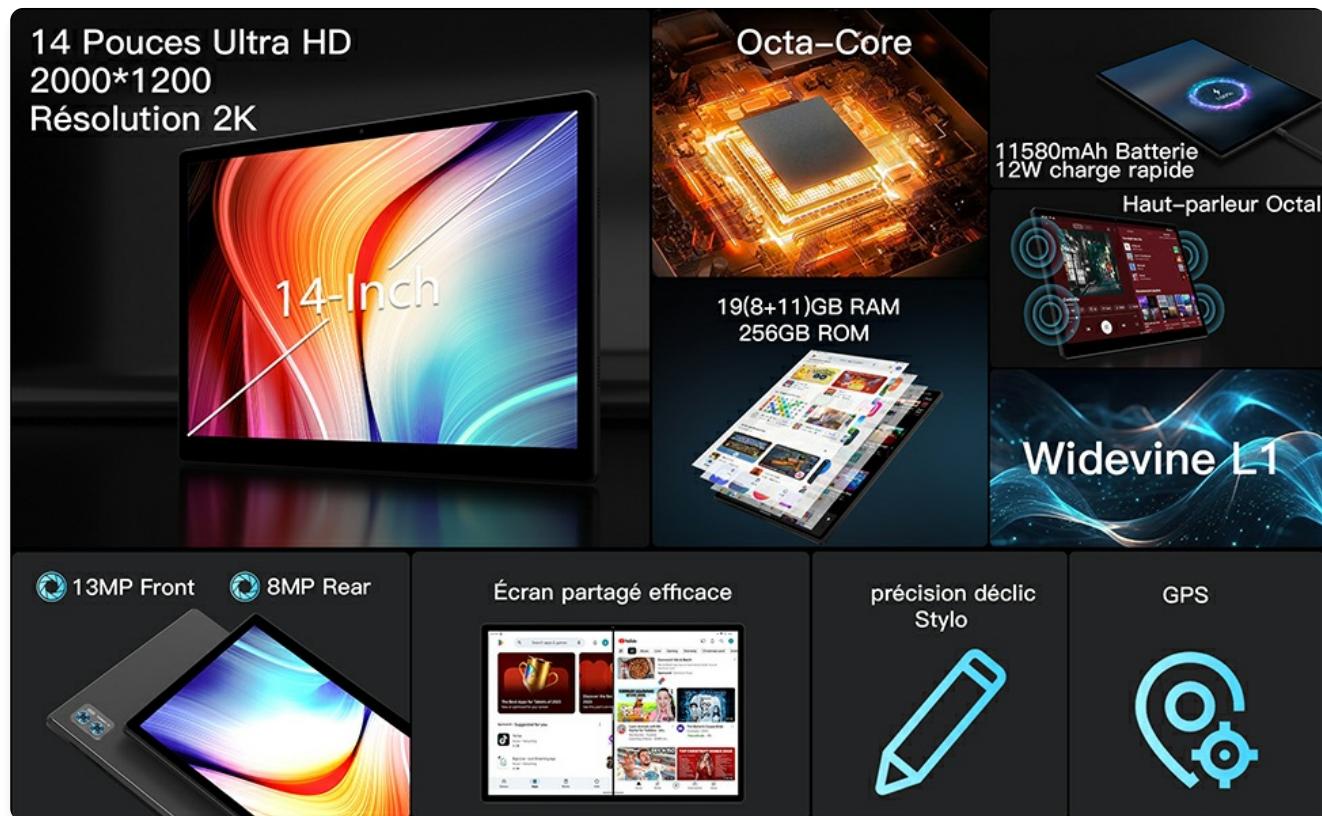


Image 4.2: Demonstrating split-screen functionality on the tablet.

5. MAINTENANCE

5.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive

materials that could damage the surfaces.

5.2 Battery Care

The tablet is equipped with an 11580mAh battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use the provided 12W charger for optimal charging.

Buy FASTWD Tablet

 **30 days no reason to return the goods**

 **2 years of technical support**

 **24 Hours after-sales service**



Image 5.1: Battery performance estimates for various activities.

5.3 Software Updates

Ensure your tablet's operating system is up to date. Regular software updates provide security enhancements and new features. Check for updates via Settings > System > System update.

6. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not powering on:** Ensure the battery is charged. Connect the charger and try again.
- **Screen unresponsive:** Restart the tablet by holding the power button for approximately 10 seconds.
- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet.
- **Apps crashing:** Clear the cache of the problematic app via Settings > Apps > [App Name] > Storage & cache > Clear cache. If the issue persists, consider reinstalling the app.
- **Slow performance:** Close unnecessary background applications. Consider freeing up storage space.

7. SPECIFICATIONS

Detailed technical specifications for the FASTWD L361 Tablet:

Une quantité extraordinaire de mémoire Plus que vous ne pouvez l'imaginer

8 Go RAM et mémoire d'extension implicite 11Go RAM qui libère de la mémoire en fonction de vos besoins en mémoire multitâche pour un changement d'application en toute transparence.256Go ROM associée à une carte TF extensible 1 Go pour les besoins quotidiens de grande capacité.



Image 7.1: Overview of key tablet specifications.

Feature	Specification
Brand	FASTWD
Model Number	L361
Operating System	Android 13
Screen Size	14 Inches
Screen Resolution	2000x1200 (2K)
Processor	Allwinner Octa-Core, 2 GHz
RAM	19GB (8GB Physical + 11GB Virtual)
Internal Storage	256 GB
Expandable Storage	Up to 1TB (via TF card)
Battery Capacity	11580mAh
Charging Power	12W
Rear Camera	13 MP
Front Camera	8 MP
Connectivity	5G WiFi, Cellular (Unlocked), Bluetooth 5.0, GPS

Feature	Specification
Special Features	Face ID, GMS Certified, Widevine L1, TÜV Certified
Item Weight	2.1 kg

8. WARRANTY AND SUPPORT

FASTWD is committed to providing quality products and customer satisfaction.

- Return Policy:** Enjoy a 30-day return policy from the date of purchase.
- Technical Support:** The product includes 2 years of technical support.
- After-Sales Service:** 24-hour after-sales service is available for assistance.

For further assistance or inquiries, please refer to the contact information provided with your purchase or visit the official FASTWD website.

Related Documents - L361

 Please read the manual before using the product.	FASTWD Tablet User Manual Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.
 Please read the manual before using the product.	FASTWD Tablet User Manual Comprehensive user manual for the FASTWD Tablet, covering setup, features, troubleshooting, and warranty information. Learn how to get started, navigate the home screen, manage settings, connect to networks, and troubleshoot common issues.
 Please read the manual before using the product.	How to Install a Tablet Screen Protector: Step-by-Step Guide Concise guide on installing a screen protector on your tablet, covering cleaning, alignment, and bubble removal. Suitable for TOSCIDO, YUMKEM, HEASUR, and other compatible tablets.
 Please read the manual before using the product.	WAFERKEY User Guide: Smart Lock App Setup, Control, and Management Comprehensive user guide for the WAFERKEY smart lock application, covering download, registration, device pairing, user management, access control, and settings.