

B0CM9BQLD1

Generic Replacement Remote Control User Manual

For Toptro X1 & YABER PRO U6 5G Mini DLP Portable 1080P WiFi Movie Projectors

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Generic Replacement Remote Control. This remote is designed to be compatible with Toptro X1 and YABER PRO U6 5G Mini DLP Portable 1080P WiFi Movie Projectors. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

PRODUCT OVERVIEW

The Generic Replacement Remote Control is an infrared (IR) remote designed to provide seamless control over compatible Toptro and YABER projectors. It features a standard button layout for power, navigation, volume, and media playback functions.



Figure 1: Front view of the remote control. This image displays the primary buttons including power, navigation pad with OK/Play/Pause, home, back, menu, volume controls, and media playback buttons.



Figure 2: Angled view of the remote control, providing a perspective of its overall shape and button placement.

SETUP

1. Battery Installation

The remote control requires 1 AAA battery for operation. Ensure correct polarity when inserting the battery.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert 1 AAA battery, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process. Note the polarity markings inside the compartment.

2. Pairing (If Applicable)

This remote control operates via infrared (IR) and typically does not require pairing. It functions directly with compatible projectors as long as there is a clear line of sight to the projector's IR receiver. If your projector requires a specific pairing process for IR remotes, please refer to your projector's user manual.

OPERATING INSTRUCTIONS

Ensure the remote control is pointed directly at the projector's IR receiver for optimal performance.

Button Functions:

- **Power Button:** Turns the projector on or off.
- **/ Play/Pause Button:** Starts or pauses media playback.
- **▶ / ◀ Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button:** Confirms selections or enters menus.
- **↶ Home Button:** Returns to the projector's main home screen.
- **← Back Button:** Returns to the previous screen or menu.
- **Volume Up/Down Buttons:** Adjusts the audio volume.
- **Mute Button:** Mutes or unmutes the audio.
- **/ Skip/Fast Forward/Rewind Buttons:** Controls media playback (skip tracks, fast forward/rewind).
- **Menu Button:** Accesses context-sensitive menus or settings.

Note: Specific button functionalities may vary slightly depending on the projector's firmware and application.

MAINTENANCE

Cleaning the Remote Control

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning agents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the AAA battery when the remote's responsiveness decreases or it stops functioning. Always dispose of used batteries according to local regulations.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery to prevent leakage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------|---------------------------------------|---|
| Remote not responding. | Dead or incorrectly inserted battery. | Replace the AAA battery, ensuring correct polarity. |

| Problem | Possible Cause | Solution |
|--|---|---|
| Remote has limited range or intermittent response. | Obstruction between remote and projector; low battery; remote not pointed at IR receiver. | Ensure clear line of sight. Replace battery. Point remote directly at the projector's IR receiver. |
| Some buttons do not work. | Button malfunction; incompatibility with specific projector function. | Clean the remote. Verify if the button function is supported by your projector model. This is a replacement remote and may not have all original functions. |
| Projector does not recognize the remote. | Projector's IR receiver is blocked or faulty; remote is incompatible. | Check projector's IR receiver for obstructions. Confirm your projector model (Toptro X1 or YABER PRO U6) is listed as compatible. |

If troubleshooting steps do not resolve the issue, please contact customer support for further assistance.

SPECIFICATIONS

Model: Generic Replacement Remote Control (ASIN: B0CM9BQLD1)

Compatibility: Toptro X1 & YABER PRO U6 5G Mini DLP Portable 1080P WiFi Movie Projectors

Power Source: 1 x AAA Battery (not included)

Communication: Infrared (IR)

Color: Black

Manufacturer: SZHKHXD

Special Feature: Ergonomic design, direct replacement functionality for specified models.

WARRANTY AND SUPPORT

Warranty Information

This product is a replacement remote control. For specific warranty details, please refer to the seller's return policy or contact the seller directly. Typically, replacement parts may be covered under a limited warranty period against manufacturing defects.

Customer Support

For any questions, issues, or support inquiries regarding this remote control, please contact the seller, SZHKHXD, through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt assistance.

Note: As this is a replacement remote, comprehensive technical support for projector-specific functions should be directed to the respective projector manufacturer (Toptro or YABER).