

Easytry21808

Generic Easytry21808 Remote Control User Manual

For Majority Teton, CB238EL, ROHS CE2AV4H, and Snowdon TV Soundbar Speaker Systems

INTRODUCTION

This manual provides essential instructions for the setup and operation of your Generic Easytry21808 infrared remote control. This remote is designed as a replacement for specific Majority soundbar speaker systems, including models Teton, CB238EL, ROHS CE2AV4H, and Snowdon. Please ensure your soundbar model is listed for compatibility.

The remote control operates using infrared technology and requires batteries for functionality. No programming is typically required; the remote should function directly with compatible devices.

SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install the batteries.

1. **Locate the Battery Compartment:** Turn the remote control over to its back. The battery compartment is typically located at the bottom rear of the remote.
2. **Open the Battery Cover:** Gently slide or press the latch on the battery cover to remove it.



This image shows the rear of the remote control with the battery cover removed, revealing the battery slots.

3. **Insert Batteries:** Insert 2 AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. **Close the Battery Cover:** Replace the battery cover by sliding it back into position until it clicks securely.



This image illustrates the rear of the remote control with the battery cover securely in place.

Note: If the remote does not function after battery installation, please check the battery orientation and ensure the batteries are fresh.

OPERATING INSTRUCTIONS

This remote control is designed for intuitive operation of your compatible Majority soundbar. Point the remote directly at the soundbar's infrared receiver for optimal performance. The maximum effective range is approximately 8 meters.



This image displays the front face of the remote control, showing all buttons and their labels.

Key functions include:

- **Power Button** (●): Turns the soundbar on or off.
- **Mute Button** (⏸): Mutes or unmutes the sound.
- **Input Button**: Cycles through available audio input sources (e.g., Bluetooth, Optical, AUX).
- **Volume Up (VOL+)**: Increases the soundbar's volume.
- **Volume Down (VOL-)**: Decreases the soundbar's volume.
- **Play/Pause Button** (▶ ||): Plays or pauses media playback.
- **Previous Track Button** (◀◀): Skips to the previous track.
- **Next Track Button** (▶▶): Skips to the next track.
- **Bass + / Bass -**: Adjusts the bass level.
- **TRE + / TRE -**: Adjusts the treble level.
- **PAIR Button**: Initiates Bluetooth pairing mode.
- **MUSIC / DIALOG / MOVIE Buttons**: Selects preset equalizer modes optimized for different audio content.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure the remote has fresh batteries and they are inserted with correct polarity (+/-).
 - Check for any obstructions between the remote and the soundbar's infrared receiver.
 - Verify that the remote is pointed directly at the soundbar.
 - Confirm that the soundbar is powered on.
- **Limited Range:**
 - Replace batteries with new ones.
 - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

- **Specific Functions Not Working:**

- This remote is a replacement and may not have all functions identical to your original remote. Refer to the button layout image and descriptions for available functions.
- Ensure your soundbar model is compatible with this remote.

SPECIFICATIONS

Brand	Generic
Model Name/Number	Easytry21808
Connectivity Technology	Infrared
Compatible Devices	Majority Teton, CB238EL, ROHS CE2AV4H, Snowdon TV Soundbar Speaker Systems
Maximum Range	8 Meters
Number of Batteries	2 AAA (<i>Note: Product specifications provided conflicting information; 2 AAA batteries are indicated by the physical remote image.</i>)
Color	Black
Special Feature	Ergonomic design, Not for Gen 1 soundbars

WARRANTY INFORMATION

This product comes with a 90-day warranty. For any issues within this period, hassle-free returns are available. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or inquiries regarding your Generic Easytry21808 remote control, please contact the manufacturer, SZHKHXD, or your retailer. Ensure you have your product model number (Easytry21808) available when seeking support.