

[Manuals.plus](#) /

› [OXO](#) /

› OXO Brew Conical Burr Grinder Model 8722600 Instruction Manual

OXO 8722600

OXO Brew Conical Burr Grinder

Model: 8722600

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your OXO Brew Conical Burr Grinder. Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or grinder body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact OXO Customer Service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure hopper is securely locked in place before operating.

PRODUCT OVERVIEW

The OXO Brew Conical Burr Grinder is designed to provide consistent, uniform coffee grounds for various brewing methods. It features durable stainless steel conical burrs and multiple grind settings.



The OXO Brew Conical Burr Grinder in Matte Black, showcasing its sleek design and bean hopper.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present: grinder base, bean hopper with lid, and grounds container with lid.
2. **Positioning the Hopper:** Place the bean hopper onto the grinder base. Rotate the hopper clockwise until it locks securely into position. The hopper features a UV-blocking tint to help preserve bean freshness.



UV-tinted hopper

Blocks light to help keep beans fresh and flavorful

The UV-tinted hopper, designed to protect coffee beans from light exposure.

3. **Installing the Grounds Container:** Slide the grounds container into its designated slot at the front of the grinder base. Ensure it is seated firmly. The container is designed to reduce static cling.



Static-fighting container

Reduces static, preventing mess

The static-fighting grounds container, which minimizes mess during coffee dispensing.

4. **Power Connection:** Plug the grinder into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

1. **Fill the Bean Hopper:** Open the hopper lid and pour whole coffee beans into the hopper. The hopper can hold up to 12 ounces of coffee beans. Close the lid securely.



Hopper holds 12 oz of beans

Grind more beans with fewer refills

Filling the bean hopper with whole coffee beans. The hopper has a 12 oz capacity.

2. **Select Grind Size:** Rotate the bean hopper to adjust the grind size. The grinder offers 15 main settings, from 'Fine' for espresso to 'Coarse' for French press, with additional micro-settings in between. Align the desired setting with the indicator.



Classic matte black

A compact grinder that looks great on any counter

Adjusting the grind size dial to select the desired fineness for coffee grounds.

3. **Set Grinding Time:** Use the timer dial on the front of the grinder to select the desired grinding duration, from 0 to 30 seconds. The grinder will remember your last setting for convenience.
4. **Start Grinding:** Press the OXO button in the center of the timer dial to begin grinding. The grinder will automatically stop once the set time has elapsed.
5. **Remove Grounds:** Once grinding is complete, carefully remove the grounds container from the grinder. The trap door on the hopper prevents beans from spilling when the hopper is removed.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug Before Cleaning:** Always unplug the grinder from the power outlet before cleaning.
2. **Empty Grounds Container:** Remove the grounds container and discard any remaining coffee grounds. Wash the container and its lid with warm, soapy water, then rinse and dry thoroughly.
3. **Clean the Burrs:**
 - Remove the bean hopper by rotating it counter-clockwise and lifting it off.

- Lift the upper burr assembly out by its metal handle.
- Use a brush (a small stiff brush is often included or recommended) to clean any coffee residue from both the upper and lower stainless steel conical burrs.



Durable stainless steel burrs

Uniform grounds, better flavor, every time

A close-up view of the durable stainless steel conical burrs, essential for consistent grinding.

- Wipe the inside of the grinder where the burrs sit with a dry cloth.
 - Reinsert the upper burr assembly, ensuring it clicks into place.
 - Replace the bean hopper, rotating it clockwise until it locks.
4. **Clean the Hopper:** The bean hopper can be wiped clean with a damp cloth. Ensure it is completely dry before reattaching. The removable design facilitates easy cleaning.



Removable hopper

Lifts out easily for quick and simple cleaning

The removable hopper, shown detached from the grinder for easy cleaning and refilling.

5. **Exterior Cleaning:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; hopper not locked; power outage.	Ensure power cord is securely plugged in. Rotate hopper clockwise until it locks. Check household circuit breaker.
Inconsistent grind.	Burrs are dirty or clogged; incorrect grind setting.	Clean burrs thoroughly as per Maintenance section. Adjust grind setting to a finer or coarser option.
Excessive static cling of grounds.	Dry air conditions; very fresh beans.	The grounds container is designed to minimize static. If static persists, try letting the grounds rest in the container for a few minutes before transferring.

Problem	Possible Cause	Solution
Grounds container vibrates out during grinding.	Container not properly seated.	Ensure the grounds container is pushed fully back and gently twisted side-to-side to ensure it is securely seated in its position before starting the grinder.
Grinder makes unusual noise.	Foreign object in burrs; burrs clogged.	Unplug the grinder. Remove hopper and burrs to inspect for foreign objects. Clean burrs thoroughly.
Power plug incompatibility (for international users).	Product purchased in a region with different electrical standards.	This product is designed for 120V outlets. Using adapters or converters not specified for this appliance may void warranty and pose safety risks. Consult a qualified electrician for appropriate solutions if necessary.

SPECIFICATIONS

- **Model:** 8722600
- **Brand:** OXO
- **Color:** Matte Black
- **Burr Type:** Stainless Steel Conical Burrs
- **Grind Settings:** 15 (plus micro-settings)
- **Hopper Capacity:** 12 ounces (0.75 pounds)
- **Voltage:** 120 Volts
- **Product Dimensions:** 7.5"L x 5.3"W x 12.9"H
- **Item Weight:** 4.47 pounds
- **UPC:** 840097786193

12.8 in
32.5 cm



7.75 in
19.6 cm

5.3 in
13.6 cm

Product dimensions: 12.8 inches (32.5 cm) height, 7.75 inches (19.6 cm) length, 5.3 inches (13.6 cm) width.

WARRANTY AND SUPPORT

OXO products are designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official OXO website. Keep your purchase receipt as proof of purchase.

For customer support, product registration, or to inquire about replacement parts, please visit the [OXO Store](#) or contact OXO customer service directly through their official channels.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM9Z6HYF>

More documents and user manuals: <https://manuals.plus/>