

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- > [Aiwa](#) /
- > Aiwa Portable Boombox Instruction Manual

Aiwa AI7001

Aiwa Portable Boombox Instruction Manual

Model: AI7001

INTRODUCTION

The Aiwa Portable Boombox is a versatile multimedia device designed for on-the-go entertainment. It features a 7-inch LCD display, Bluetooth connectivity, FM radio, and a CD/DVD player. This manual provides detailed instructions for setting up, operating, and maintaining your boombox.



Figure 1: Front view of the Aiwa Portable Boombox.

KEY FEATURES

- **Multimedia Streaming:** HDMI input for connecting external Wi-Fi media players like Roku and Amazon Firestick, displayed on the 7-inch LCD screen.
- **Portable Design:** Operates via power adapter or 8 D batteries (not included) for flexible use anywhere.
- **Bluetooth Connectivity:** Wirelessly stream music from Bluetooth-enabled devices.

- **Multiple Playback Options:** Top-loading DVD/CD/MP3 player, Bluetooth, USB playback, Aux-in jack, HDMI input, audio/video output, and FM radio.
- **High-Quality Audio:** 3W x 2 speakers with bass function for clear sound. Includes a remote control for convenience.



Figure 2: Key features of the Aiwa Portable Boombox.

SETUP

Powering the Device

The Aiwa Portable Boombox can be powered by either the included AC power adapter or 8 D-cell batteries (not included).

1. **AC Power:** Connect the AC power adapter to the DC IN port on the back of the boombox and plug it into a standard wall outlet.
2. **Battery Power:** Open the battery compartment on the bottom of the unit. Insert 8 D-cell batteries, ensuring correct polarity. Close the battery compartment securely.



Figure 3: Rear connections for power and external devices.

aiwa

Use it wirelessly



Figure 4: Battery installation.

Antenna Setup

For optimal FM radio reception, extend the telescopic antenna located on the top of the boombox.

OPERATING INSTRUCTIONS

General Controls

Familiarize yourself with the main controls on the unit and the remote control.

- **Power Button:** Located on the top panel, press to turn the unit on or off.
- **Volume Knob:** Rotate to adjust the audio volume.
- **Bass Button:** Activates or deactivates the bass enhancement function.
- **Source Button:** Cycles through available input sources (Aux, FM, DVD/USB/HDMI).
- **Screen Button:** Toggles the LCD screen on or off.



Figure 5: Boombox with remote control.

CD/DVD Playback

1. Press the **OPEN/CLOSE** button on the top panel to open the disc compartment.
2. Carefully place a CD or DVD onto the disc tray with the label side facing up.
3. Close the disc compartment.
4. Press the **SOURCE** button until "DVD" is selected. The unit will begin playing automatically.



Play your favorite
CDs & DVDs!



Figure 6: Top-loading CD/DVD player.

Bluetooth Connectivity

1. Press the **SOURCE** button until "Bluetooth" is selected. The unit will enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), search for "AIWA Boombox" in the Bluetooth settings.
3. Select "AIWA Boombox" to pair. Once paired, you can stream audio wirelessly.

USB Playback

Insert a USB flash drive into the USB port. The unit supports MP3 and WAV audio files, JPG image files, and SWF and VOB video files. Ensure your USB drive is formatted to FAT32.

1. Insert your USB flash drive into the USB port on the top panel.
2. Press the **SOURCE** button until "USB" is selected. The unit will automatically detect and play compatible media.

The Roku logo is a white wordmark inside a purple square.

Plug in your roku &
play your favorite
content

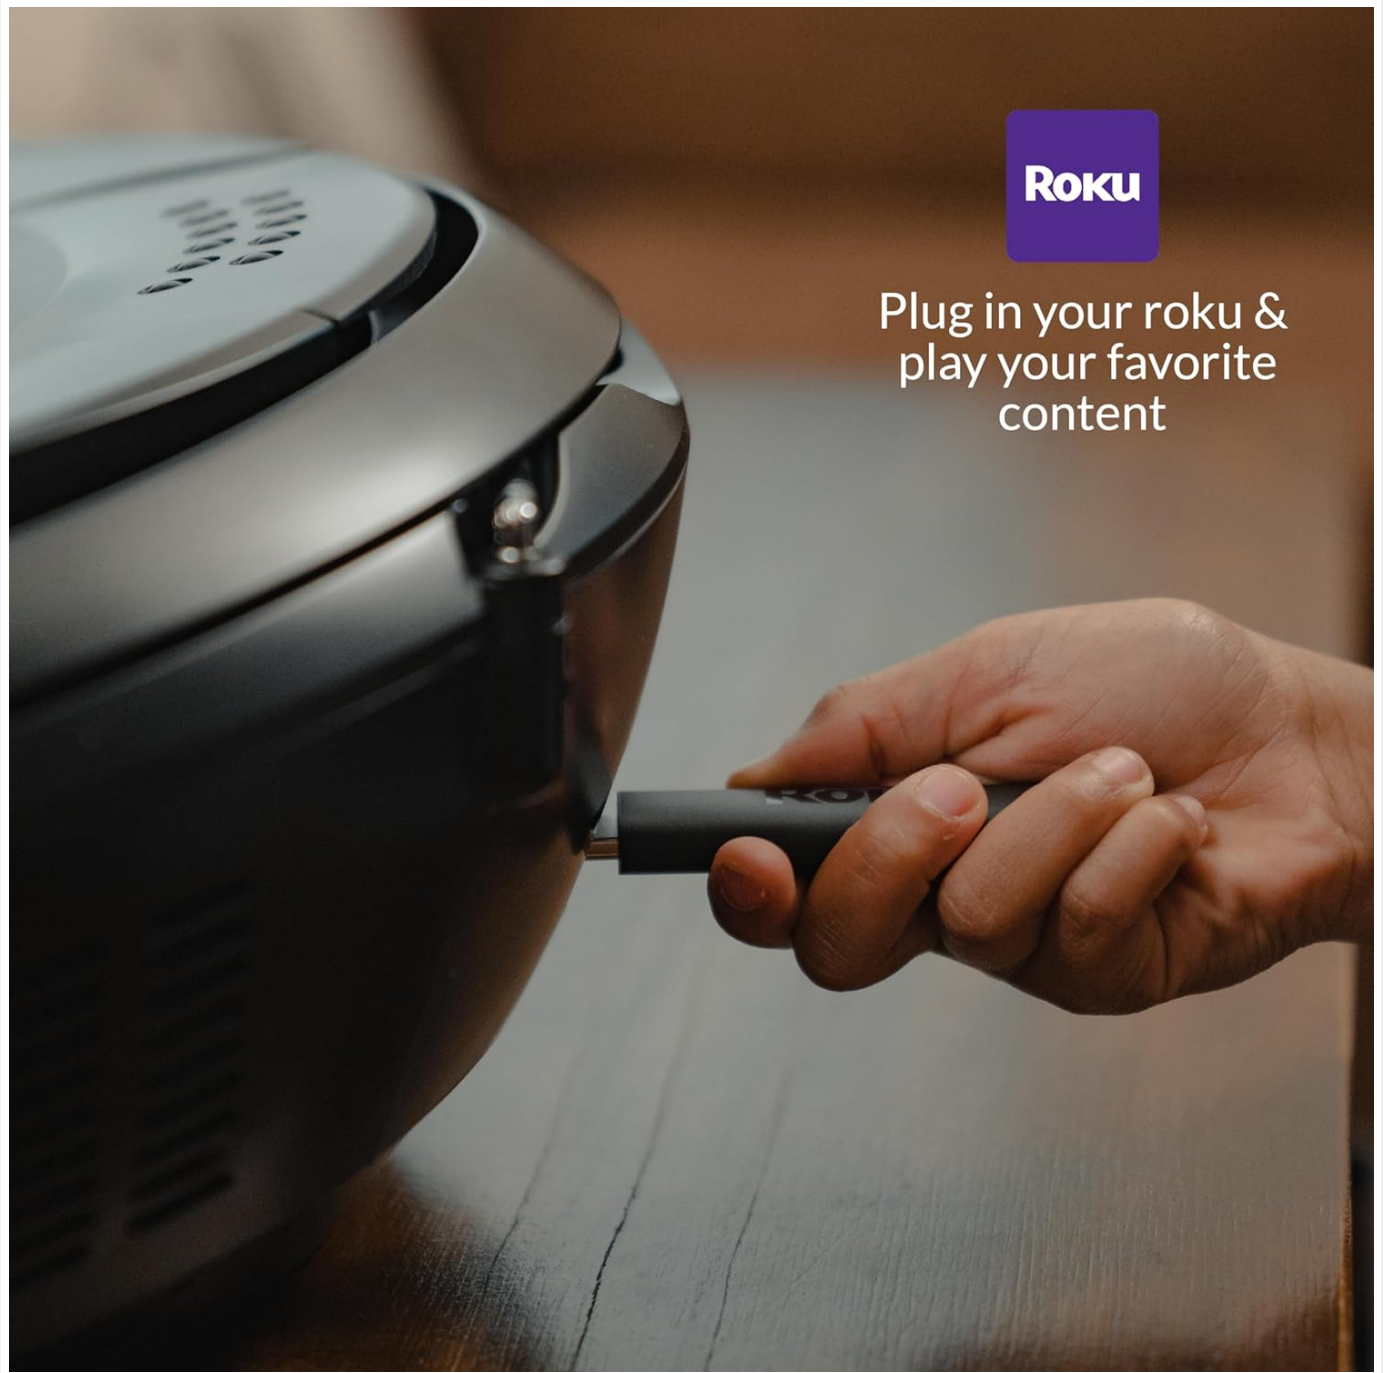


Figure 7: USB port and FM radio controls.

FM Radio

Extend the telescopic antenna for better reception.

1. Press the **SOURCE** button until "FM" is selected.
2. Use the tuning dial to manually select your desired FM radio station.

HDMI Input for Streaming

Connect external streaming devices (e.g., Roku, Amazon Firestick) or game consoles via the HDMI IN port to display content on the 7-inch LCD screen.

1. Connect your HDMI device to the HDMI IN port on the back of the boombox.
2. Press the **SOURCE** button until "HDMI" is selected.
3. Ensure your external device is powered on and configured to output to the boombox.

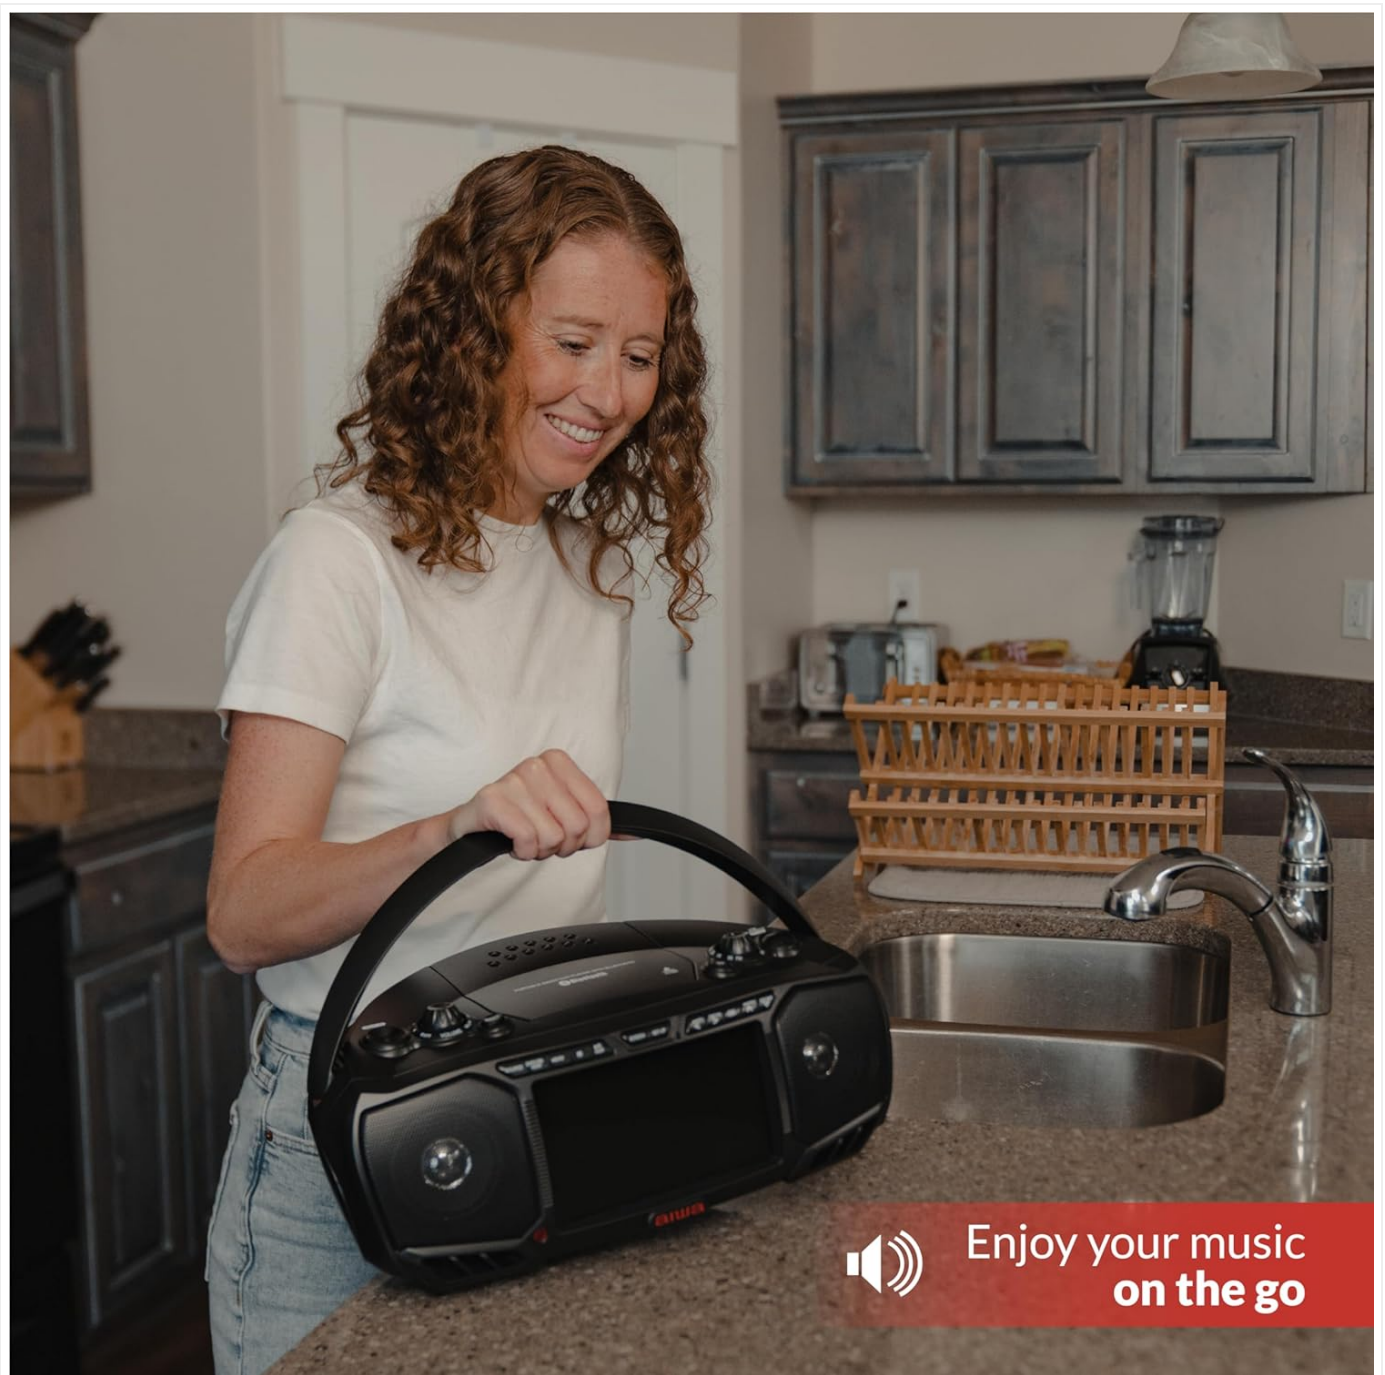


Figure 8: Connecting a streaming device via HDMI.

Audio/Video Output

The boombox features RCA audio (L/R) and composite video outputs to connect to a larger TV or external audio system.

1. Connect RCA cables (yellow for video, red for right audio, white for left audio) from the boombox's VIDEO OUT and AUDIO OUT ports to the corresponding input ports on your TV or audio system.
2. Select the appropriate input source on your external display/audio system.

Aux-in Jack

Connect external audio devices (e.g., MP3 players, smartphones) using a 3.5mm audio cable to the AUX IN jack.

1. Connect one end of a 3.5mm audio cable to the AUX IN jack on the top panel of the boombox.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the **SOURCE** button until "Aux" is selected.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the boombox. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle CDs and DVDs by their edges. Keep them clean and free of scratches.
- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected; batteries drained or incorrectly inserted.	Ensure AC adapter is securely plugged in. Replace or correctly insert D-cell batteries.
No sound	Volume too low; incorrect source selected; external device not playing.	Increase volume. Press SOURCE to select correct input. Check playback on external device.
Disc not playing	Disc inserted incorrectly; disc is dirty or scratched; unsupported disc format.	Ensure disc is clean and inserted label-side up. Try a different disc.
USB playback issues	Unsupported file format; USB drive not formatted to FAT32.	Ensure files are MP3/WAV (audio), JPG (images), or SWF/VOB (video). Format USB drive to FAT32.
Poor FM reception	Antenna not extended; weak signal.	Fully extend the telescopic antenna. Try repositioning the unit.
Screen too dark/unclear (especially for dark scenes)	Screen brightness settings; inherent screen limitations for dark content.	Adjust screen settings via the MENU/SETUP button. For optimal viewing of dark content, consider connecting to a larger external display via Video Out.

SPECIFICATIONS

Feature	Detail
Product Dimensions	15.95 x 10.63 x 7.5 inches
Item Weight	5.88 pounds
Model Number	AI7001
Power Source	AC Adapter or 8 x D Batteries (not included)
Display	7-inch LCD
Speakers	3W x 2 Stereo Speakers
Connectivity	Bluetooth, Auxiliary, Wi-Fi (via HDMI device), USB

Feature	Detail
Media Playback	CD, DVD, MP3, USB (MP3, WAV, JPG, SWF, VOB), FM Radio
Inputs	HDMI IN, AUX IN, USB
Outputs	Video Out (RCA), Audio Out (RCA)
Manufacturer	Sakar International
Country of Origin	China

OFFICIAL PRODUCT VIDEOS

Aiwa Portable Boombox Overview

Your browser does not support the video tag.

This video provides a concise overview of the Aiwa Portable Boombox, showcasing its design and primary functions. It highlights the compact nature and various media playback options.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included in your product packaging or visit the official Aiwa website. Specific warranty terms and support contacts may vary by region.

