

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Darmoshark](#) /
- › [Darmoshark TOP75 Wireless Mechanical Keyboard User Manual](#)

Darmoshark TOP75

Darmoshark TOP75 Wireless Mechanical Keyboard User Manual

Model: TOP75

INTRODUCTION

Thank you for choosing the Darmoshark TOP75 Wireless Mechanical Keyboard. This keyboard is designed for versatility and performance, offering triple-mode connectivity (2.4G, Bluetooth 5.0, and USB-C wired), a compact 75% layout, and hot-swappable switches for customization. With its durable construction and long-lasting battery, the TOP75 is suitable for both gaming and professional use across various operating systems.

This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your keyboard to ensure optimal performance and longevity.



Figure 1: Darmoshark TOP75 Wireless Mechanical Keyboard (White Version)

PACKAGE CONTENTS

- Darmoshark TOP75 Wireless Mechanical Keyboard
- USB-C Cable

- 2.4G Wireless Receiver (dongle)
- Keycap Puller
- Switch Puller
- User Manual (this document)

SETUP

Charging the Keyboard

Before first use, it is recommended to fully charge the keyboard. Connect the provided USB-C cable to the keyboard's USB-C port and the other end to a USB power source (e.g., computer USB port, wall adapter). The keyboard features a 4000mAh high-capacity battery.

Connectivity Modes

The TOP75 keyboard supports three connection modes: 2.4G wireless, Bluetooth 5.0, and USB-C wired.



Figure 2: Triple-Mode Wireless Connectivity Overview

1. 2.4G Wireless Mode

1. Locate the 2.4G wireless receiver (dongle) in the receiver storage compartment on the back of the keyboard.
2. Plug the 2.4G receiver into an available USB port on your computer.
3. Switch the mode selector on the keyboard to the "2.4G" position.
4. The keyboard should automatically connect. If not, press **Fn + 4** to initiate pairing.

2. Bluetooth 5.0 Mode

1. Switch the mode selector on the keyboard to the "BT" (Bluetooth) position.
2. To enter pairing mode, press and hold **Fn + 1**, **Fn + 2**, or **Fn + 3** for 3-5 seconds. The indicator light for the selected channel will flash rapidly.
3. On your device (computer, tablet, smartphone), enable Bluetooth and search for new devices.
4. Select "Darmoshark TOP75" from the list of available devices to pair. The indicator light will become solid once connected.
5. You can pair up to three Bluetooth devices and switch between them using **Fn + 1**, **Fn + 2**, or **Fn + 3**.

3. USB-C Wired Mode

1. Connect the USB-C cable to the keyboard's USB-C port.
2. Connect the other end of the USB-C cable to a USB port on your computer.
3. Switch the mode selector on the keyboard to the "USB-C" position.
4. The keyboard will be recognized as a standard USB HID device and is ready for use.

OPERATING INSTRUCTIONS

Function Keys (Fn Combinations)

The TOP75 keyboard utilizes an 81-key layout, which is a compact 75% layout. Many functions are accessed via the **Fn** key combined with other keys.

75% LAYOUT


75% distribution layout

It's all there in a nutshell

Keep the small numeric keypad while leaving more room for the mouse to slide around.

81KEYS

Savings of approximately 25%

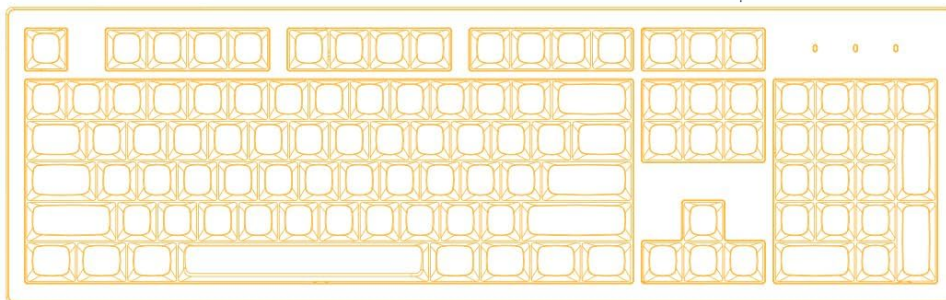

104KEYS

Figure 3: 75% Layout (81 Keys) vs. 104 Keys

Common Fn Key Combinations

Combination	Function
Fn + 1/2/3	Switch Bluetooth device (BT1, BT2, BT3)
Fn + 4	Activate 2.4G pairing mode
Fn + Delete	Toggle Gaming Mode (low latency)
Fn + F1-F12	Multimedia and system functions (e.g., volume, media control, brightness)
Fn + Backspace	Toggle backlight effects
Fn + Arrow Keys	Adjust backlight brightness and speed

Refer to the keyboard's keycaps for specific Fn key legends for multimedia and lighting controls.

Hot-Swappable Switches

The TOP75 keyboard features a full hot-swappable PCB, allowing you to easily change mechanical switches without soldering. This supports 95% of 3-pin and 5-pin mechanical switches on the market.

Hot Swap Switch

Full keyboard hot-swappable

Experience the joy of customization

All keys can be replaced with different axes, different axes bring different feeling and key sound. Choose your favorite axis, DIY your own keyboard.



Figure 4: Hot-Swappable Switch Functionality

Changing Switches:

1. Using the provided switch puller, gently grip the switch from the top and bottom.
2. Pull the switch straight up to remove it from the PCB.
3. Align the pins of the new switch with the holes on the PCB. Ensure the pins are straight.
4. Gently press the new switch down until it clicks into place. Do not force it.
5. Test the key to ensure it functions correctly.

Note: Be careful not to bend the switch pins during insertion. If a pin bends, gently straighten it with tweezers before re-inserting.

RGB Backlighting

The keyboard features customizable RGB backlighting. Use **Fn + Backspace** to cycle through various lighting effects. Use **Fn + Arrow Up/Down** to adjust brightness and **Fn + Arrow Left/Right** to adjust effect speed.

Software Support

The Darmoshark TOP75 keyboard supports dedicated software for advanced customization, including key remapping, macro creation, and detailed RGB lighting control. Please visit the official Darmoshark website to download the latest software for your operating system (Windows 10/11 compatible).

MAINTENANCE

Cleaning the Keyboard

- **General Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and keyboard frame. Avoid excessive moisture.
- **Dust Removal:** Use compressed air to blow away dust and debris from between the keycaps.
- **Deep Cleaning (Keycaps):** For thorough cleaning, you can remove the keycaps using the provided keycap puller. Wash keycaps with mild soap and water, rinse thoroughly, and ensure they are completely dry before reattaching.

Battery Care

- Avoid fully discharging the battery frequently.
- Store the keyboard in a cool, dry place if not used for extended periods.
- Use only the provided USB-C cable or a certified equivalent for charging.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause / Solution
Keyboard not responding in wireless mode.	<ul style="list-style-type: none">◦ Ensure the keyboard is charged.◦ Check if the mode selector is set to the correct wireless mode (2.4G or BT).◦ For 2.4G: Ensure the dongle is securely plugged in and try a different USB port. Re-pair by pressing Fn + 4.◦ For Bluetooth: Ensure Bluetooth is enabled on your device. Re-pair by holding Fn + 1/2/3.◦ Try switching to wired mode to confirm keyboard functionality.
Keys not registering or double-typing.	<ul style="list-style-type: none">◦ The switch might be faulty or not seated correctly. Use the switch puller to remove and re-insert the switch firmly.◦ Try swapping the problematic switch with a known working switch to diagnose.◦ Clean any debris under the keycap or around the switch stem.

Problem	Possible Cause / Solution
Backlight not working or stuck.	<ul style="list-style-type: none"> ◦ Ensure the keyboard is charged. ◦ Press Fn + Backspace to cycle through lighting modes. ◦ Adjust brightness with Fn + Arrow Up/Down. ◦ If using software, check lighting settings there.
Bluetooth connection unstable.	<ul style="list-style-type: none"> ◦ Ensure no strong interference sources (e.g., Wi-Fi routers, other Bluetooth devices) are too close. ◦ Move closer to your device. ◦ Forget the device on your computer/phone and re-pair. ◦ Ensure keyboard battery is not critically low.

SPECIFICATIONS

Feature	Detail
Model	TOP75
Brand	Darmoshark
Layout	75% (81 Keys)
Connectivity	Triple Mode: 2.4G Wireless, Bluetooth 5.0, USB-C Wired
Switches	Hot-swappable (supports 3-pin/5-pin mechanical switches)
Battery Capacity	4000mAh Lithium Ion
Backlighting	RGB
Operating System Support	WinXP/Win7/Win8/Win10/Win11/MacOS
Dimensions (Approx.)	335mm (Length) x 146mm (Width)
Weight	1.68 kg
Special Features	Gasket Frame Design, Low Latency Gaming Mode, Software Support



Figure 5: Keyboard Dimensions

WARRANTY AND SUPPORT

Warranty Information

Darmoshark products come with a **1-year worry-free warranty** from the date of purchase. Additionally, a **30-day refund policy** is offered. This warranty covers manufacturing defects and issues arising from normal use.

The warranty does not cover damage caused by:

- Accidental damage, misuse, abuse, or neglect.
- Unauthorized repairs or modifications.
- Operating the product outside of its specified parameters.

Customer Support

For technical support, warranty claims, or any inquiries regarding your Darmoshark TOP75 keyboard, please contact Darmoshark customer service through their official website or the retailer where you purchased the product. Please have your proof of purchase and product model information ready when contacting support.