

[Manuals.plus](#) /

› [Gudsunal](#) /

› Gudsunal Electric Cooktop 12 Inch User Manual

## Gudsunal C3006B-1

# Gudsunal Electric Cooktop User Manual

Model: C3006B-1

## 1. INTRODUCTION

---

Thank you for choosing the Gudsunal Electric Cooktop. This manual provides important information for the safe and efficient operation of your appliance. Please read it thoroughly before use and keep it for future reference.

The Gudsunal 12-inch, 2-burner portable electric cooktop is designed for versatile cooking, featuring a durable tempered glass surface, touch controls, and essential safety features. It operates on 110V and is suitable for various kitchen setups, including built-in or countertop use.



Image: Gudsunal Electric Cooktop. This image displays the overall design of the Gudsunal 12-inch, 2-burner portable electric cooktop, highlighting its compact size and integrated power plug.

## 2. SAFETY INFORMATION

**WARNING:** To reduce the risk of fire, electric shock, or injury, read and follow all instructions and warnings carefully before operating this appliance.

- Ensure the cooktop is placed on a stable, heat-resistant surface.
- Do not immerse the cooktop in water or any other liquid.
- Keep children away from the appliance during operation and when it is cooling down.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This cooktop features a **Child Lock**, **Hot Surface Indicator**, and **Auto Shutdown** for enhanced safety. Always be aware of these features.

## Multiple Safety Protection



Image: Multiple Safety Protection. This image illustrates the key safety features of the Gudsunal Electric Cooktop, including Child Lock, Hot

Surface Indicator, and Auto Shutdown, designed to prevent accidents during operation.

### 3. PRODUCT FEATURES

---

- **Dual Burners:** Features a 1400-watt burner and a 600-watt burner, operating at 110 volts.
- **Touch Control Panel:** Minimalist operation with precise 9-level heat control and a timer function.
- **Versatile Cooking:** The 1400W burner is suitable for searing, boiling, simmering, deep frying, sautéing, and grilling. The 600W burner is ideal for reheating, slow cooking, keeping food warm, melting chocolate, and preparing delicate sauces.
- **Tempered Glass Surface:** Easy to clean and durable.
- **Safety Features:** Includes Child Lock, Hot Surface Indicator, and Auto Shutdown.
- **Two Installation Options:** Can be installed built-in or used as a portable countertop unit.
- **Compatibility:** Compatible with various cookware types including enameled iron and steel, stainless steel with a magnetic base, cast iron, carbon steel, copper, glass, aluminum, and pottery type vessels.

# Touch Panel for Minimalist Operation



Image: Touch Panel for Minimalist Operation. This image highlights the intuitive touch control panel of the cooktop, showing icons for timer, cooker reminder, precision shutdown, and +/- for precise 1-9 heat control.

# Compatible with All Cookware




Image: Compatible with All Cookware. This image displays the versatility of the cooktop, indicating its compatibility with a wide range of cookware materials such as enameled iron, stainless steel, cast iron, carbon steel, copper, glass, aluminum, and pottery.

## 4. SETUP AND INSTALLATION


### 4.1 Unpacking

Carefully remove the cooktop and all accessories from the packaging. Inspect for any damage. Keep packaging materials for future transport if needed.

# What's In The Box

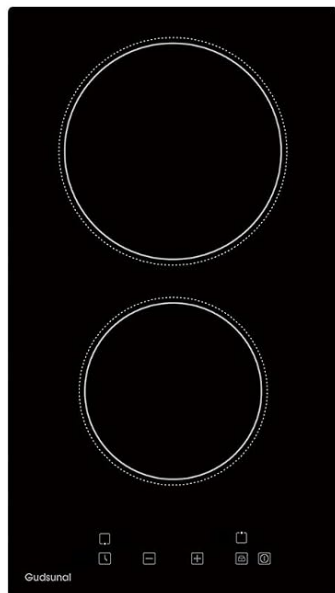

Cooktop

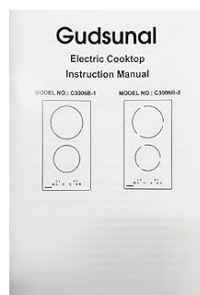

User manual



Cut-out Size Board



Safety Tips



Seal Tapex1



Installation Kits



Rubber Foot \*4

Image: What's In The Box. This image details the items included with the Gudsunal Electric Cooktop: the cooktop unit, user manual, cut-out size board, safety tips, seal tape, installation kits, and four rubber feet.

## 4.2 Installation Options

The Gudsunal Electric Cooktop offers two installation methods: built-in or countertop placement.

## Two Installation Options



Image: Two Installation Options. This image visually demonstrates how the cooktop can be installed either as a built-in unit flush with the countertop or placed directly on top of the countertop as a portable appliance.

### 4.2.1 Built-in Installation

For built-in installation, ensure your countertop has a suitable cut-out. Refer to the dimensions below:

- **Product Size:** 20 1/2" D x 11 1/2" W x 2" H (52.07 x 29.21 x 5.08 cm)
- **Cut-out Size:** 19 3/8" D x 10 5/8" W (approx. 49.21 cm D x 26.99 cm W)

## Built-in Size



Image: Built-in Size. This diagram provides precise measurements for built-in installation, detailing the overall product dimensions and the required cut-out size for the countertop.

Use the provided installation kits and seal tape to secure the cooktop in place. Ensure adequate ventilation around the appliance.

### 4.2.2 Countertop Placement

For countertop use, simply place the cooktop on a flat, stable, and heat-resistant surface. Attach the provided rubber feet to the bottom of the unit to prevent slipping and protect the countertop.

### 4.3 Electrical Connection

The cooktop operates on 110V and comes with a plug. Connect the cooktop directly to a grounded 110V electrical outlet. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On/Off

Plug the cooktop into a suitable 110V outlet. The LED display will illuminate. Press the power button to turn the cooktop on. Press again to turn off.

## 5.2 Selecting a Burner and Adjusting Heat

Each burner has its own touch controls. Select the desired burner. Use the '+' and '-' touch buttons to adjust the heat level from 1 to 9. Level 9 is the highest heat setting.

- **1400W Burner:** Ideal for high-heat cooking such as searing, boiling, and grilling.
- **600W Burner:** Suitable for low-heat tasks like simmering, keeping food warm, and melting delicate ingredients.

## 5.3 Using the Timer Function

The cooktop features a timer function for precise cooking control. Press the timer button, then use the '+' and '-' buttons to set the desired cooking time. The cooktop will automatically shut down once the timer expires.

## 5.4 Safety Features in Operation

- **Child Lock:** Activate the child lock to prevent accidental operation. Refer to the specific icon on the control panel.
- **Hot Surface Indicator:** An indicator light will remain on after use until the cooktop surface has cooled down to a safe temperature.
- **Auto Shutdown:** The cooktop will automatically shut down if left unattended for an extended period or if overheating is detected.

# 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Gudsunal Electric Cooktop.

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the tempered glass surface with a soft cloth and a mild detergent. For stubborn stains, use a ceramic cooktop cleaner.
- Do not use abrasive cleaners, scouring pads, or sharp objects, as these can scratch or damage the glass surface.
- Clean the control panel with a damp cloth. Ensure no liquid enters the control area.
- Periodically check the ventilation holes for any blockages and clean them if necessary to ensure proper airflow.

# 7. TROUBLESHOOTING

| Problem                         | Possible Cause                                                        | Solution                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Cooktop does not turn on.       | Not plugged in; power outage; child lock activated.                   | Ensure plug is securely in outlet; check household circuit breaker; deactivate child lock.                         |
| Burner not heating.             | Incorrect heat setting; cookware not compatible or improperly placed. | Increase heat setting; ensure cookware is flat-bottomed and centered on the burner; verify cookware compatibility. |
| Cooktop shuts off unexpectedly. | Overheating protection activated; auto shutdown timer expired.        | Allow cooktop to cool down; check for proper ventilation; reset timer if applicable.                               |

| Problem                     | Possible Cause                           | Solution                                                          |
|-----------------------------|------------------------------------------|-------------------------------------------------------------------|
| Control panel unresponsive. | Child lock activated; moisture on panel. | Deactivate child lock; wipe control panel dry with a clean cloth. |

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

- Brand:** Gudsunal
- Model Number:** C3006B-1
- Product Dimensions:** 20 1/2" D x 11 1/2" W x 2" H (52.07 x 29.21 x 5.08 cm)
- Weight:** 4.3 kg
- Heating Elements:** 2 (1400W, 600W)
- Power Source:** Corded Electric, 110V
- Material:** Glass Ceramic
- Burner Type:** Radiant
- Control Type:** Touch Control Panel
- Special Features:** Indicator Light, Portable, Child Lock, Hot Surface Indicator, Auto Shutdown, Timer Function

## 9. WARRANTY AND SUPPORT

Gudsunal products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Gudsunal website. Please have your model number (C3006B-1) and purchase date ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0CMCYCRH2>

More documents and user manuals: <https://manuals.plus/>