

[Manuals.plus](#) /

> [GROBELL](#) /

> GROBELL Steam Cleaner User Manual

GROBELL GB-150STEAM

GROBELL Steam Cleaner User Manual

Model: GB-150STEAM / Swift Vapore

1. INTRODUCTION

Thank you for choosing the GROBELL Steam Cleaner. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new steam cleaner. Please read this manual thoroughly before first use and retain it for future reference. This powerful and versatile steam cleaner is designed for chemical-free cleaning and sanitization across various surfaces in your home and vehicle.

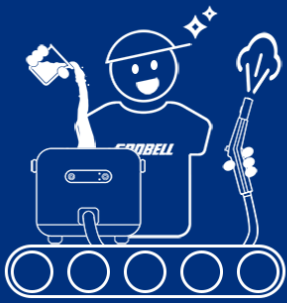


Image: The GROBELL Steam Cleaner with its main unit, mop head, handheld nozzle, and various attachments.

2. SAFETY INFORMATION

WARNING: Steam is extremely hot and can cause severe burns. Always exercise caution when operating the steam cleaner.


- Do not direct steam at people, pets, or electrical appliances.
- Ensure the appliance is unplugged before filling, emptying, or cleaning.
- Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank.
- Keep out of reach of children.
- Always wear the provided insulation glove when handling hot attachments or surfaces.
- The steam temperature decays over distance. For optimal cleaning and safety, maintain a close distance (less than 1 inch) for high temperature and pressure. Avoid touching surfaces immediately after steaming.




We have functionally tested every device to ensure compliance with the technical standards, therefore you will find **SOME WATER** in the tank. Your device is **BRAND NEW**, please feel free to use!

Main advantages over other products:

- Fast heating in 50 seconds.
- Temperature visualization of the heating process.
- Refill water at any time, no need to wait (since the water remains cold in the tank during the working period, it can be refilled at any time).

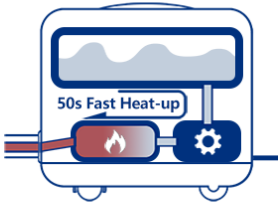



If you have any issue in the subsequent use, please feel free to contact our customer service team. We will solve the problem within **24 HOURS** and provide a **1-YEAR WARRANTY!**

Copyright © 2021 Grobell USA INC. All rights reserved.

Image: Diagram illustrating how steam temperature decreases with distance from the nozzle.

3. PRODUCT OVERVIEW

3.1 Components and Accessories

Your GROBELL Steam Cleaner comes with a comprehensive 21-piece accessory kit to tackle various cleaning tasks.



Image: A visual guide to the various components and accessories included with the steam cleaner.

- **Main Unit:** The core steam generator with a 2.2-liter (0.6 Gallon) water tank and control panel.
- **Detachable Hose:** Connects the main unit to the handheld nozzle, allowing for flexible movement.
- **Handheld Nozzle:** The primary steam output device, to which various brushes and tools attach.
- **Mop Head:** For cleaning and sanitizing floors. Use with microfiber pads.
- **Extension Tubes:** Two tubes to extend the reach of the mop head or other accessories for floor or high-surface cleaning.
- **Squeegee:** Ideal for cleaning glass, mirrors, and smooth surfaces.

- **Triangular Brush:** For cleaning and sanitizing various surfaces, often used with a bonnet.
- **Round Brushes:** Includes nylon and brass brushes for scrubbing tough stains and grout.
- **Microfiber Pads:** Multiple pads for use with the mop head or for wiping softened stains.
- **Bonnet:** A cloth cover for the triangular brush to collect dust and debris.
- **Insulation Glove:** For protection when handling hot components.
- **Storage Bag:** For organizing and storing accessories.

3.2 Key Features

- **Fast Heat-up:** Ready for use in approximately 50 seconds.
- **Large Capacity Tank:** 2.2 liters (0.6 Gallons) for extended cleaning sessions without frequent refills.
- **Continuous Refill:** Water can be refilled at any time during operation, as the tank remains cold.
- **Switchable Dry & Wet Functions:** Allows adjustment of steam output for different cleaning needs.
- **High Temperature Sanitization:** Steam reaches over 255°F for effective cleaning and sanitization.
- **Portable and Compact Design:** Easy to move and store.



Image: Summary of key features including fast heat-up, large tank, and adjustable steam modes.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Assemble Hose:** Connect the detachable hose to the main unit by aligning the connectors and twisting until secure.
3. **Attach Nozzle/Mop Head:** Depending on your cleaning task, attach the handheld nozzle or the mop head to the end of the hose. For floor cleaning, connect the extension tubes between the hose and the mop head.
4. **Fill Water Tank:** Open the water tank cap. Using a measuring cup or directly from a tap, fill the tank with clean tap water up to the MAX fill line. Do not overfill. Securely close the cap.



Image: Illustration of the steam cleaner's internal water flow and heating process.

5. OPERATING INSTRUCTIONS

- Power On:** Plug the power cord into a grounded electrical outlet. Press the power button on the main unit. The indicator light will illuminate, and the unit will begin heating.
- Heat-up Time:** The steam cleaner will be ready for use in approximately 50 seconds. The display will show the temperature.
- Select Steam Mode:** Use the controls on the handheld nozzle or main unit to select between 'Dry' and 'Wet' steam modes. 'Dry' mode provides less moisture, while 'Wet' mode provides more steam for tougher jobs.
- Begin Cleaning:** Direct the steam nozzle or mop head towards the surface to be cleaned. Press the steam trigger to release steam. Move the cleaner slowly over the surface.
- Using Attachments:**
 - **Mop Head:** Attach a microfiber pad. Ideal for sealed hard floors (tile, hardwood, laminate).
 - **Handheld Nozzle with Bonnet/Triangular Brush:** Excellent for upholstery, mattresses, and delicate surfaces.
 - **Round Brushes:** Use nylon brushes for general scrubbing and brass brushes for very stubborn dirt on durable surfaces like grout lines.
 - **Squeegee:** Attach to the handheld nozzle for streak-free cleaning of windows and mirrors.
- Refilling During Operation:** If the water level is low, you can safely refill the tank at any time without waiting for the unit to cool down.
- Post-Cleaning:** For surfaces that may retain excess moisture (e.g., floors, car interiors), wipe with a clean, dry cloth after steaming. For initial steam bursts, direct the nozzle into a bucket to clear condensation before applying to the cleaning surface.



Chemical-Free Sterilization
No Waiting for Water Refill (No Vacuum Function)

Image: The steam cleaner in use on a hardwood floor, demonstrating chemical-free sterilization.



Switchable Dry & Wet Functions

Image: Demonstrating the switchable dry and wet functions on a kitchen countertop.



Image: Examples of the steam cleaner's versatility on various surfaces including toys, tiles, wallpaper, and car interiors.

6. MAINTENANCE

1. **Empty Water Tank:** After each use, unplug the unit and allow it to cool. Carefully open the water tank cap and drain any remaining water.
2. **Clean Accessories:** Wash microfiber pads and bonnets with mild detergent and air dry. Clean brushes and other attachments with water and a soft cloth.
3. **Wipe Down Unit:** Wipe the exterior of the main unit and hose with a damp cloth. Do not use abrasive cleaners.
4. **Descaling (Periodic):** If you notice reduced steam output or mineral buildup, descaling may be necessary. Consult the manufacturer's website or customer support for specific descaling instructions.
5. **Storage:** Store the steam cleaner and all accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided storage bag for accessories.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank empty; Unit not heated sufficiently; Mineral buildup.	Refill water tank; Wait for 50 seconds heat-up; Perform descaling.
Excessive water output (not pure steam).	Condensation buildup in hose; 'Wet' mode selected for delicate surfaces.	Direct initial steam burst into a bucket to clear condensation; Switch to 'Dry' mode for less moisture.

Problem	Possible Cause	Solution
Unit not turning on.	Not plugged in; Power button not pressed.	Ensure power cord is securely plugged into a working outlet; Press the power button firmly.
Steam is not hot enough.	Unit not fully heated; Too far from surface.	Allow full heat-up time; Keep nozzle close to the cleaning surface (within 1 inch).

8. SPECIFICATIONS

Feature	Specification
Brand	GROBELL
Model Number	GB-150STEAM
Model Name	Swift Vapore
Colour	Bright White
Product Dimensions	24 x 24 x 22 cm (9.4 x 9.4 x 8.7 inches)
Item Weight	1.81 kg (4 Pounds)
Capacity	2.2 liters (0.6 Gallons)
Power/Wattage	1650 watts
Voltage	120 Volts (AC)
Heat-up Time	Approx. 50 seconds
Steam Pressure	60 psi (approximate)
Surface Recommendation	Hard Floor, Upholstery
Form Factor	Canister


9. WARRANTY AND SUPPORT

GROBELL provides a **1-YEAR WARRANTY** for this product. We have functionally tested every device to ensure compliance with technical standards; therefore, you may find some water in the tank upon arrival. This is normal and indicates a brand new, tested device.

If you encounter any issues during subsequent use, please do not hesitate to contact our customer service team. We are committed to resolving your problem within **24 HOURS**.

For support, please visit the GROBELL Store on Amazon or refer to the contact information provided with your purchase.

The Steam Works Look Like:

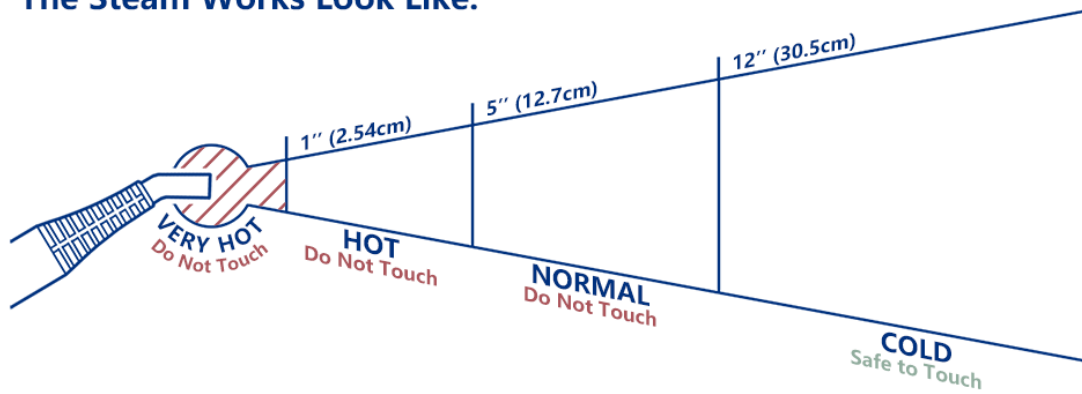

The Steam Temperature Decays Over Distance Gradually!

For distance < 1", the steam will have high temperature & pressure for optimal cleaning!

Conversely, for distance > 1", the steam cleaning effect will gradually decrease due to the decrease in temperature and pressure!

Copyright © 2021 Grobell USA INC. All rights reserved.

Image: Information regarding fast heating, water refill, and 1-year warranty with 24-hour customer support.