



Manuals.plus /

- › 3-Link /
- › 3-Link TB1 Wireless Outdoor Security Camera User Manual

3-Link TB1

3-Link TB1 Wireless Outdoor Security Camera User Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your 3-Link TB1 Wireless Outdoor Security Camera. Please read this manual thoroughly before using the product to ensure proper function and safety. This camera is designed for outdoor home security, featuring motion detection, a spotlight, siren, and compatibility with Alexa.



Image: The 3-Link TB1 Wireless Outdoor Security Camera, a white bullet-style camera with a wall mount, featuring a lens, four LED lights, and a blue indicator light.

WHAT'S IN THE BOX

Verify that all components are present in the package:

- 3-Link TB1 Wireless Outdoor Security Camera
- Wall Mount
- Power Cable

PRODUCT OVERVIEW

The 3-Link TB1 is a battery-powered wireless outdoor security camera designed for comprehensive home surveillance. Key features include:

- **1080p HD Resolution:** Provides clear video footage.
- **Two-Way Audio:** Allows for communication through the camera.

- **Night Vision:** Infrared LEDs enable monitoring in low-light conditions up to 30 feet.
- **Motion Sensor:** Detects movement and triggers recording and alerts.
- **Spotlight & Siren:** Integrated for deterrence and enhanced visibility.
- **2.4GHz Wi-Fi Connectivity:** For wireless connection to your home network.
- **Battery Powered:** Operates on included Lithium Ion batteries.
- **Alexa Compatible:** Integrates with Amazon Alexa for voice control and smart home features.
- **Storage Options:** Supports both SD card local recording and cloud storage.



Image: An illustration highlighting the camera's features: Rechargeable Battery, Solar Panel compatibility (sold separately), 2.4GHz Wi-Fi, and Free Cloud storage.

SETUP

1. Initial Charging

Before first use, fully charge the camera using the provided power cable. Connect the cable to the camera's charging port and a standard USB power adapter (not included). The charging indicator light will show the charging status.

2. App Download and Account Creation

Download the compatible mobile application (refer to product packaging or quick start guide for app name) from your device's app store (iOS or Android). Create an account and log in.

3. Camera Pairing

1. Open the app and select 'Add Device' or the '+' icon.
2. Follow the on-screen instructions to power on the camera and enter pairing mode.
3. Connect the camera to your 2.4GHz Wi-Fi network. Ensure your mobile device is also connected to the same 2.4GHz network during setup. 5GHz Wi-Fi is not supported.
4. Scan the QR code displayed on your phone with the camera lens, or follow alternative pairing methods if prompted.

5. Once connected, name your camera and complete the setup process.

4. Mounting the Camera

Choose a suitable outdoor location for mounting, ensuring a clear view and strong Wi-Fi signal. Use the provided wall mount and screws to securely attach the camera. Adjust the camera angle for optimal coverage.



Image: The 3-Link TB1 camera mounted on a wall, connected to an optional solar panel for continuous charging.

OPERATING

Motion Detection and Alerts

Configure motion detection sensitivity and alert settings within the app. You can set detection zones and schedule monitoring times to reduce false alarms. When motion is detected, the camera can record footage, activate the spotlight, sound the siren, and send notifications to your mobile device.

Live View and Two-Way Audio

Access the live video feed through the app at any time. Use the microphone and speaker icons in the app to enable two-way audio, allowing you to listen and speak through the camera.

Spotlight and Siren Activation

Manually activate the integrated spotlight and siren through the app for immediate deterrence or illumination. These features can also be configured to activate automatically upon motion detection.

Video Storage

The camera supports two storage methods for recorded footage:

- **SD Card Storage:** Insert a compatible microSD card (not included) into the camera's designated slot for local storage of recordings.
- **Cloud Storage:** The camera offers cloud storage options for recorded clips. Refer to the app for details on available plans and features.

No Month Fee

Free cloud storage with 24 hours
loop cloud recording & SD card compatible




Image: An illustration showing cloud storage and an SD card, representing the dual storage options available for the camera.

Alexa Compatibility

To integrate with Amazon Alexa, enable the 3-Link skill in the Alexa app and link your camera account. You can then use voice commands to view live feeds on compatible Alexa devices.

Sharing Camera Access

The mobile application allows you to share access to your camera's live feed and recordings with family members or trusted individuals. This feature is managed through the app's user management settings.

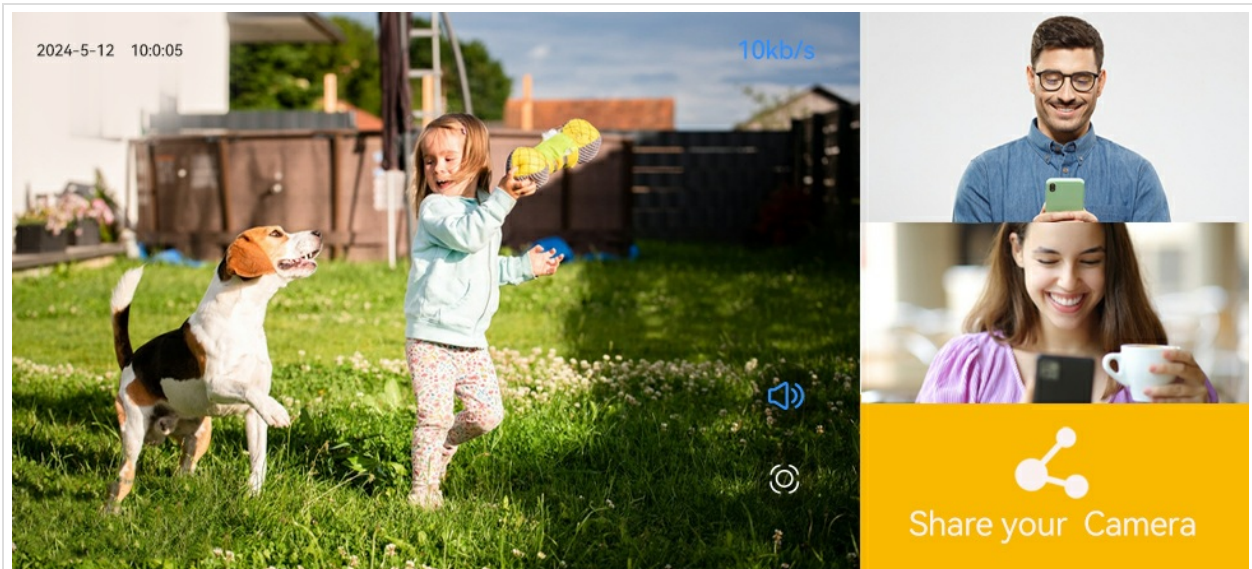

Share Camera

Share funny moments with your family

Image: A visual representation of the camera sharing feature, showing a live feed being viewed by multiple users on their mobile devices.

MAINTENANCE

Battery Management

Monitor the battery level through the app. Recharge the camera when the battery is low to ensure continuous operation. Battery life varies based on usage, motion detection frequency, and environmental conditions.

Cleaning

Periodically clean the camera lens and housing with a soft, damp cloth to remove dirt, dust, or debris that may obstruct the view or affect performance. Do not use harsh chemicals.

Firmware Updates

Ensure your camera's firmware is up to date. The app will typically notify you of available updates. Follow the in-app instructions to perform firmware upgrades, which can improve performance and add new features.

TROUBLESHOOTING

- **Camera Not Connecting to Wi-Fi:** Ensure your Wi-Fi network is 2.4GHz. Check Wi-Fi signal strength at the camera's location. Restart your router and the camera.
- **Poor Video Quality:** Check your Wi-Fi connection speed. Clean the camera lens. Ensure there are no obstructions.
- **Motion Detection Issues:** Adjust sensitivity settings in the app. Ensure detection zones are correctly configured. Avoid placing the camera where frequent, non-threatening motion (e.g., tree branches) might trigger false alerts.
- **Short Battery Life:** Frequent motion detection, live view access, and spotlight/siren activation consume more battery. Consider reducing sensitivity or using an optional solar panel for continuous charging.
- **App Notifications Not Received:** Check your phone's notification settings for the app. Ensure the app has necessary permissions. Verify motion detection settings are active.

SPECIFICATIONS

Feature	Detail
Model Name	TB1
Indoor/Outdoor Usage	Outdoor
Connectivity Technology	Wireless (Wi-Fi 2.4GHz)
Power Source	Battery Powered (2 Lithium Ion batteries included)
Video Capture Resolution	1080p
Special Features	2-Way Audio, HD Resolution, Local Recording, Motion Sensor, Night Vision, Spotlight, Siren
Compatible Devices	Smartphone, Tablet
Controller Type	Amazon Alexa, Android, iOS
Mounting Type	Wall Mount
Night Vision Range	30 Feet
Viewing Angle	100 Degrees
Item Dimensions (L x W x H)	5 x 3 x 4 inches
Item Weight	11.7 ounces (0.33 Kilograms)
International Protection Rating	IP54
Video Capture Format	AVI

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact 3-Link customer service directly. Contact details are typically available on the manufacturer's official website or within the product application.