



[Manuals.plus](#) /

> [ArmoGear](#) /

> ArmoGear Laser Tag Set - 4 Gun and 4 Vest Combo with 5 Multi-Game Modes - Outdoor Gaming Kit for Kids - Includes Detachable Accessories and Night Vision Flashlight - Ideal Boys' Gift - 7" Hx11 Lx2 W Instruction Manual

ArmoGear KIDZ-000268

ArmoGear Laser Tag Set Instruction Manual

Model: KIDZ-000268

WELCOME TO YOUR ARMOGEAR LASER TAG SET!

Congratulations on your new ArmoGear Laser Tag Set! This comprehensive kit is designed to provide thrilling and immersive laser tag experiences for players of all ages. Featuring advanced wireless synchronization, multiple game modes, and customizable accessories, your set is ready for action. Please read this manual carefully to ensure proper setup, operation, and maintenance of your laser tag equipment.



Image: The complete ArmoGear Laser Tag Set, showcasing the four colorful laser guns, four matching vests, and the product box. This image provides an overview of the main components included in the set.

WHAT'S INCLUDED

Your ArmoGear Laser Tag Set comes with all the essential components for an exciting game:

WHAT'S INCLUDED



Image: A visual breakdown of the set's contents, including four laser guns, four vests, four detachable stocks, four detachable scopes, the gift box, and the user manual.

- **4 Laser Tag Guns:** Each gun features an infrared shooter, invisible light/weapon button, and power button.
- **4 Laser Tag Vests:** Designed to register hits and synchronize wirelessly with the guns.
- **4 Detachable Scopes:** For enhanced aiming and customization.
- **4 Detachable Stocks:** To provide a more stable and comfortable grip during play.
- **User Manual:** This guide for detailed instructions.

SETUP

Battery Installation

Each laser tag gun and vest requires 3 AAA batteries (not included). Ensure you have a total of 24 AAA batteries for a complete 4-player set.

1. Locate the battery compartment on the back of each laser gun and vest.
2. Using a small screwdriver, open the battery compartment cover.
3. Insert 3 AAA batteries into each compartment, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.



Image: A detailed view of the laser gun, pointing out key components such as the infrared shooter, the invisible light/weapon button, and the power button. The battery compartment is typically located near the grip.

Attaching Accessories

The scopes and stocks are detachable, allowing for a customizable gameplay experience.

- To attach a scope, slide it onto the designated rail on top of the laser gun until it clicks into place.
- To attach a stock, align it with the slot at the rear of the laser gun and push firmly until it locks.
- To detach, press the release button (if present) or pull firmly in the opposite direction.

OPERATING INSTRUCTIONS

Powering On and Synchronization

The vest and gun are designed to synchronize wirelessly for seamless communication during battles.

1. Turn on each laser gun by pressing the Power Button (refer to the diagram in the Setup section).
2. Turn on each vest.
3. The gun and vest will automatically attempt to synchronize. You may hear a confirmation sound or see indicator lights.
4. If synchronization fails, turn both devices off and on again, ensuring they are within close proximity.

Game Modes

Your ArmoGear Laser Tag Set features 5 exciting game modes to keep the action fresh:



Image: A graphic detailing the available game modes and weapon modes, showing icons for Team, Zombie, Dragon, and Capture modes, along with descriptions of different weapon types and their effects on gameplay.

- **Team Mode:** Players are divided into teams (Red, Blue, Green, White) and compete to eliminate opposing teams.
- **Zombie Mode:** A designated player or team becomes zombies, hunting down human players.
- **Dragon Mode:** Players take on the role of dragons or knights in a fantasy-themed battle.
- **Capture Mode:** A strategic mode where teams aim to capture an objective or specific area.
- **Endless Mode:** Continuous play without specific objectives, allowing for free-form laser tag fun.

To select a game mode, use the mode selection button on your gun or vest (refer to product specific instructions for exact button location and sequence).

Weapon Modes

Each gun features multiple weapon modes, offering different firing patterns and effects:

- **Single Blaster:** Standard single shot.
- **Ice Gun:** May have a freezing effect on opponents.
- **Rapid Fire:** Allows for quick, continuous shots.
- **Rocket Blaster:** Delivers a powerful, slower shot with significant impact.

Switch between weapon modes using the designated weapon button on your laser gun.

Night Vision Flashlight

Some models include a built-in Night Vision Flashlight for enhanced visibility in low-light conditions. Activate it using the dedicated button on the gun (if available) to add a tactical element to your battles.

CHOOSE YOUR CHALLENGE

DIVE INTO ELECTRIFYING
LASER TAG ACTION



Image: Two children engaged in a laser tag game, demonstrating the active use of the laser guns and vests during play.

MAINTENANCE

Proper care will extend the life of your ArmoGear Laser Tag Set:

- **Cleaning:** Wipe down the guns and vests with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Always remove batteries from the guns and vests if the set will not be used for an extended period to prevent battery leakage and damage.
- **Storage:** Store the set in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your ArmoGear Laser Tag Set, please refer to the following common solutions:

- **Device Not Turning On:**
 - Ensure batteries are correctly inserted with proper polarity.
 - Replace old or depleted batteries with fresh AAA batteries.
- **Gun and Vest Not Syncing:**
 - Ensure both devices are powered on.

- Turn both the gun and vest off, then on again, keeping them close to each other during the power-on sequence.

- **Short Battery Life:**

- Use high-quality alkaline batteries.
- Consider investing in rechargeable AAA batteries for long-term use.

- **Inaccurate Hits/Registering Issues:**

- Ensure the vest sensor is not obstructed.
- Play in an environment with minimal infrared interference (e.g., strong sunlight can affect performance).

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	KIDZ-000268
Product Dimensions	26.92 x 5.08 x 18.03 cm; 453.59 g
Material Type	Plastic
Color	Multicolor
Batteries Required	Yes (3 AAA batteries per gun and vest)
Assembly Required	No
Manufacturer Recommended Age	6 - 18 years
Educational Objective	Concentration

WARRANTY AND SUPPORT

ArmoGear is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or support needs regarding your laser tag set, please contact ArmoGear customer service. Refer to the product packaging or the official ArmoGear website for the most current contact information.

You can also visit the official ArmoGear Store on Amazon for more information and products: [ArmoGear Store](#)