

[Manuals.plus](#) /

- › [Do All Outdoors](#) /
- › Do-All Outdoors FlyWay 60 + Wobbler Kit Instruction Manual

Do All Outdoors FlyWay 60 + Wobbler Kit

Do-All Outdoors FlyWay 60 + Wobbler Kit Instruction Manual

Model: FlyWay 60 + Wobbler Kit

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use, setup, operation, and maintenance of your Do-All Outdoors FlyWay 60 Automatic Clay Pigeon Trap and Auto Adjustable Wobbler Kit. Please read this manual thoroughly before assembly or operation.

Safety Warning: Always wear appropriate eye and ear protection when operating this equipment. Ensure all users are familiar with safe operating procedures.

PRODUCT OVERVIEW



The image displays the Do-All Outdoors FlyWay 60 Automatic Clay Pigeon Trap alongside the Auto Adjustable Wobbler Kit. The FlyWay 60 trap, on the left, is a black metal unit with a tall, red-orange magazine holding clay targets. It features a throwing arm and a red power cord. The Wobbler Kit, on the right, is a compact black metal assembly with a central post and four splayed legs, designed to provide variable target trajectories when attached to the trap.

The Do-All Outdoors FlyWay 60 + Wobbler Kit combines an automatic clay pigeon trap with an adjustable wobbler mechanism. The FlyWay 60 trap is designed to hold 60 clays and automatically launch them for shooting practice. The Wobbler Kit, compatible with Fowl Play and Raven Clay Pigeon Skeet Thrower Traps, adds an adjustable element to the target trajectory, simulating more realistic bird flight patterns.

Key Components:

- **FlyWay 60 Automatic Clay Pigeon Trap:** Holds 60 standard clay targets and features an automatic throwing mechanism.
- **Auto Adjustable Wobbler Kit:** Attaches to compatible traps to provide horizontal and vertical target variation.

SETUP INSTRUCTIONS

1. Unpacking and Inspection:

Carefully remove all components from the packaging. Inspect for any shipping damage. Retain packaging for future storage or transport.

2. FlyWay 60 Trap Assembly:

1. Place the main trap body on a stable, level surface.
2. Attach the legs securely to the trap body using the provided hardware. Ensure all bolts are tightened.
3. Install the clay target magazine onto the trap.
4. Connect the power cord to the trap and ensure it is routed safely away from moving parts.

3. Wobbler Kit Installation:

The Wobbler Kit is designed to integrate with the FlyWay 60 trap. Follow the specific instructions provided with the Wobbler Kit for secure attachment. Generally, this involves mounting the trap onto the wobbler's base plate and connecting the wobbler's power/control cables to the trap's system.

1. Position the Wobbler Kit on a firm, level surface where the trap will be operated.
2. Mount the FlyWay 60 trap onto the Wobbler Kit's mounting plate, securing it with the appropriate bolts and nuts.
3. Connect the Wobbler Kit's control cable to the designated port on the FlyWay 60 trap.
4. Ensure all connections are secure and free from obstruction.

4. Power Connection:

Connect the main power cable from the assembled unit to a compatible 12V deep cycle marine battery (not included). Ensure correct polarity (+ to + and - to -). Do not connect to AC power directly without an approved converter.

OPERATING INSTRUCTIONS

1. Loading Clay Targets:

Carefully load standard 108mm clay targets into the magazine. Ensure they are stacked correctly and do not jam. The FlyWay 60 holds up to 60 clays.

2. Arming the Trap:

Once targets are loaded and power is connected, stand clear of the throwing arm's path. Use the remote release or foot pedal (if included) to arm the trap. The throwing arm will cycle to its ready position.

3. Adjusting Wobbler Settings:

The Wobbler Kit allows for variable target trajectories. Refer to the Wobbler Kit's specific controls for adjusting horizontal and vertical oscillation. Start with a low setting and gradually increase to find desired challenge.

4. Launching Targets:

From a safe distance, activate the remote release or foot pedal to launch a target. The trap will automatically reload the next target.

5. Safety Precautions During Operation:

- Always maintain a safe distance from the trap during operation.
- Never place hands or objects near the throwing arm when the trap is armed or powered.
- Ensure no one is downrange before launching targets.
- Disconnect power when loading targets, making adjustments, or performing maintenance.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your FlyWay 60 + Wobbler Kit.

1. Cleaning:

After each use, wipe down the trap and wobbler with a clean, dry cloth to remove dirt, dust, and clay residue. Avoid using harsh chemicals that may damage finishes or components.

2. Lubrication:

Periodically apply a light lubricant to moving parts, such as the throwing arm pivot points and any visible gears, to ensure smooth operation. Consult the specific Wobbler Kit manual for its lubrication points.

3. Inspection:

Before each use, inspect all bolts, nuts, and connections for tightness. Check the power cables for any signs of wear or damage. Ensure the throwing arm spring is intact and free from corrosion.

4. Storage:

When not in use, store the unit in a dry, protected area away from extreme temperatures and moisture. Disconnect the battery before long-term storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Trap not powering on.	Battery low or disconnected; faulty power cable; tripped circuit breaker.	Check battery charge and connections. Inspect power cable for damage. Reset any circuit breakers.
Targets not launching or jamming.	Improperly loaded clays; damaged clays; throwing arm obstruction; weak spring.	Ensure clays are loaded correctly. Remove any broken clay pieces. Clear obstructions. Inspect and replace spring if necessary.
Wobbler not moving.	Wobbler power/control cable disconnected; motor issue; obstruction.	Check wobbler cable connections. Ensure no debris is blocking movement. Consult Wobbler Kit manual for specific motor troubleshooting.
Inconsistent target throws.	Worn throwing arm rubber; loose components; inconsistent clay quality.	Inspect and replace throwing arm rubber. Tighten all fasteners. Use consistent, high-quality clay targets.

SPECIFICATIONS

- **Product Name:** Do-All Outdoors FlyWay 60 + Wobbler Kit
- **Model:** FlyWay 60 (Trap), Auto Adjustable Wobbler Kit
- **Clay Capacity:** 60 standard 108mm clay targets (FlyWay 60)
- **Power Source:** 12V Deep Cycle Marine Battery (not included)
- **Compatibility:** Wobbler Kit compatible with Fowl Play and Raven Clay Pigeon Skeet Thrower Traps (and FlyWay 60)
- **ASIN:** B0CMFL4MR8
- **Date First Available:** November 2, 2023

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Do-All Outdoors website. Keep your proof of purchase for warranty claims.

Contact Information: Please refer to the manufacturer's official website or product packaging for the most current contact details for customer support.