

GEYGUY GTSK10-4

GEYGUY GTSK10-4 Karaoke Machine User Manual

Model: GTSK10-4

1. INTRODUCTION

Thank you for choosing the GEYGUY GTSK10-4 Portable Bluetooth Karaoke Machine. This powerful and versatile audio system is designed to provide an immersive karaoke experience for various occasions, from home parties to outdoor gatherings. Featuring a robust speaker system, wireless microphones, dynamic LED lighting, and multiple connectivity options, the GTSK10-4 is engineered for high-quality sound and user convenience. Please read this manual thoroughly before operating the device to ensure proper use and to maximize its performance and longevity.

2. SAFETY INFORMATION

To prevent fire, electric shock, or injury, always follow these basic safety precautions:

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not open the unit. There are no user-serviceable parts inside.

3. PACKAGE CONTENTS

Please check the box for the following items:

- GEYGUY GTSK10-4 Karaoke Machine
- 2 x Wireless Microphones
- Remote Control
- Power Adapter
- RCA Audio Cable
- 3.5mm AUX Audio Cable

- User Manual (this document)



Image: The GEYGUY GTSK10-4 Karaoke Machine with its two wireless microphones, remote control, power adapter, RCA cable, and 3.5mm audio cable, illustrating all components included in the package.

4. PRODUCT FEATURES

The GTSK10-4 Karaoke Machine is equipped with advanced features for an enhanced audio and entertainment experience:

- **Powerful 3-Way Speaker System:** Features a 10-inch subwoofer, 4-inch mid-range speaker, and 3-inch tweeter,

delivering 300W RMS power and up to 102dB of clear, robust audio.

- **Dual Wireless Microphones:** Includes two UHF wireless microphones for studio-grade vocal clarity and freedom of movement.
- **Dynamic LED Disco Lights:** Integrated LED lights pulse to the music, and a spinning disco ball creates an immersive party atmosphere.
- **Multiple Connectivity Options:** Supports Bluetooth 5.3 for wireless streaming, AUX-in (3.5mm and RCA) for TV and other devices, USB for media playback, and dedicated inputs for microphones and guitars.
- **DSP Audio Controls:** Customize your sound with adjustable bass, treble, and echo effects.
- **Portable Design:** Weighing approximately 30.8 lbs (14 kg) with reinforced handles and wheels, it is designed for easy transport.
- **Long Battery Life:** Built-in battery provides over 6 hours of continuous use, with convenient USB-C charging.
- **Tablet Holder:** Integrated groove for securely holding tablets or smartphones for lyric display.

ULTRA-POWERFUL SOLID-WOOD, PREMIUM SOUND

SPEAKER SIZE

10" subwoofer
4" mid-range speaker
3" tweeter

SPEAKER POWER

RMS 300 watts
for spacious sound



Image: An exploded view of the GTSK10-4 speaker system, highlighting the 10-inch subwoofer, 4-inch mid-range speaker, and 3-inch tweeter, demonstrating its powerful audio matrix design.

CONNECT TO TV & LIGHT UP YOUR PARTY

with Bluetooth or RCA TV cable



sustainable
for over 6 hours



lighting
can be turned off

Image: The GTSK10-4 Karaoke Machine connected to a television, showcasing its ability to sync lyrics via Bluetooth or RCA cable, with the dynamic LED disco lights illuminating the room. The image also indicates over 6 hours of battery life and the option to turn off the lighting.

KEEP YOUR PERFORMANCE VIBRANT



Image: The GTSK10-4 Karaoke Machine being pulled by its retractable handle, demonstrating its portability. Insets highlight the storage recess for water bottles, the iPad groove for mobile devices, and the top-mounted disco ball reflecting colorful lights.

5. CONTROLS AND CONNECTIONS

Familiarize yourself with the control panel located on the top of the unit:

FRIENDLY DESIGN FOR YOUR EASY OUTDOOR TRAVEL



STORAGE RECESS
special design for convenient access to water bottles



IPAD GROOVE
for easy placement of iPads, smartphones, and other mobile devices



DISCO BALL
reflects light in all directions, creating a dazzling and dynamic display of sparkling light

Image: A detailed view of the GTSK10-4 control panel, labeling various buttons and knobs including AUX input, USB input, LED ON/OFF, Mode switching, Bluetooth mode, TWS mode, MIC volume, Guitar input, and EQ equalizer controls.

- **Power Button (POW):** Turns the unit on or off.
- **LED Button (LED):** Toggles the LED disco lights on or off.
- **-M ECHO +:** Adjusts microphone echo level.
- **-M VOL +:** Adjusts microphone volume.
- **-VOLUME +:** Adjusts the main speaker volume.
- **Mode Button:** Cycles through input modes (Bluetooth, AUX, USB).
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Navigates through tracks in USB mode.
- **TWS Button:** Activates True Wireless Stereo pairing (for connecting two GTSK10-4 units).
- **USB Port:** For USB drive playback.
- **LINE IN (AUX) Port:** 3.5mm input for external audio devices.
- **MIC IN Port:** For wired microphone connection (if desired, in addition to wireless).

- **GUITAR IN Port:** For connecting a guitar or other instrument.
- **EQ Equalizer:** Sliders to adjust specific frequency bands (e.g., 100Hz, 1KHz, 10KHz) for fine-tuning audio output.
- **DC18-20V IN:** Power input for charging and operation.

6. SETUP

Follow these steps for initial setup:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Charging the Unit:** Connect the power adapter to the DC18-20V IN port on the unit and plug it into a power outlet. The charging indicator will illuminate. Charge the unit fully before first use (approximately 6-8 hours).
3. **Microphone Setup:**
 - Unscrew the bottom cap of each wireless microphone and insert 2 x AA batteries (not included) according to the polarity markings.
 - Turn on the microphones using their power buttons. They should automatically pair with the karaoke machine.
4. **Initial Power On:** Press the 'POW' button on the control panel to turn on the karaoke machine. The display will light up.

7. OPERATING INSTRUCTIONS

7.1 Power On/Off

Press the **POW** button to turn the unit on or off.

7.2 Bluetooth Connection

1. Turn on the karaoke machine. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'BLUE' on the display.
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select 'GTSK10-4' from the list. Once connected, the 'BLUE' indicator will stop flashing and remain solid.
4. You can now play audio from your device through the karaoke machine.

7.3 AUX/RCA Connection

To connect to a TV or other audio source:

- Use the provided RCA cable to connect the audio output of your TV to the RCA input ports on the karaoke machine.
- Alternatively, use the 3.5mm AUX cable to connect the headphone jack of your device to the LINE IN (AUX) port on the karaoke machine.
- Press the **Mode** button until 'LINE' or 'AUX' is displayed.

7.4 USB Playback

Insert a USB flash drive containing MP3 audio files into the USB port. The unit will automatically switch to USB mode and begin playing. Use the Play/Pause and Previous/Next buttons to control playback.

7.5 Microphone Usage

Ensure the wireless microphones are powered on. Adjust microphone volume using the **-M VOL +** knob and echo effect using the **-M ECHO +** knob.

7.6 Guitar Input

Connect your guitar or other instrument to the **GUITAR IN** port. The instrument's sound will be amplified through the speaker.



Image: A band performing with the GTSK10-4 Karaoke Machine, demonstrating its capability to connect to electric instruments via a 6.35mm jack, including guitars, keyboards, and drum machines, making it suitable for live performances.

7.7 DSP/EQ Settings

Use the equalizer sliders on the control panel to fine-tune the bass, mid-range, and treble frequencies of the audio output to your preference.

7.8 Disco Lights

Press the **LED** button to toggle the front panel LED lights and the top disco ball on or off. The lights will dynamically respond to the music.

8. MAINTENANCE

8.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure no liquids enter the unit.

8.2 Storage

When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every 3 months to maintain its health.

8.3 Battery Care

The unit contains a built-in Lithium Ion battery. Do not attempt to replace it. Avoid fully discharging the battery frequently, as this can reduce its lifespan. Charge the unit regularly, even if not in use.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Battery is depleted; Power adapter not connected or faulty.	Connect the power adapter and charge the unit. Ensure the power outlet is working.
No sound from speaker.	Volume too low; Incorrect input mode selected; Audio cable not connected properly; Bluetooth not paired.	Increase main volume. Press the 'Mode' button to select the correct input. Check audio cable connections. Re-pair Bluetooth device.
Microphones not working.	Microphone batteries depleted; Microphones not powered on; Microphone volume too low.	Replace microphone batteries. Ensure microphones are powered on. Increase microphone volume ('-M VOL +').
Bluetooth connection unstable or failing.	Device too far from unit; Interference; Bluetooth on device is off.	Move device closer to the unit (within 33 feet/10 meters). Avoid obstacles. Turn Bluetooth off and on again on your device.
Distorted sound.	Volume too high; Audio source distortion; EQ settings incorrect.	Lower the volume. Check the audio source for distortion. Adjust EQ sliders.
Loud voice prompt when switching modes.	This is a fixed system prompt.	The volume of the voice prompt cannot be adjusted independently. Ensure overall volume is at a comfortable level before switching modes.

10. SPECIFICATIONS

Feature	Specification
Model Number	GTSK10-4
Item Weight	37.4 pounds (17 kg)
Product Dimensions	12.91 x 26.77 x 13.66 inches (32.8 x 68 x 34.7 cm)
Speaker Configuration	10" Subwoofer, 4" Mid-range, 3" Tweeter (3 Speakers total)
Power Output	300W RMS
Battery Type	Lithium Ion (1 included)
Battery Life	6+ hours

Feature	Specification
Connectivity	Bluetooth 5.3, 3.5 mm Jack, RCA, USB
Power Source	Plug In Electric (AC 230V)
Recommended Use	Home, Parties, Gatherings, Outdoor Events

11. WARRANTY AND SUPPORT

GEYGUY is committed to providing high-quality products and customer satisfaction. For any questions, technical assistance, or support needs regarding your GTSK10-4 Karaoke Machine, please contact GEYGUY customer service. GEYGUY offers 24/7 after-sales support to address any issues you may encounter.

For more information or to contact support, please visit the official GEYGUY store on Amazon: [GEYGUY Amazon Store](#)

© 2025 GEYGUY. All rights reserved.

Related Documents

 <p>GEYGUY® GTSK10-3 OWNER'S MANUAL</p>	<p>GEYGUY GTSK10-3 Portable Speaker Owner's Manual Comprehensive owner's manual for the GEYGUY GTSK10-3 portable speaker, covering setup, Bluetooth, FM radio, USB playback, microphone/guitar mixing, and detailed specifications.</p>
 <p>GEYGUY® GTSK8-1 & GTSK12-2 PORTABLE PA SPEAKER</p>	<p>GEYGUY GTSK8-1 & GTSK12-2 Portable PA Speaker User Manual User manual for the GEYGUY GTSK8-1 and GTSK12-2 portable PA speakers, covering introduction, package contents, product overview, placement, power-on, specifications, troubleshooting, and compliance.</p>
 <p>GEYGUY® GTSK8-1 OWNER'S MANUAL</p>	<p>GEYGUY GTSK8-1 Portable Speaker Owner's Manual This manual provides instructions for the GEYGUY GTSK8-1 portable speaker, covering setup, operation, features like Bluetooth, TWS, recording, FM radio, Line In, USB playback, and mixing with microphones or electric guitars. It also includes important safety information, specifications, and troubleshooting tips.</p>

GEYGUY®



LE MANUEL DU PROPRIÉTAIRE

[GEYGUY GTSK8-1 Haut-parleur Portable Manuel d'utilisation](#)

Guide complet pour le haut-parleur portable GEYGUY GTSK8-1, couvrant l'installation, le fonctionnement, les caractéristiques et le dépannage. Découvrez comment utiliser votre haut-parleur GEYGUY pour un son de qualité.