

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Greesum](#) /

› [Greesum 3 Pieces Outdoor Furniture Set - Rocking Bistro Sets Black User Manual](#)

Greesum GS-POFS3

Greesum 3 Pieces Outdoor Furniture Set

Model: GS-POFS3 | Brand: Greesum

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and care of your Greesum 3 Pieces Outdoor Furniture Set. This set includes two rocking chairs and one glass coffee table, designed for outdoor use in various settings such as patios, balconies, and gardens. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your furniture.



Image 1.1: The Greesum 3 Pieces Outdoor Furniture Set, featuring two black rocking chairs and a matching glass-top coffee table.

2. SAFETY INFORMATION

WARNING: Product requires assembly; weight capacity of 250 lbs; potential space requirements and stability concerns. Always ensure all bolts and screws are securely tightened before use. Do not stand on the chairs or table. Keep children away from the assembly area. Use on a flat, stable surface to prevent tipping. Do not expose to extreme weather conditions for prolonged periods without proper protection.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact Greesum customer support.

- 2 x Rocking Chairs (disassembled)
- 2 x Seat Cushions
- 1 x Glass Coffee Table (disassembled)
- 1 x Hardware Pack (screws, bolts, washers, Allen wrench)
- 1 x Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults and approximately 30-60 minutes. Do not fully tighten screws until all parts are loosely assembled.

4.1. Tools Required

- Included Allen Wrench
- Optional: Phillips Head Screwdriver (not always needed, but useful for some hardware)

4.2. Chair Assembly Steps

1. Unpack all chair components and lay them out on a soft, clean surface to prevent scratches.
2. Attach the chair back to the seat frame using the provided bolts and washers. Hand-tighten only.
3. Connect the side frames (with armrests) to the assembled back and seat. Ensure the rocking base is oriented correctly. Hand-tighten all bolts.
4. Once all components are in place, gradually tighten all bolts with the Allen wrench until secure. Do not overtighten to avoid stripping threads.
5. Place the seat cushion onto the chair.

Details of the chair

Patio Furniture
**Comfortable
Chair design**



**Weatherproof
Rattan**



**Sturdy
handrails**



**Comfortable
cushion**

Image 4.1: Close-up of chair features, including weatherproof rattan, sturdy handrails, and the comfortable cushion.

4.3. Coffee Table Assembly Steps

1. Unpack all table components.
2. Assemble the table frame using the provided bolts. Hand-tighten initially.
3. Place the tempered glass top onto the frame. Ensure the suction cups (if present) secure the glass to the frame.
4. Once the glass top is in place, fully tighten all frame bolts.



Image 4.2: Details of the coffee table, illustrating the glass desktop and the suction cup mechanism for stability.

5. OPERATING INSTRUCTIONS

The Greesum Outdoor Furniture Set is designed for comfortable relaxation in outdoor environments.

5.1. Using the Rocking Chairs

The chairs feature a premium rocking design for gentle, stress-relieving motion. Sit centrally on the seat and lean back to initiate the rocking motion. The sturdy base ensures stability during use. Avoid excessive force or sudden movements while rocking.



Patio Furniture

Rocking Design

Forget about fatigue & Enjoy leisure time



Image 5.1: Diagram illustrating the smooth rocking motion and range of recline for the chairs.

5.2. Using the Coffee Table

The glass coffee table provides a stable surface for beverages, books, or small decorative items. Ensure items placed on the table are within its weight capacity and do not exceed its surface area to prevent accidents.



Image 5.2: The furniture set arranged in a backyard, demonstrating typical usage.

6. MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your outdoor furniture set.

6.1. Cleaning Instructions

- **Frame:** Wipe the steel frame with a dry cloth. For stubborn dirt, use a mild soap solution and a soft cloth, then rinse thoroughly and dry immediately to prevent rust.
- **Wicker:** The PP wicker can be cleaned with a damp cloth and mild soap. Rinse with water and allow to air dry.
- **Cushions:** The polyester cushion covers are removable for cleaning. Follow care instructions on the cushion label. Spot clean with mild soap and water, or hand wash if necessary. Allow to air dry completely.
- **Glass Tabletop:** Clean with a glass cleaner and a soft cloth.

6.2. General Care

- Periodically check and tighten all bolts and screws to ensure structural integrity.
- To prolong the life of your furniture, especially the cushions, store them indoors or cover the set with a weather-

resistant cover during inclement weather or prolonged periods of non-use.

- Avoid placing hot items directly on the glass tabletop without a coaster.

7. TROUBLESHOOTING

If you encounter any issues with your Greesum Outdoor Furniture Set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair wobbles or is unstable.	Loose bolts; uneven surface.	Ensure all assembly bolts are securely tightened. Move the furniture to a flat, level surface.
Glass tabletop slides or is not secure.	Suction cups not properly engaged or missing.	Press down firmly on the glass to engage suction cups. Ensure suction cups are clean and free of debris. If missing, contact support.
Missing parts during assembly.	Packaging error.	Carefully check all packaging materials. If parts are still missing, contact Greesum customer support with your purchase details.

8. SPECIFICATIONS

Detailed specifications for the Greesum 3 Pieces Outdoor Furniture Set.

Feature	Detail
Model Number	GS-POFS3
Color	Black
Material	Polypropylene (Wicker), Steel (Frame), Tempered Glass (Tabletop)
Rocking Chair Dimensions (L x W x H)	20" x 18" x 29" (approximate)
Coffee Table Dimensions (L x W x H)	16" x 16" x 16" (approximate)
Item Weight	36.2 pounds (total set)
Weight Capacity (per chair)	250 lbs
Product Care Instructions	Wipe with Dry Cloth

Patio Furniture

Greesum Patio Bistro Set

Suitable for Yard Lawn Porch Poolside Balcony



Image 8.1: Dimensional diagram of the rocking chair and coffee table.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Greesum customer service. Keep your purchase receipt and model number (GS-POFS3) handy for faster service. You can typically find contact information on the Greesum brand website or through your retailer.