

Manuals.plus /

- › CLNCBJ /
- › CLNCBJ RE20QP215 Universal Remote Control User Manual

## CLNCBJ RE20QP215

# CLNCBJ RE20QP215 Universal Remote Control User Manual

Model: RE20QP215 | Brand: CLNCBJ

## INTRODUCTION

This user manual provides essential information for the setup, operation, and maintenance of your CLNCBJ RE20QP215 Universal Remote Control. Designed as a direct replacement for various RCA TV models, this remote offers hassle-free operation without the need for complex programming or pairing. Simply insert batteries, and it's ready for use.

## PRODUCT OVERVIEW

The CLNCBJ RE20QP215 remote control is designed for intuitive use, featuring a clear button layout and a comfortable grip. It replaces your original RCA TV remote, providing full functionality for your television, and in some cases, compatible DVD players and VHS combos.





Image: Front and back views of the CLNCBJ RE20QP215 remote control, showcasing its sleek design and battery compartment.

## Button Functions

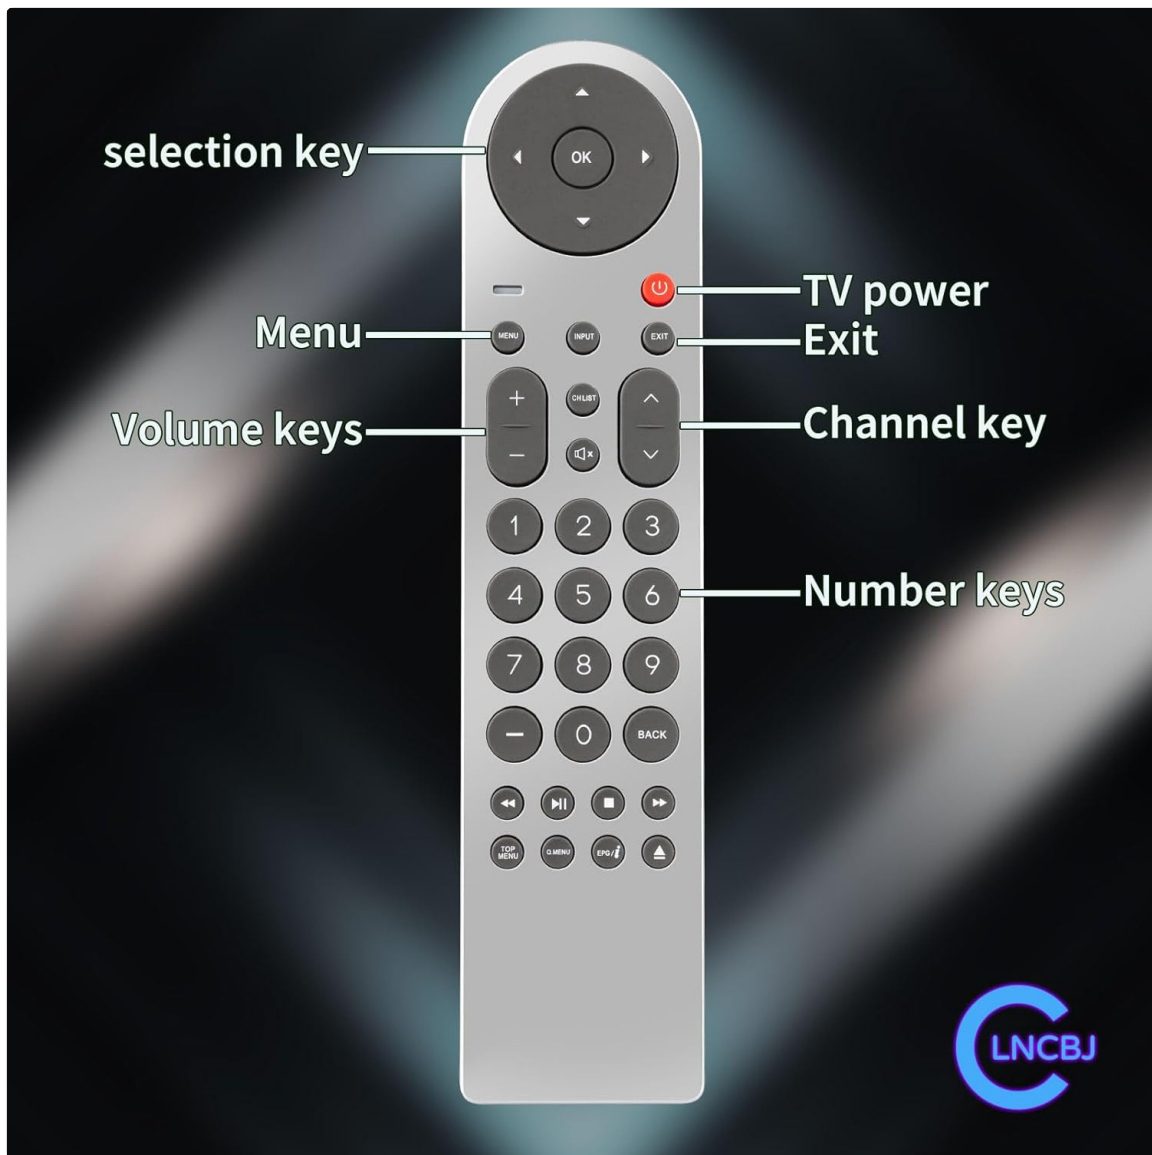


Image: A detailed view of the remote control with key buttons labeled for easy identification and understanding of their functions.

- **TV Power:** Turns the television on or off.
- **Selection Key (OK/Directional Pad):** Navigates menus and confirms selections.
- **Menu:** Accesses the TV's main menu.
- **Input:** Changes the video input source.
- **Exit:** Exits current menu or function.
- **Volume Keys (+/-):** Adjusts the audio volume.
- **Mute:** Mutes or unmutes the audio.
- **Channel Keys (Up/Down):** Changes television channels.
- **Number Keys (0-9):** Direct channel entry.
- **Back:** Returns to the previous screen or channel.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For compatible DVD/VHS functions.

### Compatible Models

This remote control is compatible with a wide range of RCA TV models, including but not limited to: LED24G45RQ, LED28G45RQ, LED32G30RQD, LED32G30TRQ, LED40G45RQ, LED42C45RQ, LED20G30RQD, LED20G30RQ, LED48G45RQ, PLD55A55RQ, LED46C45RQ, LED50B45RQ,

LED55C55R120Q, LED55G55R120Q, LED58G45RQ, RE20QP215, WX14241, WX14413, LED24G45RQD, LED40HG45RQ, PLD32A30RQ, PLD50A45RQ.

## SETUP

---

### Battery Installation

The CLNGBJ RE20QP215 remote control requires two (2) AAA 1.5V alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: The open battery compartment of the remote, illustrating where to insert the AAA batteries.

### No Programming Required

This remote control is pre-programmed and ready to use with compatible RCA TV models immediately after battery installation. No additional programming, pairing, or code entry is necessary.

### Setup Video Guide

Your browser does not support the video tag.

Video: A demonstration of unboxing the remote and installing batteries, showing the simple setup process.

## OPERATING INSTRUCTIONS

---

Once batteries are installed, point the remote control directly at your RCA TV and press the desired function button. Ensure there are no obstructions between the remote and the TV's infrared receiver.

- **Power On/Off:** Press the **Power** button to turn your TV on or off.
- **Channel Navigation:** Use the **Channel Up/Down** buttons to change channels sequentially. For direct access, use the **Number Keys**.
- **Volume Control:** Adjust the sound level using the **Volume Up/Down** buttons.
- **Input Selection:** Press the **Input** button to cycle through available video input sources (e.g.,

HDMI 1, AV, Component).

- **Menu Navigation:** Use the **Menu** button to open the TV's on-screen display (OSD) menu. Navigate using the **Directional Pad** and confirm selections with **OK**.

## Effective Range

The remote operates effectively up to 30 feet (approximately 9 meters) from the television, provided there is a clear line of sight between the remote's infrared emitter and the TV's receiver. Fast response times, typically under 0.5 seconds, ensure a smooth user experience.



Image: The remote control demonstrating its effective operating range of up to 30 feet from the television.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V alkaline).

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA 1.5V alkaline batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed directly at TV.	Replace batteries; Remove any objects blocking the line of sight; Point the remote directly at the TV's IR receiver.
Specific buttons not responding.	Dirty contacts under the button; Remote malfunction.	Clean the remote surface. If problem persists, consider replacing the remote.
Remote does not control my TV.	TV model is not compatible.	Verify your TV model is listed in the "Compatible Models" section. This remote is specifically for RCA TVs.

## SPECIFICATIONS

- **Model Number:** RE20QP215
- **Brand:** CLNCBJ
- **Product Dimensions:** 9.05 x 3.15 x 0.79 inches (230 x 80 x 20 mm)
- **Item Weight:** 2.89 ounces (82 grams)
- **Power Source:** 2 x AAA 1.5V Alkaline Batteries (not included)
- **Special Feature:** No Programming Required
- **Color:** Silver and Black
- **Max Number of Supported Devices:** 1 (primarily TV, with some DVD/VHS combo functions)
- **Compatible Devices:** Television, DVD/Blu-ray Player (for specific RCA models)



Image: Visual representation of the remote control's dimensions for reference.