

[Manuals.plus](#) /

› [Got-luck](#) /

› Electric Can Opener, Got-luck One-Touch Hand Held Automatic Can Opener Smooth Edge Fits Almost All Can Sizes for Seniors with Arthritis, Food Safe Battery Can Opener Best Kitchen Gadgets

## Got-luck TC01

# Got-luck Electric Can Opener User Manual

Model: TC01

## INTRODUCTION

Thank you for choosing the Got-luck Electric Can Opener. This automatic, one-touch can opener is designed to provide effortless and safe can opening for various can sizes, making it ideal for everyday use, especially for seniors or individuals with arthritis. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image: The Got-luck Electric Can Opener, a sleek silver device, stands beside a can of grapefruit. The image visually represents the product's function of opening cans, with a dynamic splash of juice indicating ease of use.

## SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- Always read the user manual completely before operating the can opener.
- This appliance is for household use only.
- Do not immerse the electric can opener in water or any other liquid.
- Ensure hands are dry before handling the can opener and batteries.
- Only use AA alkaline batteries with this device.
- Remove batteries when the can opener is not in use for extended periods to prevent leakage and prolong battery life.
- Keep fingers clear of the cutting blade during operation. The device is designed with a safety iron to prevent direct contact.
- The can opener creates a smooth edge, but always handle opened cans and lids with care.



Image: An underside view of the can opener highlights its internal mechanisms, including the linkage switch and the robust cutting blade. Text overlays emphasize "REVERSION and SAFE DESIGN," illustrating the product's commitment to user safety.

## PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Got-luck Electric Can Opener
- 1 x Instruction Manual (this document)
- *Note: Batteries are not included.*

## SETUP

### Battery Installation

1. Locate the battery compartment on the underside of the can opener.

2. Slide the battery cover open.
3. Insert 2 x AA alkaline batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.

## OPERATING INSTRUCTIONS

Follow these steps for effortless can opening:

1. Place the can on a flat, stable surface.
2. Position the can opener on top of the can, ensuring the cutting wheel and the drive wheel are aligned with the can's rim.
3. Press the single button on top of the can opener. The can opener will automatically grip the can and begin to cut along the side of the lid.



Image: A close-up of the can opener shows a finger pressing its single activation button. The accompanying text, "ONE TOUCH 360° Auto Rotate to Open," highlights the simplicity and automation of the device's operation.

4. Allow the can opener to complete a full rotation around the can. It will stop automatically once the cutting process is

complete.

5. Once the cutting is finished, the can opener's built-in magnet will lift the lid, preventing it from falling into the food.



Image: The can opener is shown lifting a can lid, demonstrating the smooth edge left after cutting. An opened can of food is visible nearby, illustrating the clean and safe result of the operation.

6. Carefully remove the can opener from the can. The lid will remain attached to the magnet for easy disposal.

### Can Compatibility

The Got-luck Electric Can Opener is designed to work with most standard round, oval, and various-sized cans. It creates a smooth, safe edge. Please note that it is generally not suitable for square cans or cans with rimless designs.



Image: The electric can opener is displayed alongside an assortment of cans of different sizes and shapes, visually confirming its versatility in fitting "ALMOST SIZE" cans, as indicated by the overlay text.

## MAINTENANCE AND CLEANING

Proper care will ensure the longevity of your can opener:

- **Before Cleaning:** Always remove the batteries before cleaning the can opener.
- **Cleaning the Body:** Wipe the exterior of the can opener with a damp cloth or sponge. Do not soak or rinse the entire unit under running water.
- **Drying:** After wiping, dry the can opener completely with a clean, dry cloth.
- **Storage:** Store the can opener in a dry place when not in use. If storing for an extended period, remove the batteries.

## TROUBLESHOOTING

If you encounter issues with your Got-luck Electric Can Opener, please refer to the following common problems and solutions:

| Problem                                                              | Possible Cause                                                                                                                                                                                                                           | Solution                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Can opener does not turn on or operate.                              | <ul style="list-style-type: none"><li>◦ Dead or incorrectly inserted batteries.</li><li>◦ Battery compartment not closed securely.</li></ul>                                                                                             | <ul style="list-style-type: none"><li>◦ Replace with fresh AA alkaline batteries.</li><li>◦ Ensure batteries are inserted with correct polarity.</li><li>◦ Check that the battery cover is fully closed.</li></ul>                       |
| Can opener stops mid-operation or does not complete a full rotation. | <ul style="list-style-type: none"><li>◦ Low batteries.</li><li>◦ Can opener not properly seated on the can.</li><li>◦ Can type is incompatible (e.g., square, rimless).</li><li>◦ Blade or drive wheel is obstructed or dirty.</li></ul> | <ul style="list-style-type: none"><li>◦ Replace batteries.</li><li>◦ Reposition the can opener firmly on the can's rim.</li><li>◦ Ensure the can is a compatible type.</li><li>◦ Clean the cutting blade and drive wheel area.</li></ul> |
| Lid does not lift with the magnet.                                   | <ul style="list-style-type: none"><li>◦ Can opener removed too quickly.</li><li>◦ Lid material is not magnetic.</li></ul>                                                                                                                | <ul style="list-style-type: none"><li>◦ Allow the can opener to fully stop before lifting.</li><li>◦ Manually remove the lid if it's not magnetic.</li></ul>                                                                             |

## SPECIFICATIONS

|                              |                                          |
|------------------------------|------------------------------------------|
| Brand                        | Got-luck                                 |
| Model Number                 | TC01                                     |
| ASIN                         | B0CMHRMZ26                               |
| UPC                          | 762221861036                             |
| Color                        | Silver Can Opener                        |
| Product Dimensions (approx.) | 2.04"W x 3.54"H                          |
| Item Weight                  | 8.1 ounces                               |
| Blade Material               | Stainless Steel                          |
| Operation Mode               | Automatic                                |
| Power Source                 | 2 x AA Alkaline Batteries (not included) |

## WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any product support, inquiries, or to report issues, please refer to the contact information provided by your retailer or the manufacturer's official website.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question