

## MD-1121

# Generic AC DC Adapter Charger for RadioShack MD-1121 Portable Piano Keyboard

Model: MD-1121

## INTRODUCTION

This manual provides instructions for the safe and effective use of your Generic AC DC Adapter Charger, designed as a compatible replacement power supply for the RadioShack MD-1121 Portable Piano Keyboard. Please read this manual thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

### Important Safety Instructions:

- Ensure the adapter's voltage and current ratings match your device's requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or repair the adapter. Refer servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

## PACKAGE CONTENTS

- 1 x Generic AC DC Adapter Charger (7ft cable)

## SETUP

1. **Verify compatibility:** Ensure your device is a RadioShack MD-1121 Portable Piano Keyboard. This adapter is designed specifically for this model.
2. **Connect to device:** Insert the barrel connector end of the adapter into the power input port of your RadioShack MD-1121 Portable Piano Keyboard.
3. **Connect to power outlet:** Plug the AC end of the adapter into a standard 100V - 240V wall outlet.
4. **Power on device:** Once connected, you can power on your device.



Figure 1: Generic AC DC Adapter Charger. This image shows the adapter with its power cord and barrel connector, ready for connection.

## OPERATING INSTRUCTIONS

---

This adapter provides continuous power to your RadioShack MD-1121 Portable Piano Keyboard. It is not designed for charging rechargeable batteries within the device, but rather to power the device directly. If your device uses rechargeable batteries, the adapter will power the device while connected, but the batteries themselves may not charge if the device's internal charging circuit is not active or if the batteries are beyond their lifespan.

## MAINTENANCE

---

- Keep the adapter clean and free from dust. Use a dry, soft cloth for cleaning.
- Store the adapter in a cool, dry place when not in use.
- Avoid bending or crimping the power cord excessively to prevent internal damage.

## TROUBLESHOOTING

---

### Device does not power on when connected:

- Ensure the adapter is securely plugged into both the device and the wall outlet.
- Verify the wall outlet is functional by testing it with another appliance.
- Confirm that your device is indeed a RadioShack MD-1121. This adapter is model-specific.
- If your device uses rechargeable batteries, and it still doesn't power on, the batteries might be old or dead and unable to hold a charge, even if the adapter is supplying power. This adapter powers the device, but does not fix dead batteries.

### Adapter feels warm during use:

It is normal for power adapters to become slightly warm during operation. If the adapter becomes excessively hot or emits a burning smell, immediately unplug it from the wall outlet and discontinue use. Contact customer support.

## SPECIFICATIONS

---

Feature	Detail
Input Voltage	100V - 240V (Worldwide Compatible)
Output Current	2 Amps
Connector Type	Barrel Connector
Cable Length	7 feet
Compatible Devices	Radio Shack RadioShack MD-1121 Portable Piano Keyboard ( <i>only</i> )
Safety Features	Over Voltage Output Protection, Over Current Output Protection, Short Circuit Output Protection

Product Dimensions	2 x 2 x 3 inches
Item Weight	4 ounces
Color	Black

## WARRANTY AND SUPPORT

---

This product is offered by GuyPower. For any questions regarding compatibility or troubleshooting not covered in this manual, please contact the seller directly through your Amazon order page. The standard return policy allows for returns within 30 days of purchase for refund or replacement.