

[manuals.plus](#) /

› [YOER](#) /

› [YOER CleanSlide SMC01W Steam Mop User Manual](#)

YOER CleanSlide SMC01W

YOER CleanSlide SMC01W Steam Mop User Manual

Model: CleanSlide SMC01W | Brand: YOER

INTRODUCTION

Thank you for choosing the YOER CleanSlide SMC01W Steam Mop. This versatile device is designed to provide efficient and hygienic cleaning for various surfaces in your home. It functions as both a steam mop for floors and a handheld steam cleaner for detailed tasks. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.



Figure 1: YOER CleanSlide SMC01W Steam Mop with included accessories.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power cord is fully unwound before use.
- Do not leave the steam mop unattended while it is plugged in or operating.
- Keep out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Unplug the appliance from the power outlet before filling with water, cleaning, or performing maintenance.
- Do not immerse the appliance in water or any other liquid.
- Do not use the appliance on unsealed hardwood floors or surfaces that are sensitive to heat or moisture.

PACKAGE CONTENTS

Your YOER CleanSlide SMC01W Steam Mop comes with a rich accessory set to handle various cleaning tasks. Please check that all components are present:

- YOER CleanSlide SMC01W Steam Mop Unit
- Removable Water Tank
- Detergent Tank
- Replaceable Water Filter
- Steam Mop Handle
- Steam Mop Foot/Base
- 3 x Microfiber Pads
- Carpet Glider Attachment
- Handheld Steam Cleaner Hose
- Various Brushes (Nylon, Metal)
- Grout Nozzle
- Scraper Tool
- Window/Upholstery Tool with Cloth
- Small and Large Nylon Brushes
- Original Packaging



- 1 Dampfmopp-Griff
- 2 Wasserfilter
- 3 Wassertank
- 4 Dampfreiniger
- 5 Dampfmopp-Gehäuse
- 6 Reinigungsmittelbehälter
- 7 Dampfmopf Fuß
- 8 Teppichdüse
- 9 3 Stoffaufsätze
- 10 Dampfreiniger-Schlauch

- 11 Fugendüse
- 12 Metallbürste
- 13 Kleine Nylonbürste
- 14 Große Nylonbürste
- 15 Schaber
- 16 Fugendüse
- 17 Fenster- / Polsterdüse
- 18 Tuch für Polster und Kleidung
- 19 Rückseitenbürste
- 20 Originalverpackung

Figure 2: Detailed view of all included components and their names.

PRODUCT OVERVIEW

Familiarize yourself with the different parts of your steam mop for optimal use.



1 Ergonomischer Griff mit Gummiüberzug	8 Herausnehmbarer Reinigungsmittelbehälter
2 Kabelaufwicklung	9 Dampfauslöseknopf am Fuß
3 Dampfreiniger-Auslöser	10 Griffentfernungs-Taste
4 Austauschbarer Wasserfilter	11 Herausnehmbarer Wassertank
5 Dampfreiniger-Griff und -Auslöser	12 Herausnehmbürste hinten
6 Dampfbereitschaftsanzeige	13 Tastendruck zur Detergentanwendung
7 Fußabnehmknopf	

Figure 3: Key components of the YOER CleanSlide SMC01W.

1. Ergonomic Handle with Rubber Coating
2. Cable Winding
3. Steam Cleaner Trigger
4. Replaceable Water Filter
5. Steam Cleaner Handle and Trigger
6. Steam Ready Indicator
7. Foot Release Button
8. Removable Detergent Container
9. Steam Release Button on Foot
10. Handle Removal Button
11. Removable Water Tank
12. Rear Brush
13. Button for Detergent Application

SETUP

- 1. Assembly:** Insert the handle into the main body until it clicks into place. Ensure all connections are secure.
- 2. Filling the Water Tank:** Remove the water tank (11) from the main unit. Open the cap and fill with clean, distilled or demineralized water. Do not overfill. Close the cap securely and reinsert the tank into the unit.
- 3. Filling the Detergent Tank (Optional):** If desired, remove the detergent container (8) and fill with a suitable, non-foaming steam cleaner detergent. Reinsert the container.
- 4. Attaching the Microfiber Pad:** Place a clean microfiber pad onto the steam mop foot, ensuring it is securely attached with the hook-and-loop fasteners.
- 5. Power Connection:** Unwind the power cord completely and plug the appliance into a grounded electrical outlet (230V).

OPERATING INSTRUCTIONS

Steam Mop Mode

1. After plugging in, the steam ready indicator (6) will illuminate. The device heats up quickly, typically within 15 seconds.
2. Once the indicator shows it's ready, press the steam release button on the foot (9) to start steaming.
3. Move the steam mop slowly and steadily across the floor surface. The 180° swivel foot allows for easy maneuverability around furniture and into corners.
4. For stubborn stains, hold the mop over the area for a few seconds to allow the steam to penetrate.
5. The device offers continuous steam generation for up to 25 minutes on a full tank.
6. For carpeted surfaces, attach the carpet glider over the microfiber pad.
7. To apply detergent, press the button for detergent application (13).

Handheld Steam Cleaner Mode

1. To convert to handheld mode, press the foot release button (7) and the handle removal button (10) to detach the main unit from the mop foot and handle.
2. Attach the flexible hose (10 from Figure 2) to the main unit.
3. Select the appropriate accessory (e.g., brush, nozzle, scraper) for the cleaning task and attach it to the end of the hose.
4. Press the steam cleaner trigger (3 or 5) to release steam.
5. Use the handheld unit for cleaning countertops, tiles, grout, windows, upholstery, and other surfaces.



Figure 4: User demonstrating the steam mop in action.

DREI VERWENDUNGARTEN



SCHNELLE UND EFFIZIENTE ARBEIT

15 Sekunden

- blitzschnelles Aufheizen des Mops

25 Minuten ununterbrochene Arbeitszeit

- kontinuierliche Dampferzeugung für bis zu 25 Minuten

3 Minuten

- blitzschnelles Trocknen des Bodens

1.DAMPFMOPP

2.DAMPFREINIGER

3.DAMPFREINIGER MIT SCHLAUCH



15 s

25 min



GROÙE REICHWEITE DER ARBEIT

5,5 Meter - Reichweite des Dampfmops:

- Reinigen Sie auch sehr große Räume problemlos
- Kein häufiges Umstecken des Kabels in andere Steckdosen notwendig

6 Meter - Reichweite des Dampfreinigers mit angeschlossenem Schlauch



Figure 5: Three primary usage modes: 1. Steam Mop, 2. Handheld Steam Cleaner, 3. Handheld Steam Cleaner with Hose. Also shows the 5.5m steam mop range and 6m steam cleaner range with hose.

IDEAL FÜR JEDER OBERFLÄCHE



STOFFAUFSATZ



TEPPICHAUFSATZ




FENSTERAUFSATZ



PUTZTUCH FÜR POLSTER UND KLEIDUNG

FÜR SPEZIALAUFGABEN ENTWICKELT:

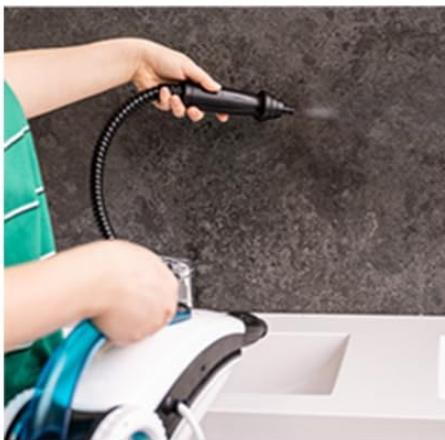


SCHLAUCHDÜSE



NYLONBÜRSTEN



METALLBÜRSTE

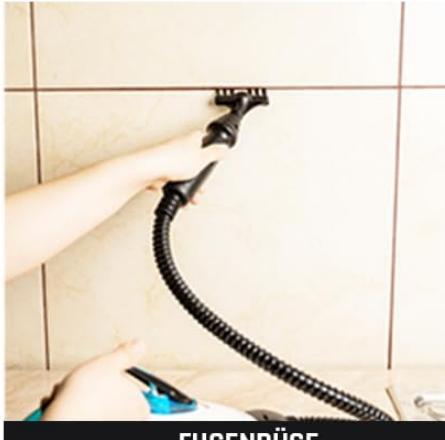

FUGENDÜSE



SPALTDÜSE



SCHABER

Figure 6: Ideal for various surfaces and special tasks, including fabric, carpet, windows, upholstery, and specific nozzles for hose use (grout, crevice, scraper, nylon brushes, metal brush).

ZUSÄTZLICHE ERLEICHTERUNGEN VON CLEAN SLIDE



180° - DREHBARER MOPFÜB

- ermöglicht den Zugang zu allen Ecken des Raumes

RICHTEN SIE DEN MOP DIREKT AUF DEN BODEN

- für eine gründliche Reinigung unter Möbeln



REINIGUNG MIT EINER ZUSÄTZLICHEN BÜRSTE

- ideal für besonders harten Verschmutzungen

BEQUEMES PARKEN

- Schieben Sie den unteren Teil des Körpers in die spezielle Vertiefung am Fuß, um den Mopp zu fixieren

Figure 7: Additional features: 180° swivel mop foot for access to all corners, direct cleaning under furniture, cleaning with an additional brush for stubborn dirt, and convenient parking feature.

MAINTENANCE

Cleaning the Microfiber Pads

The microfiber pads can be machine washed with mild detergent. Do not use bleach or fabric softeners, as these can damage the fibers. Air dry or tumble dry on low heat.

Emptying and Cleaning Tanks

After each use, empty any remaining water from the water tank and detergent from the detergent tank. Rinse both tanks with clean water and allow them to air dry before storage.

Replacing the Water Filter

The appliance features a replaceable water filter (4) to prevent limescale buildup. Replace the filter regularly, depending

on water hardness and frequency of use, to maintain optimal steam performance and extend the life of your device. Replacement filters can be purchased from authorized YOER retailers.

General Cleaning

Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or solvents. Ensure the appliance is completely dry before storing.

Storage

Store the steam mop in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is neatly wound around the cable winding hooks (2).

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty; Water filter clogged; Appliance not heated up; Limescale buildup.	Refill water tank; Replace water filter; Wait for steam ready indicator; Descale the appliance (refer to maintenance).
Water leaking from the unit.	Water tank cap not closed properly; Tank not inserted correctly; Overfilled tank.	Ensure tank cap is tight; Reinsert tank firmly; Do not overfill.
Mop leaves streaks on the floor.	Microfiber pad is dirty; Too much detergent used; Floor not suitable for steam cleaning.	Replace or clean microfiber pad; Use less detergent or none; Check floor type compatibility.
Appliance does not turn on.	Not plugged in; Power outlet faulty; Appliance malfunction.	Check power connection; Try a different outlet; Contact customer support if problem persists.

SPECIFICATIONS

Feature	Detail
Model Name	CleanSlide SMC01W
Brand	YOER
Color	White
Product Dimensions	20 x 32 x 112 cm (7.9 x 12.6 x 44.1 inches)
Water Tank Capacity	400 ml (13.5 fl oz)
Detergent Tank Capacity	120 ml (4.1 fl oz)
Power	1600 Watt
Voltage	230V

Feature	Detail
Heat-up Time	Approx. 15 seconds
Operating Time	Up to 25 minutes (continuous steam)
Cord Length	5.5 meters (18 feet) for mop, 6 meters (19.7 feet) with hose
Weight	2.7 kg (6 lbs)
Special Features	Multifunctional (Mop & Handheld), Quick Heating, High Power, Swivel Foot, Replaceable Water Filter



Figure 8: Visual representation of product dimensions and key specifications.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official YOER website. If you encounter any issues not covered in the troubleshooting section, please contact YOER customer service for assistance.

YOER Official Store: Visit [YOER Store on Amazon](#)

© 2023 YOER. All rights reserved.
This manual is subject to change without notice.

Related Documents - CleanSlide SMC01W

 <small>INSTRUKCJA OBSŁUGI INSTRUCTION MANUAL INSTRUKTION ZUR BEDIENUNG MORE LANGUAGES! Scan QR code</small>	<p>Yoer VC03G Ultimate Dynamics Cordless Vacuum Cleaner Instruction Manual Comprehensive instruction manual for the Yoer VC03G Ultimate Dynamics cordless vacuum cleaner, covering safety guidelines, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
 <small>Beautiful and Intelligent Home Appliances Lattimo EMF01S</small>	<p>Návod k obsluze Yoer Lattimo EMF01S Kompletní návod k obsluze pro kávovar Yoer Lattimo EMF01S, včetně bezpečnostních pokynů, tipů pro první použití, návodu k použití, čištění a údržby.</p>
 <small>Beautiful and Intelligent Home Appliances Mousso EMF02BK</small>	<p>Yoer Mousso EMF02BK Instrukcja Obsługi Ekspresu do Kawy Kompleksowa instrukcja obsługi ekspresu do kawy Yoer Mousso EMF02BK. Dowiedz się o bezpieczeństwie, obsłudze, czyszczeniu i rozwiązywaniu problemów z Twoim nowym urządzeniem AGD.</p>
 <small>Beautiful and Intelligent Home Appliances Nutrimo SJ01BK</small>	<p>Návod k obsluze Yoer Nutrimo SJ01BK Kompletní návod k obsluze pro odšťavňovač Yoer Nutrimo SJ01BK. Obsahuje bezpečnostní pokyny, montáž, použití, čištění, řešení problémů a záruční informace.</p>
 <small>DE01W SECCO</small>	<p>Yoer DE01W SECCO Dehumidifier: User Manual and Operating Guide This comprehensive user manual provides essential safety precautions, operating instructions, cleaning guidelines, and troubleshooting tips for the Yoer DE01W SECCO dehumidifier, ensuring optimal performance for a healthier home environment.</p>



[Yoer AquaCube HU02G Humidifier User Manual](#)

Comprehensive user manual for the Yoer AquaCube HU02G humidifier, covering safety instructions, operation, technical specifications, and maintenance.