

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Midea](#) /

› [Midea 18.7 Cu. Ft. Bottom Mount Freezer Refrigerator Instruction Manual](#)

Midea MRB19B7AWW

Midea 18.7 Cu. Ft. Bottom Mount Freezer Refrigerator Instruction Manual

Model: MRB19B7AWW

[Introduction](#) [Safety Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Midea 18.7 Cu. Ft. Bottom Mount Freezer Refrigerator. This appliance is designed to provide efficient and convenient food storage with its thoughtful layout, placing frequently accessed items at eye level. It features an electronic control system, reversible door swing, and bright LED interior lighting. This manual provides essential information for the safe installation, operation, and maintenance of your new refrigerator.



Figure 1: Front view of the Midea 18.7 Cu. Ft. Bottom Mount Freezer Refrigerator.

2. IMPORTANT SAFETY INFORMATION

Before operating your refrigerator, please read all safety instructions carefully to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

2.1 General Safety Precautions

- Ensure the refrigerator is properly grounded. Use a dedicated electrical outlet.
- Do not use extension cords or ungrounded adapters.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance contains R-290 or R-600A refrigerant. Handle with care and ensure proper ventilation during installation and servicing.
- Do not damage the refrigerant circuit.
- Children should be supervised to ensure they do not play with the appliance.
- Do not touch cold surfaces, especially when hands are damp or wet, as skin may stick to extremely cold surfaces.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any shipping damage. Keep packaging materials out of reach of children.

3.2 Location Requirements

Place the refrigerator on a strong, level floor. Allow adequate space around the unit for proper air circulation (at least 2 inches at the back and sides). Avoid direct sunlight or heat sources. Ensure the ambient temperature is suitable for appliance operation.

3.3 Leveling

Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. This prevents vibrations and ensures proper door sealing.

3.4 Reversible Door Swing

The door swing of this refrigerator can be reversed to open from either the left or right side, accommodating various kitchen layouts. Refer to the detailed instructions in your full user manual for the door reversal procedure. This process typically involves removing hinges and reattaching them on the opposite side.



Figure 2: Product dimensions for installation planning.

4. OPERATING YOUR REFRIGERATOR

4.1 Electronic Control

Your Midea refrigerator is equipped with an electronic control panel, typically located inside the fresh food compartment. This panel allows you to adjust temperature settings for both the refrigerator and freezer

sections. Consult the full manual for specific button functions and temperature range settings.

4.2 Refrigerator Compartment

The upper compartment is the refrigerator section, designed for fresh food storage. It features:

- **Adjustable Shelves:** Three toughened glass or plastic shelves can be repositioned to accommodate items of various heights.
- **Humidity-Controlled Crisper Bins:** Two crisper drawers are located at the bottom of the refrigerator compartment. These bins are designed to maintain optimal humidity levels, extending the freshness of fruits and vegetables.
- **LED Interior Lighting:** Bright LED lights illuminate the interior, making it easy to find items even in low-light conditions.



Figure 3: Interior layout of the refrigerator compartment.



Figure 4: Humidity-controlled crisper drawers for produce storage.

4.3 Freezer Compartment

The lower compartment is the freezer section, featuring a 2-level freezer drawer system. This design provides easy access and organization for your frozen foods.

4.4 Door Shelves

The refrigerator door is equipped with full-width door shelves, including gallon door storage, providing ample space for larger items like milk jugs and beverage bottles.

5. CARE AND MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the appearance and efficiency of your refrigerator.

- **Interior:** Clean the interior with a solution of mild soap and warm water. Wipe dry with a soft cloth. Remove shelves and drawers for thorough cleaning.
- **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. For stainless steel finishes, use a stainless steel cleaner.
- **Door Gaskets:** Clean door gaskets regularly to ensure a tight seal.
- **Condenser Coils:** Periodically clean the condenser coils (located at the back or bottom) to ensure

efficient operation. Unplug the unit before cleaning coils.

5.2 Defrosting

This refrigerator features an **Automatic Defrost System**, eliminating the need for manual defrosting of the freezer compartment. Frost buildup is automatically melted and evaporated.

5.3 Power Outage

In case of a power outage, keep the refrigerator and freezer doors closed to maintain temperature for as long as possible. Avoid opening the doors unnecessarily.

5.4 Vacation and Storage

For short vacations, leave the refrigerator operating normally. For long absences, empty the refrigerator, unplug it, clean it thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING GUIDE

Before calling for service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Check power cord connection; reset circuit breaker; check household power.
Temperature is too warm.	Temperature setting too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust temperature setting lower; minimize door openings; allow food to cool before placing in fridge; ensure proper clearance around unit.
Unusual noises.	Refrigerator not level; items vibrating inside; normal operating sounds (e.g., refrigerant flow, defrost cycle).	Level the unit; rearrange items; normal sounds are expected.
Door does not close completely.	Door gasket dirty or damaged; food package blocking door; refrigerator not level.	Clean or replace gasket; rearrange food; level the unit.
Water on floor.	Defrost drain clogged; excessive humidity.	Clear drain; ensure proper door sealing.

7. PRODUCT SPECIFICATIONS

Below are the key specifications for the Midea 18.7 Cu. Ft. Bottom Mount Freezer Refrigerator (Model: MRB19B7AWW):

Feature	Specification
Brand	Midea
Model Info	MRB19B7AWW
Capacity	18.7 Cubic Feet
Product Dimensions (D x W x H)	30.87 x 29.5 x 66 inches
Installation Type	Freestanding
Form Factor	Freezer Bottom
Defrost System	Automatic
Shelf Type	Toughened Glass or Plastic
Number of Shelves	3
Number of Doors	2
Certification	Energy Star
Included Components	Gallon Door Storage
Refrigerant	R-290 or R-600A
Finish Type	Matte

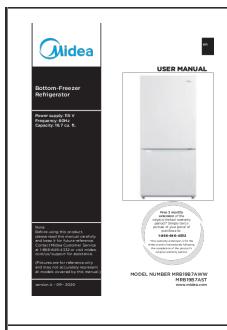
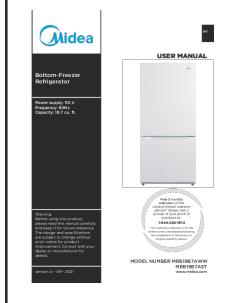
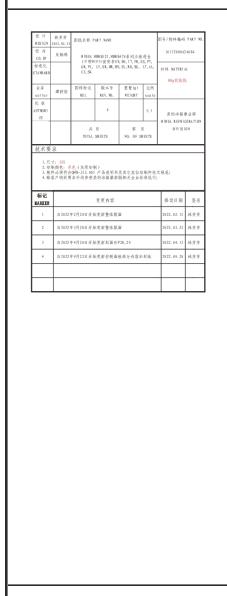
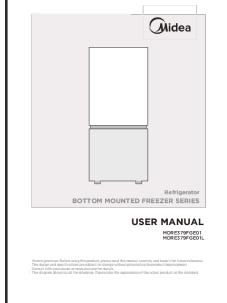
8. WARRANTY AND SUPPORT

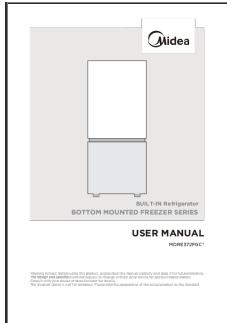
Midea provides a limited warranty for this appliance. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

8.1 Customer Support

For technical assistance, service requests, or to order replacement parts, please contact Midea Customer Service. Contact information can typically be found on the Midea official website or on the warranty card provided with your appliance.

When contacting support, please have your model number (MRB19B7AWW) and serial number ready.

	<p>Midea Bottom-Freezer Refrigerator User Manual (MRB19B7AWW, MRB19B7AST)</p> <p>This user manual provides comprehensive guidance for the Midea Bottom-Freezer Refrigerator, models MRB19B7AWW and MRB19B7AST. It covers safety instructions, installation, operation, care, and troubleshooting to ensure optimal use and longevity of the appliance.</p>
	<p>Midea Bottom-Freezer Refrigerator User Manual</p> <p>Comprehensive user manual for the Midea Bottom-Freezer Refrigerator (MRB19B7AWW, MRB19B7AST) covering safety, installation, operation, care, and troubleshooting.</p>
	<p>Midea Refrigerator User Manual - MDRB470, MDRB521</p> <p>User manual for Midea Bottom Freezer refrigerators (MDRB470, MDRB521). Contains safety, operation, maintenance, and troubleshooting guides.</p>
	<p>Midea Refrigerator User Manual: Guide to Bottom Freezer Models</p> <p>Comprehensive Midea Refrigerator User Manual for Bottom Freezer models (MDRB521MG, MDRB470MG). Includes safety, operation, maintenance, and troubleshooting for optimal appliance performance.</p>
	<p>Midea Bottom Mounted Freezer Series Refrigerator User Manual</p> <p>This user manual provides comprehensive instructions for the Midea Bottom Mounted Freezer Series refrigerator, including model numbers MDRE379FGE01 and MDRE379FGE01L. It guides users through installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of the appliance.</p>



[Midea MDRE372FGC Built-In Refrigerator User Manual](#)

Comprehensive user manual for the Midea MDRE372FGC bottom-mounted freezer series built-in refrigerator, covering installation, operation, maintenance, and troubleshooting.