

[Manuals.plus](#) /

› [Greater Goods](#) /

› Greater Goods Cold Press Juicer Model 0587 Instruction Manual

Greater Goods 0587

Greater Goods Cold Press Juicer Model 0587 Instruction Manual

Brand: Greater Goods | Model: 0587

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Greater Goods Cold Press Juicer. Keep this manual for future reference.

- Always ensure the juicer is properly assembled and locked before operation. Operating an unlocked juicer can cause damage to the machine and potential injury.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the provided plunger to push ingredients.
- Unplug the juicer from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the juicer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure all parts are dry before reassembling and storing.

PRODUCT OVERVIEW

The Greater Goods Cold Press Juicer is designed for efficient and quiet juice extraction, preserving nutrients and flavor from fruits and vegetables.

Included Components

- Juicer Motor Base
- Juice Chute (Feeding Tube)
- Auger (Masticating Screw)
- Strainer
- Pulp Spout
- Juice Container
- Pulp Container

- Plunger
- Cleaning Brush
- Recipe Book

Product Diagram



Figure 1: Fully assembled Greater Goods Cold Press Juicer.

SETUP AND ASSEMBLY

Follow these steps to correctly assemble your juicer before first use.

1. **Attach the Juice Chute:** Hold down the lock button on top of the juicer motor base. Slide the juice chute into place. Release the button to lock it. Ensure the button is fully upright, indicating it is locked. If not fully locked, do not proceed.



Image: Ensure the lock button is in the fully upright, locked position.

2. **Insert the Auger and Strainer:** Once the juice chute is securely attached and locked, insert the auger into the chute. Then, place the strainer over the auger.



Image: Auger and strainer correctly placed inside the chute.

3. **Attach the Pulp Spout:** Align the indicator arrow on the pulp spout with the unlock icon on the chute. Push the spout in and twist it counter-clockwise until the arrow aligns with the lock icon.
4. **Position Containers:** Place the juice container under the juice outlet and the pulp container under the pulp spout.

Assembly Video

Your browser does not support the video tag.

Video: This official video demonstrates the step-by-step assembly process for the Greater Goods Cold Press Juicer, ensuring correct setup before use.

OPERATING INSTRUCTIONS

Prepare your ingredients and follow these steps for optimal juicing results.

1. **Prepare Ingredients:** Wash all fruits and vegetables thoroughly. Cut larger items into pieces that fit easily into the 3-inch feed chute. Remove hard pits from fruits like peaches or avocados. For fibrous vegetables like celery, cut into shorter lengths to prevent clogging.



Image: The wide feed chute accommodates larger pieces of produce, reducing preparation time.

2. **Start Juicing:** Plug in the juicer. Press the ON button. Slowly feed the prepared ingredients into the feed chute. Use the plunger to gently guide ingredients down. Do not force ingredients.
3. **Reverse Function:** If ingredients become clogged, press and hold the "R" (Reverse) button for a few seconds to clear the blockage. Release the button and then press ON to resume juicing.
4. **Finish Juicing:** Once all ingredients are processed, allow the juicer to run for a few more seconds to extract any remaining juice and pulp. Press the OFF button and unplug the appliance.

Product Overview Video

Your browser does not support the video tag.

Video: This video provides a general overview of the Greater Goods Juicer, highlighting its features and operation.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your juicer.

1. **Disassembly:** Unplug the juicer. Press the lock button and remove the juice chute. Disassemble the pulp spout, strainer, and auger.



Image: Disassembled juicer parts ready for cleaning.

2. **Washing Parts:** Most removable parts (juice chute, auger, strainer, pulp spout, juice container, pulp container, plunger) are dishwasher-safe. For manual cleaning, rinse parts under running water immediately after use to prevent pulp from drying. Use the included cleaning brush to remove stubborn pulp from the strainer.
3. **Motor Base Cleaning:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
4. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the juicer. Store in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; not properly assembled/locked.	Ensure power cord is securely plugged in. Check that the juice chute lock button is fully upright and locked.
Juicer stops during operation or jams.	Too much produce fed at once; hard ingredients causing blockage.	Press and hold the "R" (Reverse) button for a few seconds to clear the blockage. Release and press ON to resume. Cut ingredients into smaller pieces.
Low juice yield or wet pulp.	Ingredients too soft; strainer clogged.	Alternate between soft and hard ingredients. Clean the strainer thoroughly.
Loud noise during operation.	Improper assembly; foreign object.	Disassemble and reassemble the juicer, ensuring all parts are correctly aligned and locked. Check for any foreign objects.

SPECIFICATIONS

Brand: Greater Goods

Model Number: 0587

Color: Stone Blue

Product Dimensions: 12.8"D x 5.1"W x 14.9"H

Item Weight: 7 Pounds

Material: ABS (Plastic)

Maximum Power: 150 Watts

Voltage: 120 Volts

Special Features: Easy to Clean, Large Feed Chute (75mm), Low Speed (85 - 115 RPM), Quiet & Powerful Motor, Reverse Function

Product Care Instructions: Most parts are Dishwasher Safe (except motor base and cleaning brush).

WARRANTY AND SUPPORT

For any questions, troubleshooting assistance, or warranty inquiries, please contact Greater Goods customer support.

Phone: 866.991.8494

Email: info@greatergoods.com

Please refer to your purchase documentation for specific warranty terms and conditions.

© 2024 Greater Goods. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question