

[Manuals.plus](#) /

› [NKF](#) /

› NKF AKB76037002 Remote Control Instruction Manual for RCA Smart TVs

NKF AKB76037002

NKF AKB76037002 Remote Control Instruction Manual

FOR RCA SMART 4K WEBOS TV MODELS

Introduction

This manual provides comprehensive instructions for the NKF AKB76037002 Replacement Remote Control, designed for various RCA WebOS 4K UHD LCD LED Smart TV models. This remote control requires no programming or pairing; simply insert batteries for immediate use.

Setup

Battery Installation

To begin using your remote control, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and remove it.
3. Insert two (2) new AAA 1.5V alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

NKF


ABS Material No Programming or Set Up Required.

Insert 2 New 1.5V AAA Alkaline
Batteries to replace your original
remote control perfectly.

(Not Included Batteries)



ABS MATERIAL

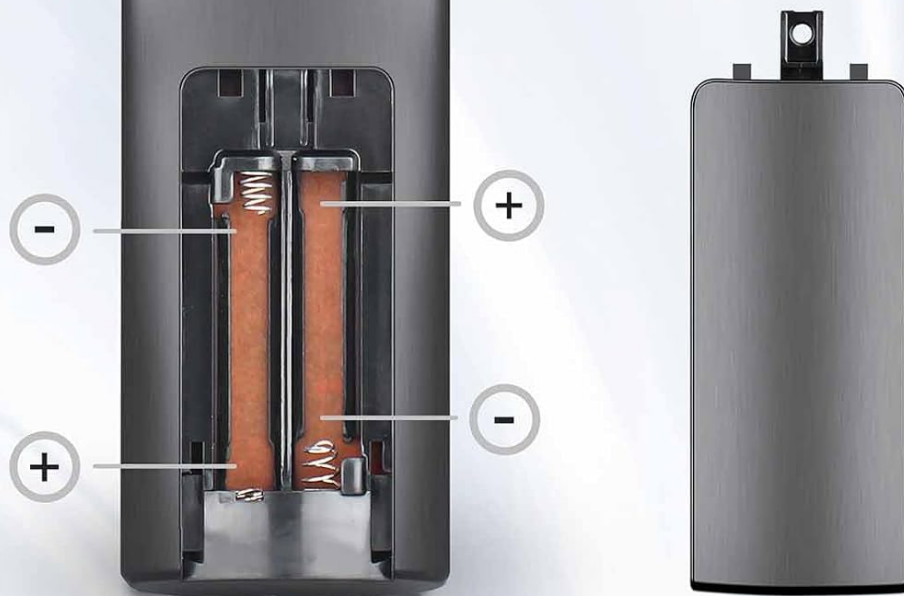

This image shows the back of the remote control with the battery cover removed, illustrating how to correctly insert two AAA 1.5V alkaline batteries, indicating positive and negative terminals.

Note: Batteries are not included with the remote control.

Operating Instructions

Remote Control Functions

The NKF AKB76037002 remote control features a standard layout for intuitive operation of your RCA Smart TV. Refer to the diagram below for button identification and their primary functions:

NKF



This diagram provides a detailed overview of the NKF AKB76037002 remote control, with labels indicating the function of each button, including power, number keys, volume, channel, navigation, and dedicated app buttons like Netflix and Prime Video.

- **Power Button (Red)**: Turns the TV on or off.
- **Number Keys (0-9)**: Directly select channels.
- **VOL +/-**: Adjusts the volume level.
- **CH PAGE +/-**: Changes TV channels sequentially.
- **Mute Button**: Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and selects options.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **HOME (House icon)**: Accesses the TV's main home screen.
- **INFO**: Displays information about the current program or input.
- **Netflix / Prime Video Buttons**: Direct access to these streaming applications.
- **Play/Pause/Stop/Fast Forward/Rewind**: Media playback controls.

General Operation

Once batteries are installed, point the remote control directly at your RCA TV. The remote operates using infrared (IR) technology. Ensure there are no obstructions between the remote and the TV's IR receiver. The effective remote distance is up to 10 meters (33 feet), though actual performance may vary based on environmental factors and TV model.



This image demonstrates the effective operating range of the remote control, showing it can function reliably up to 10 meters or 33 feet from the television, with actual distance depending on TV model and environmental factors.

Compatibility

This NKF AKB76037002 remote control is compatible with a range of RCA WebOS 4K UHD LCD LED Smart TV models. A partial list of compatible models includes:

NKF



AKB76037002 Remote Control For RCA Smart 4K Webos TV Models:

**RWOSU6547 RWOSU5549
RWOSU5847 RWOSU5047
RWOSU6547-B RWOSU5549-B
RWOSU8250 RWOSU7547
RWOSU7047 RWOSU6047
RWOSU5547 RWOSBU5048
RWOSU7049 RWOSU6547-B**



This image illustrates the NKF AKB76037002 remote control alongside a television, highlighting its compatibility with various RCA Smart 4K WebOS TV models.

- RWOSU6547
- RWOSU5549
- RWOSU5847
- RWOSU5047
- RWOSU6547-B
- RWOSU5549-B
- RWOSU8250
- RWOSU7547
- RWOSU7047
- RWOSU6047
- RWOSU5547
- RWOSBU5048

- RWOSU7049

If your RCA TV model is not listed but uses the AKB76037002 remote, this replacement should function correctly.

Maintenance

Care and Cleaning

- Keep the remote control dry. Avoid exposure to liquids, as this can damage internal components.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the remote control or subjecting it to strong impacts.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

Troubleshooting

Common Issues and Solutions

Problem	Solution
Remote is not responding.	◦ Ensure batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new AAA 1.5V alkaline batteries. ◦ Check for any obstructions between the remote and the TV's IR receiver. ◦ Ensure you are within the effective operating range (up to 10 meters).
Some buttons are not working.	◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Replace batteries, as low power can sometimes cause intermittent button functionality.
TV does not respond to remote commands.	◦ Verify that the remote control model (AKB76037002) is indeed compatible with your specific RCA TV model. ◦ Power cycle your TV by unplugging it from the wall for 30 seconds, then plugging it back in.

Specifications

The following are the technical specifications for the NKF AKB76037002 Remote Control:

NKF



This diagram provides the physical dimensions of the remote control: approximately 6.96 inches in length, 1.85 inches in width, and 0.78 inches in thickness.

Feature	Detail
Model Number	AKB76037002
Brand	NKF
Compatibility	RCA WebOS 4K UHD LCD LED Smart TVs
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Operating Range	Up to 10 meters (33 feet)
Dimensions (L x W x H)	6.69 x 2.76 x 0.91 inches (approx. 17 x 7 x 2.3 cm)

Feature	Detail
Item Weight	2.08 ounces (approx. 59 grams)
Material	ABS
Special Feature	No Programming Required

Customer Support

If you encounter any issues or have questions regarding your NKF AKB76037002 remote control, please contact the seller or manufacturer for assistance. Provide your product model number and a detailed description of the issue to facilitate a quicker resolution.

For general inquiries or to explore other NKF products, you may visit the [NKF Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMJRH6C>

More documents and user manuals: <https://manuals.plus/>