

[Manuals.plus](#) /

› [Tissot](#) /

› TISSOT Chrono XL Quartz Anthracite Dial Men's Watch T116.617.16.062.00 User Manual

TISSOT T116.617.16.062.00

TISSOT Chrono XL Quartz Anthracite Dial Men's Watch T116.617.16.062.00 User Manual

Model: T116.617.16.062.00

INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your TISSOT Chrono XL Quartz Anthracite Dial Men's Watch, model T116.617.16.062.00. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Front view of the TISSOT Chrono XL Quartz Anthracite Dial Men's Watch, showcasing the anthracite dial and chronograph subdials.

SETUP AND INITIAL USE


Upon receiving your watch, perform the following steps for initial setup.

1. Time and Date Setting

1. **Pull the crown out to position 2:** This is typically the first click. Turn the crown to set the date.
2. **Pull the crown out to position 3:** This is typically the second click. Turn the crown to set the time. Ensure the hands move clockwise until the correct time is displayed, paying attention to AM/PM for date change.
3. **Push the crown back to position 1:** This will engage the movement and start the watch.





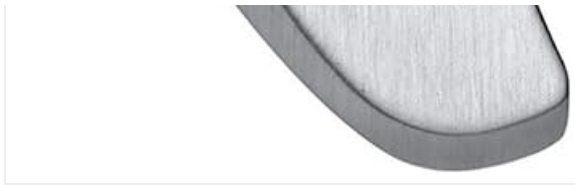

Side view of the watch, illustrating the crown (center) and chronograph pushers (top and bottom) used for setting and operating functions.

2. Strap Adjustment and Quick Release

The watch features an interchangeable quick-release bracelet/strap. To adjust or change the strap:

- Locate the small lever or pin on the underside of the strap where it connects to the watch case.
- Slide the lever to release the spring bar, detaching the strap from the watch.
- To attach a new strap, align the spring bar with the lug holes and slide the lever to secure it.





Detailed view of the black leather strap with white stitching and a standard buckle closure.

OPERATING THE CHRONOGRAPH

Your TISSOT Chrono XL watch is equipped with a chronograph function for measuring elapsed time.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph seconds hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time can be read from the chronograph subdials.
3. **Reset:** Press the bottom pusher (B) to reset the chronograph hands to zero. This can only be done when the chronograph is stopped.

Note: Refer to the image in the "Setup and Initial Use" section for the location of pushers A and B.

MAINTENANCE AND CARE

Proper care will help preserve the appearance and functionality of your TISSOT watch.

1. Water Resistance

This watch is water-resistant up to a pressure of 10 bar (100 meters / 330 feet). This makes it suitable for short periods of recreational swimming and showering. However, it is **not** suitable for diving or snorkeling. Always ensure the crown is fully pushed in before exposing the watch to water.

2. Cleaning

- For the case and metal bracelet: Use a soft cloth and mild soapy water. Rinse thoroughly with fresh water and dry with a soft cloth.

- For leather straps: Avoid prolonged exposure to water, direct sunlight, and extreme temperatures. Clean with a dry, soft cloth.

3. Battery Replacement

Your watch is powered by a quartz movement requiring a battery. The product specifications indicate a 9V battery is included, which is unusual for a wristwatch and may be a general placeholder. For accurate battery type and replacement, it is highly recommended to take your watch to an authorized Tissot service center or a qualified watchmaker. Attempting to replace the battery yourself may void the warranty and damage the watch.

TROUBLESHOOTING

If you encounter issues with your watch, consider the following common solutions.

1. Watch Not Functioning / Dead on Arrival

If the watch does not start or stops shortly after initial use, the battery may be depleted. While a new watch should have a functional battery, instances of depleted batteries upon arrival have been reported. In such cases, contact Tissot customer support or an authorized service center for battery replacement under warranty, if applicable.

2. Incorrect Time or Date

Refer to the "Time and Date Setting" section under "Setup and Initial Use" to correctly set the time and date. Ensure the crown is fully pushed back into position 1 after setting.

3. Chronograph Not Resetting to Zero

If the chronograph hands do not reset to zero, ensure the chronograph is stopped before pressing the reset pusher (B). If the issue persists, a recalibration may be required by an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	T116.617.16.062.00
Movement	Swiss Quartz
Case Material	316L Stainless Steel
Case Diameter	45.00 mm
Case Thickness	11.02 mm
Crystal	Synthetic Sapphire
Dial Type	Arabic, Anthracite
Strap Material	Leather (Black)
Band Width	22 mm
Clasp Type	Standard Buckle, Interchangeable Quick Release Bracelet

Water Resistance	10 bar (100 m / 330 ft)
Additional Features	Chronograph, Date display, Luminescent hands and indexes
Item Weight	82 Grams



Rear view of the watch case, showing engravings for Tissot, 1853, Stainless Steel, Sapphire Crystal, Water-Resistant 10bar (100m/330ft), and model number T116617 A.

WARRANTY AND SUPPORT

Your TISSOT Chrono XL Quartz watch is covered by a **2 Year International Warranty**. This warranty covers manufacturing defects and materials under normal use.

For warranty claims, service, or technical support, please contact an authorized Tissot retailer or visit the official Tissot website for service center locations. Always retain your proof of purchase.

Note: Unauthorized repairs or modifications may void your warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question