

Invicta 45968

Invicta Model 45968 Men's Quartz Analog Watch

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Invicta Model 45968 Quartz Analog Watch. This timepiece combines classic design with reliable quartz movement and chronograph functionality. To ensure optimal performance and longevity, please read this manual carefully before using your watch.



Image 1: Invicta Model 45968 watch with black leather strap and white dial. This watch features a stainless steel case, a white dial with three subdials, and a black leather strap with a buckle clasp.

2. SETUP

2.1 Unboxing

Upon receiving your Invicta watch, carefully remove it from its packaging. Inspect the watch for any signs of damage. The package should contain the watch and this instruction manual.



Image 2: Invicta watch packaging box. The watch comes in a distinctive yellow and black box, designed to protect the timepiece during transit and storage.

2.2 Setting the Time

1. Pull the crown (located on the right side of the watch case) out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Once the time is set, push the crown back into its normal position.

2.3 Strap Adjustment

The Invicta Model 45968 features a leather strap with a buckle clasp. To adjust the fit, simply thread the strap through the buckle and secure it at the desired hole for a comfortable fit on your wrist.

3. OPERATING THE WATCH

3.1 Basic Time Reading

The watch displays time using traditional hour, minute, and second hands on an analog dial.

3.2 Chronograph Function

Your watch is equipped with a chronograph (stopwatch) function. It typically operates using two pushers located above and below the crown.

- **Start/Stop:** Press the upper pusher to start the chronograph. Press it again to stop.
- **Reset:** While the chronograph is stopped, press the lower pusher to reset all chronograph hands to their zero positions.

3.3 Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water ingress.

- **50 Meters (5 ATM):** Suitable for showering and swimming in shallow water.
- **Not suitable for:** Scuba diving, snorkeling, or high-impact water sports.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture and harsh chemicals.

4.2 Battery Replacement

The watch is powered by a product-specific battery. When the watch stops running, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

4.3 Water Resistance Care

To maintain the water resistance of your watch, ensure the crown is always pushed in completely. Avoid exposing the watch to extreme temperature changes, which can affect the seals. Water resistance is not a permanent condition and may need to be re-sealed periodically by a professional.

4.4 Leather Strap Care

Leather straps are susceptible to wear and tear from moisture, sweat, and direct sunlight. Clean the strap with a damp cloth and mild soap if necessary, then allow it to air dry completely. Avoid prolonged exposure to water to prevent damage and discoloration.

5. TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is pushed in completely. If it is, the battery may need replacement.
- **Incorrect Time:** Reset the time as described in Section 2.2. If the time continues to be inaccurate, the movement may require servicing.
- **Water Inside the Watch:** If you notice condensation or water droplets inside the watch, immediately

take it to a qualified watch repair center. Do not attempt to open the watch yourself, as this will void the warranty and can cause further damage.

- **Chronograph Hands Not Resetting to Zero:** This may indicate a need for calibration or service. Consult a professional watch technician.

6. SPECIFICATIONS

Feature	Specification
Brand	Invicta
Model Number	45968
Display Type	Analog
Movement Type	Quartz
Power Source	Battery (1 product-specific, included)
Water Resistance	50 Meters (5 ATM)
Case Material	Stainless Steel
Case Diameter	44 mm
Case Thickness	10 mm
Crystal Material	Mineral Crystal
Strap Material	Leather
Strap Color	Black
Strap Width	22 mm
Band Length	190 mm
Clasp Type	Buckle
UPC	886678610433

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

Your Invicta watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service, or warranty inquiries, please contact Invicta customer support through their official website or the contact information provided in your warranty documentation. Do not attempt to repair the watch yourself, as this may void the warranty.

