

[Manuals.plus](#) /

> [GREENKINDER](#) /

> GREENKINDER Kids Instant Camera Refill Print Paper User Manual

GREENKINDER Thermal Print Paper Set

GREENKINDER Kids Instant Camera Refill Print Paper User Manual

Model: Thermal Print Paper Set

INTRODUCTION

Welcome to the GREENKINDER Kids Instant Camera Refill Print Paper manual. This guide provides essential instructions for the proper use and maintenance of your thermal print paper, ensuring optimal performance and print quality for compatible instant cameras.

PRODUCT OVERVIEW

This refill paper is specifically designed for instant print cameras, offering a safe, ink-free, and high-quality printing experience. It allows children to instantly print their captured moments.

- **Dimensions:** Each roll measures approximately 5.7 cm (2.24 inches) in length and 2.6 cm (1.02 inches) in width.
- **Quantity:** Each pack contains 5 individual rolls of thermal print paper.
- **Material:** Made from high-quality thermal coating, this paper is BPA-free, skin-friendly, and contains no harmful ingredients.
- **Features:** Provides clear, high-quality photo printing without the need for ink or toner. Printed photos are designed to be durable and resist fading.

WIDE RANGE OF APPLICATIONS



BPA Free



Safe



No ink
needed



DIY



Image: Five rolls of GREENKINDER instant camera refill print paper, highlighting the dimensions of each roll.

SETUP AND INSTALLATION

Follow these steps to correctly load the thermal print paper into your compatible instant camera:

1. **Open Compartment:** Locate and open the paper compartment of your instant camera.
2. **Insert Paper Roll:** Carefully place the thermal paper roll into the printer, ensuring the paper feeds correctly from the roll. The printable side should face the print head.
3. **Close Cover:** Close the compartment cover securely and push it back until it clicks into place.
4. **Ready to Print:** Your camera is now ready to print photos using the newly loaded paper.



Image: Step-by-step guide illustrating the process of loading thermal paper into an instant camera.

OPERATING INSTRUCTIONS

Once the paper is loaded, operate your instant camera according to its specific instructions to capture and print photos. The thermal paper will produce clear, ink-free images directly from the camera. Encourage children to personalize their printed photos by drawing or coloring on them with crayons or markers. This activity can stimulate creativity and add a unique touch to each picture.

Stimulate children's creativity

Puzzle graffiti



Image: A child coloring a printed photo, demonstrating creative engagement with the printed images.

MAINTENANCE AND STORAGE

To ensure the longevity and quality of your thermal print paper and the photos printed on it, please adhere to the following guidelines:

- **Storage:** Store unused paper rolls in a cool, dry environment, away from direct sunlight, high temperatures, and excessive humidity.
- **Handling:** Avoid touching the thermal surface of the paper unnecessarily, as oils from skin can affect print quality over time.
- **Printed Photos:** While printed photos are designed to be durable and resist fading, proper storage in albums or frames will further protect them.

COMPATIBILITY

This GREENKINDER Kids Instant Camera Printing Paper is designed for wide compatibility with various instant print camera brands. It is suitable for cameras that adopt approximately 1.02 inch (26mm) wide photo paper. We recommend verifying your specific camera's paper specifications in its user manual to ensure perfect fit and function.

TROUBLESHOOTING

If you encounter any issues while using the refill paper, please refer to the following common solutions:

Paper Does Not Fit in Camera

Solution: Ensure your camera is compatible with paper rolls that are 1.02 inches (26mm) wide and have a suitable diameter. Some camera models may require paper rolls with a smaller overall diameter or a different core size. Always check your camera's manual for exact paper specifications before purchasing refill paper.

Prints Are Faint or Blank

Solution: Verify that the paper roll is inserted correctly with the thermal (printable) side facing the print head. Also, ensure that your camera's battery is sufficiently charged, as low power can affect print quality.

PRODUCT SPECIFICATIONS

| Feature | Detail |
|------------------------------------|--|
| Brand | GREENKINDER |
| Paper Type | Thermal Print Paper |
| Roll Dimensions (Length x Width) | 5.7 cm x 2.6 cm (2.24 inches x 1.02 inches) |
| Quantity per Pack | 5 Rolls |
| Safety Features | BPA-Free, No Ink Required, Skin-Friendly |
| Print Quality | Clear and Durable |
| Material Features | Biodegradable |
| Approximate Sheet Count (per roll) | 96 sheets (based on 1.02 x 2.24 inches sheet size) |

Note: Specifications are approximate and may vary slightly.

CUSTOMER SUPPORT

For further assistance, technical support, or any inquiries regarding your GREENKINDER Kids Instant Camera Refill Print Paper, please contact GREENKINDER customer support through the retailer's platform where you purchased the product or visit the official brand website for contact information.