

Jesebang YT18

Jesebang Wireless Earbuds YT18 User Manual

Model: YT18

INTRODUCTION

This manual provides comprehensive instructions for the Jesebang Wireless Earbuds YT18. Please read this manual carefully before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.



Image: Jesebang Wireless Earbuds YT18 in their charging case, showcasing the sleek black design and LED display.

PACKAGE CONTENTS

Upon opening the package, verify that all the following items are included:

- Wireless Earbuds (2 units)
- Fast Charging Case (1 unit)
- Type-C Charging Cable (1 unit)
- Instruction Manual (1 unit)
- Multiple sizes of ear tips (S, M, L)

Touch intelligent design

 
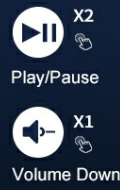 
 
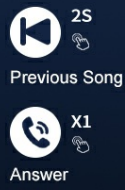 


Image: An overview of the product packaging and its contents, including the earbuds, charging case, USB-C cable, and user guide.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. The charging case features a Type-C interface for fast charging.


- Connect the provided Type-C charging cable to the charging port on the case.
- Connect the other end of the cable to a USB power source (e.g., wall adapter, computer USB port).
- The LED digital display on the case will indicate the charging status. A full charge takes approximately 1.5 hours for the case.
- Place the earbuds into the charging case. They will begin charging automatically. The individual earbud battery levels are displayed on the case.



Image: Illustration of the USB-C charging port on the case and the digital LED display showing battery levels for both the case and individual earbuds.

Dual LED Display and 48 Hours of Playback



  **Battery display**
Digital Headphones

 **Battery display**
Digital Case

Image: The charging case with its dual LED display, indicating the battery status of both the left and right earbuds, and the charging case itself. This display confirms the 48-hour total playtime capacity.

A single charge provides over 8 hours of playtime for the earbuds, with a total of 48 hours of playtime using the fully charged case.

2. Pairing with a Device

The earbuds feature one-step auto pairing for convenience.

1. Ensure the earbuds are charged.
2. Open the charging case and remove both earbuds. They will automatically enter pairing mode.
3. On your device (smartphone, tablet, computer), activate Bluetooth settings.
4. Search for available Bluetooth devices and select "YT18" from the list.
5. Once connected, a voice prompt will confirm successful pairing.

One-step Auto Pairing

- 1 Remove the earbuds from charging case.
- 2 Activate Bluetooth Setting, search & click "YT18" to connect.



Image: A visual guide demonstrating the one-step auto pairing process, showing the earbuds and a smartphone screen with "YT18" connected in Bluetooth settings.

The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

3. Wearing the Earbuds

For optimal sound quality and comfort, select the correct ear tip size and ensure proper fit.

- Choose the ear tips (S, M, L) that provide a snug and comfortable seal in your ear canal.
- Insert the earbud into your ear canal.
- Gently rotate the earbud and adjust the ear hook to rest securely behind your ear.
- Ensure a stable fit, especially during physical activity, to maintain sound quality and prevent them from falling out.



Image: Step-by-step illustration on how to correctly wear the earbuds, including selecting ear tip size and adjusting the ear hook for a stable fit.

OPERATING INSTRUCTIONS

1. Touch Controls

The Jesebang YT18 earbuds feature sensitive touch controls on each earbud for easy management of music and calls.

Function	Action
Play/Pause Music	Double-tap (x2) on either earbud
Next Song	Press and hold (2s) on the Right earbud
Previous Song	Press and hold (2s) on the Left earbud
Volume Up	Single-tap (x1) on the Right earbud
Volume Down	Single-tap (x1) on the Left earbud
Answer/End Call	Single-tap (x1) on either earbud
Reject Call	Press and hold (2s) on either earbud
Activate Voice Assistant (Siri, Google Assistant)	Triple-tap (x3) on either earbud

40H Long Playtime & LED Display



8 Hrs
Single Playtime



40 Hrs
Total Battery Life
of Charging Case



Image: A detailed visual guide to the touch controls for music playback, call management, and voice assistant activation.

2. Technology Overview

The Jesebang YT18 earbuds incorporate advanced technologies for an enhanced audio experience and reliable connectivity.

- **Bluetooth 5.3:** Equipped with the latest Bluetooth 5.3 technology, these earbuds offer faster transmission speeds, more stable connectivity, and reduced latency, ensuring a seamless audio experience up to 15 meters.
- **High-Fidelity Audio:** Featuring 13mm large speaker drivers, the earbuds deliver powerful bass, mellow midrange, and clear treble for vivid music reproduction.
- **ENC Noise Reduction:** Built-in high-quality microphones with ENC (Environmental Noise Cancellation) technology effectively isolate your voice from ambient sounds, providing clear communication during calls.

Adopt the advanced Bluetooth 5.3 technology

Has faster and more stable signal transmission, and successfully achieved non-disruptive low latency

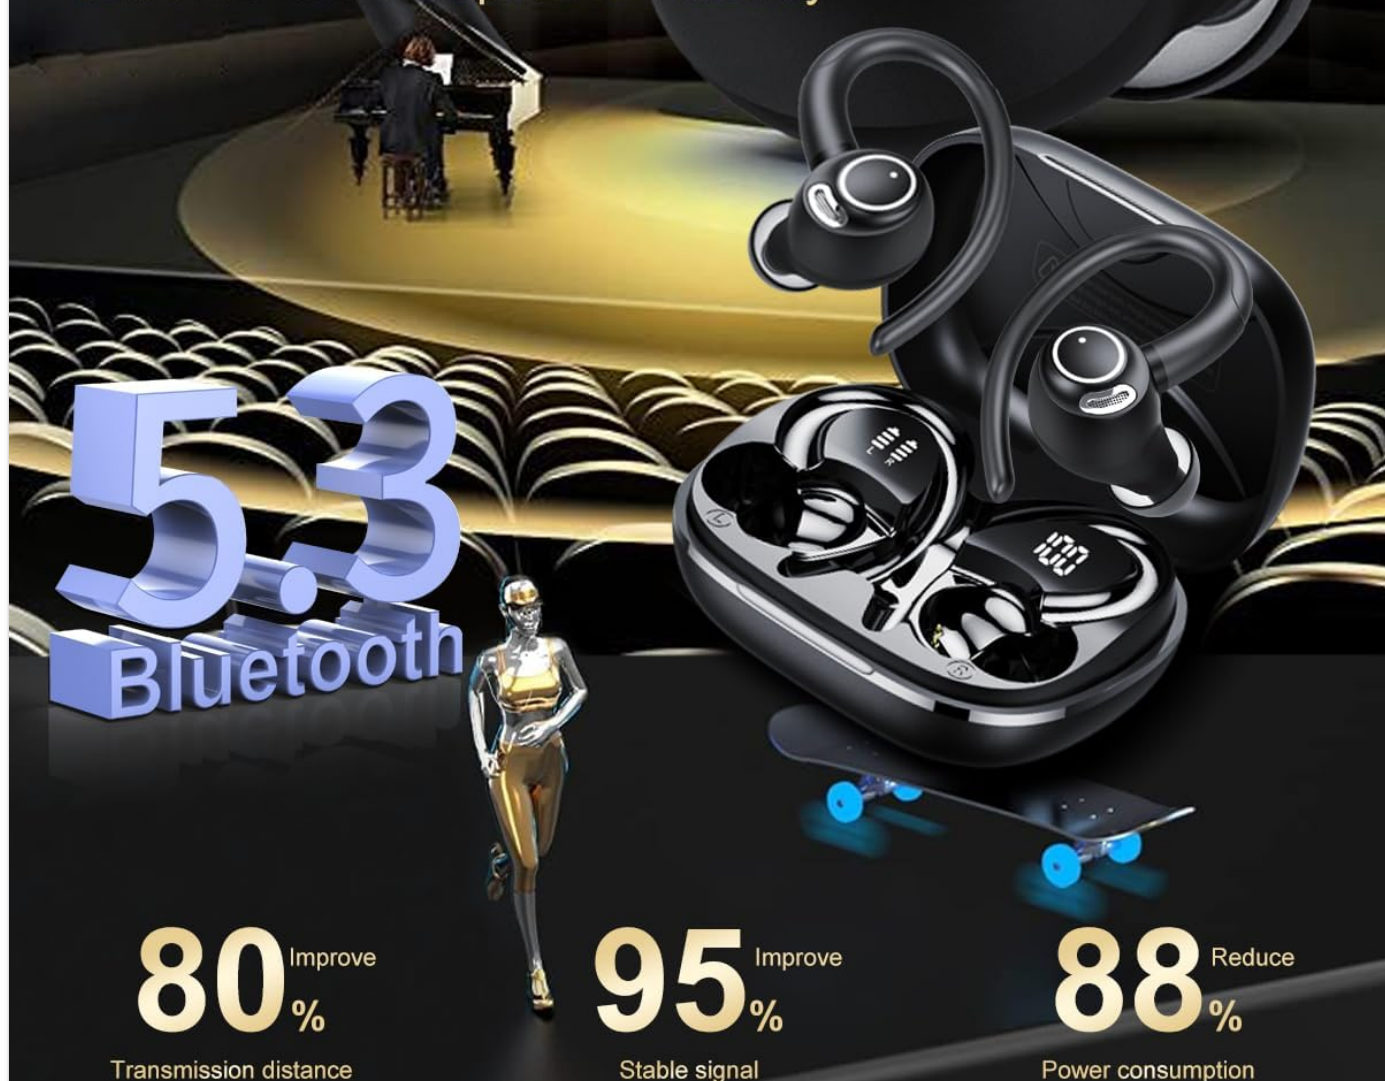 


Image: An illustration detailing the advantages of Bluetooth 5.3 technology, including improved transmission distance, stable signal, and reduced power consumption.

The unique stereo sound quality

This gives music a wider soundstage and superior clarity.

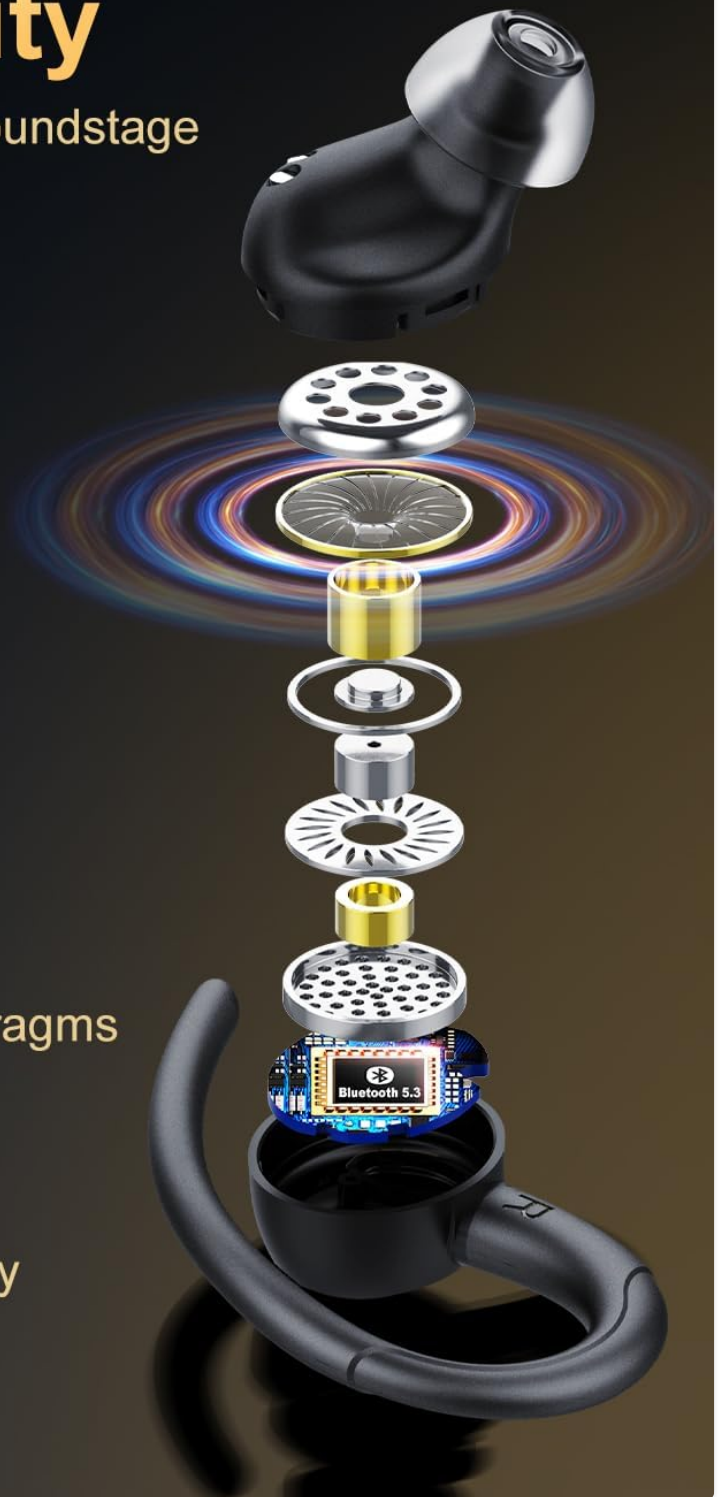 
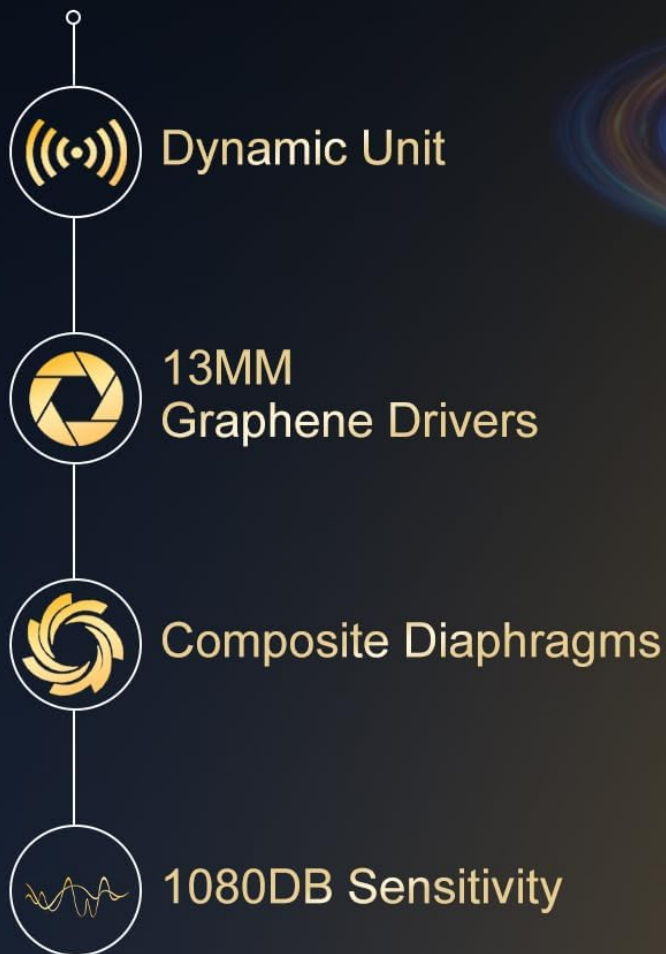 


Image: An exploded diagram illustrating the internal components responsible for the earbud's stereo sound quality, including the dynamic unit, 13mm graphene drivers, and composite diaphragms.

Dual Mic & cVc Noise Cancellation

Higher-order noise cancellation arithmetic and ENC ensures clear calls without any disruption along with dual mic in each earbud



Image: A visual representation of the dual microphone setup (Feedforward ENC Mic and Feedback ENC Mic) for effective noise cancellation during calls.

MAINTENANCE

1. Cleaning

Regular cleaning helps maintain the performance and longevity of your earbuds.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For ear tips, remove them from the earbuds and clean with a mild soap solution if necessary, then rinse thoroughly and dry completely before reattaching.
- Do not use abrasive cleaners or solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

2. Water Resistance (IP7)

The earbuds are rated IP7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for use during workouts and in light rain.

- Do not intentionally submerge the earbuds in water for extended periods or at depths greater than 1 meter.
- The charging case is **not** waterproof. Keep the charging case dry.
- If the earbuds get wet, wipe them dry completely before placing them back into the charging case to prevent damage.

Dust Resistant and Water

IP7 protection allows you to hear yours
favorite music even during physical activity



Image: Demonstrates the earbuds' IP7 dust and water resistance, suitable for use during physical activities.

3. Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged.

- Store in a cool, dry place away from extreme temperatures.
- Avoid exposing the earbuds or case to direct sunlight for prolonged periods.

TROUBLESHOOTING

If you encounter issues with your Jesebang YT18 earbuds, refer to the following common solutions:

Earbuds Not Pairing or Connecting

- **Ensure Earbuds are Charged:** Place both earbuds back into the charging case and ensure they are charging.
- **Reset Bluetooth Connection:**
 - a. On your device, go to Bluetooth settings and "forget" or "unpair" "YT18".
 - b. Turn off Bluetooth on your device, then turn it back on.
 - c. Remove both earbuds from the charging case and attempt to pair again.
- **Restart Device:** Sometimes, restarting your phone or computer can resolve connectivity issues.

No Sound or Low Volume

- **Check Volume Levels:** Ensure the volume on both your device and the earbuds is turned up.
- **Proper Fit:** Make sure the earbuds are properly seated in your ears and that you are using the correct size ear tips for a good seal.
- **Clean Earbuds:** Check for any earwax or debris blocking the speaker mesh and clean carefully.
- **Re-pair:** Try unpairing and re-pairing the earbuds with your device.

One Earbud Not Working

- **Check Charge:** Ensure both earbuds are charged. Place them back in the case and check the individual battery indicators.
- **Clean Contacts:** Clean the charging contacts on both the earbud and inside the charging case.
- **Reset:** Place both earbuds back into the charging case, close the lid, wait a few seconds, then open and remove them again. This can sometimes reset their connection.

SPECIFICATIONS

Feature	Detail
Model Name	YT18
Connectivity Technology	Wireless (Bluetooth 5.3)
Headphones Jack	No Jack
Ear Placement	In Ear (with EarHooks)
Control Method	Touch
Water Resistance Level	IP7 Waterproof
Battery Average Life (Earbuds)	8 hours (single charge)
Total Playtime (with Charging Case)	Up to 48 hours
Charging Time	Approx. 1.5 hours (for case)
Charging Interface	Type-C

Feature	Detail
Maximum Operating Distance	15 Meters
Frequency Range	20 Hz - 20,000 Hz
Noise Control	Sound Isolation (ENC for calls)
Material	Plastic
Product Dimensions	8.5 x 6 x 2.6 cm (case); 130 g
Manufacturer	Jesebang



Image: Detailed dimensions of the earbuds and their charging case.



Image: A close-up of the product packaging displaying key technical parameters and certifications.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Jesebang customer service. Refer to the product packaging or the official Jesebang website for contact details.

The product is manufactured by Jesebang.




Image: Back of the product box displaying regulatory compliance marks such as FCC ID, UKCA, CE, and RoHS.



Image: Side of the product box providing contact information for UK and EC representatives for regulatory compliance.

Related Documents

	<p>Jesebang BD86 True Wireless Stereo Earphones User Guide</p> <p>User guide for Jesebang BD86 True Wireless Stereo Earphones, covering product specifications, pairing, functions, charging, maintenance, and troubleshooting.</p>
	<p>User Guide for YT18 True Wireless Stereo Earphones</p> <p>Comprehensive user guide for the YT18 True Wireless Stereo Earphones, covering setup, functions, charging, and troubleshooting.</p>



[User Guide for YT18 True Wireless Stereo Earphones](#)

Comprehensive user guide for the YT18 True Wireless Stereo Earphones, covering setup, functions, charging, and troubleshooting.

lang: **score:17** filesize: 4.25 M page_count: 42 document date: 2023-03-23