

[Manuals.plus](#) /

› [NKF](#) /

› NKF RM-C3329 Remote Control User Manual for JVC and Konka TVs

NKF RM-C3329

NKF RM-C3329 Remote Control User Manual

For JVC and Konka Smart TVs

INTRODUCTION

This manual provides comprehensive instructions for the NKF RM-C3329 Remote Control. Designed as a direct replacement, it offers seamless operation for various JVC and Konka TV models without requiring complex programming. Please read this manual carefully to ensure proper use and to maximize your remote control's functionality.

SETUP

1. Battery Installation

The RM-C3329 remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

NKF

ABS Material No Programming or Set Up Required.

Insert 2 New 1.5V AAA Alkaline
Batteries to replace your original
remote control perfectly.

(Not Included Batteries)



ABS MATERIAL



Figure 1: Correct battery installation for the RM-C3329 remote control.

2. Initial Use and Pairing

Under normal circumstances, the RM-C3329 remote control does not require programming or pairing. Simply install the batteries, and it should function directly with your compatible JVC or Konka TV.

If the remote control does not work after installing the batteries, you may need to attempt pairing. For some models, pressing and holding the **LEFT button** and **MENU button** simultaneously for 5 seconds may initiate a pairing process. Refer to your TV's user manual for specific pairing instructions if this method is unsuccessful.

OPERATING INSTRUCTIONS

Button Functions Overview

The RM-C3329 remote control features a standard layout for intuitive navigation and control of your television. Below is a general overview of the main buttons and their functions:



Figure 2: Labeled diagram of the RM-C3329 remote control buttons and their functions.

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Netflix / YouTube Buttons:** Direct access to Netflix and YouTube applications.
- **Navigation Pad (Up, Down, Left, Right) and OK Button:** Used to navigate menus and confirm selections.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Menu Button:** Opens the TV's main menu for settings and options.
- **Number Keys (0-9):** Directly enter channel numbers.
- **Information (INFO) Button:** Displays program or input information.

Using the Remote

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV for optimal performance. The effective operating distance is typically up to 10 meters (33 feet).



Figure 3: Optimal operating distance for the remote control.

COMPATIBILITY

The NKF RM-C3329 Remote Control is compatible with a range of JVC and Konka TV models. This remote is designed to replace original remotes such as RM-C3329, RM-C3359, RM-C3369, and RM-C3363.

Compatible JVC and Konka TV models include, but are not limited to:

- 32H31A
- 40H33A
- 43U55A
- 50Q75A

- 50U55A
- 55Q75A
- 55U55A
- 65Q75A
- 65U55A
- 75Q75A
- 75U55A



RM-C3329 Remote Control for JVC Konka 4K Android TV Remote Replace Models:

32H31A 40H33A 43U55A
50Q75A 50U55A 55Q75A
55U55A 65Q75A 65U55A
75Q75A 75U55A

Figure 4: The RM-C3329 remote control and a list of compatible TV models.

TROUBLESHOOTING

If you experience issues with your RM-C3329 remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly installed batteries.	Replace batteries with new 1.5V AAA alkaline batteries, ensuring correct polarity.
Remote is not responding.	Obstruction between remote and TV sensor.	Ensure a clear line of sight between the remote and the TV's infrared sensor.
Remote functions intermittently.	Weak batteries or interference.	Replace batteries. Move closer to the TV. Ensure no strong light sources are interfering with the IR signal.
Remote does not control the TV after battery replacement.	May require re-pairing for specific TV models.	Try pressing and holding the LEFT button and MENU button simultaneously for 5 seconds. Consult your TV's manual for specific pairing instructions.

If the issue persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** RM-C3329
- **Brand:** NKF
- **Dimensions:** 6.97 x 1.77 x 0.91 inches (17.7 x 4.5 x 2.3 cm)
- **Weight:** 1.76 ounces (50 grams)
- **Power Source:** 2 x AAA 1.5V Alkaline Batteries (not included)
- **Material:** ABS
- **Special Feature:** No Programming Required (direct use)
- **Color:** Black



Figure 5: Dimensions of the RM-C3329 remote control.

OFFICIAL PRODUCT VIDEO

Watch this video for a demonstration of the NKF RM-C3329 Remote Control's functionality and ease of use.

Your browser does not support the video tag.

Video 1: Demonstration of the RM-C3329 Remote Control for JVC TV. This video showcases the remote's design and basic operation, including button presses and responsiveness.

WARRANTY AND SUPPORT

The NKF RM-C3329 Remote Control is built for reliability and durability. For any questions, technical assistance, or warranty inquiries, please refer to the seller's contact information provided at the point of purchase or visit the official NKF store on Amazon: [NKF Store](#).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMLCWNN9>

More documents and user manuals: <https://manuals.plus/>