

COOS BAY 10x10 with Netting

COOS BAY 10x10 Outdoor Patio Gazebo with Netting Instruction Manual

Model: 10x10 with Netting

Brand: COOS BAY

1. INTRODUCTION

Thank you for choosing the COOS BAY 10x10 Outdoor Patio Gazebo. This gazebo is designed to enhance your outdoor living space with its durable construction and thoughtful features. It includes a two-tier soft top canopy, integrated netting, and functional corner shelves, making it suitable for various outdoor settings such as backyards, lawns, decks, and gardens.

The canopy is crafted from 100% polyester fabric, offering durability, water resistance, and UV protection. Its dual-layered roof design incorporates built-in drainage holes to ensure proper airflow, minimize wind strain, and prevent debris accumulation. A built-in ceiling hook provides convenience for hanging lighting or a fan (not included), with a maximum load capacity of 60 lbs. The 4-sided zippered netting panels create a protective barrier against insects, ensuring a comfortable outdoor experience.



Image 1.1: The COOS BAY 10x10 Outdoor Patio Gazebo with Netting, showcasing its overall structure and design in an outdoor setting.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use of the gazebo. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble and disassemble the gazebo on a stable, flat surface.
- Do not exceed the weight limit of 60 lbs for the ceiling hook.
- Keep the gazebo away from heat sources and open flames.
- Always follow the manufacturer's instructions for proper use and maintenance.
- Ensure all connections are secure before use.
- In strong winds or heavy snow, it is recommended to remove the canopy and netting to prevent damage.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or

damaged, please contact customer support.

- Main Frame Components (Alloy Steel)
- Two-Tier Canopy Fabric (100% Polyester)
- 4-Sided Zippered Netting Panels
- Corner Shelves
- Assembly Hardware (screws, bolts, etc.)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly typically requires two people. Follow the step-by-step instructions provided in the included manual for detailed guidance. Below are general steps and visual aids.

4.1 Frame Assembly

Begin by laying out all frame components on a flat, stable surface. Connect the main frame sections according to the diagrams in your manual. Ensure all locking mechanisms click into place securely.

Video 4.1: General setup instructions for a 10x10 screen house, demonstrating frame expansion and initial canopy attachment. This video provides a visual guide for similar gazebo assembly processes.

4.2 Canopy and Netting Attachment

Carefully drape the main canopy fabric over the assembled frame. Secure the canopy to the frame using the integrated Q-ring connections and any other attachment points. The two-tier design allows for proper ventilation.



Heavy-duty Polyester

Easy Q-ring Connection

Long Tieback

Reasonable Slope Roof Design

Image 4.2: Detailed view of the heavy-duty polyester fabric, easy Q-ring connection for the netting, long tiebacks, and the reasonable slope roof design with drainage holes.

Attach the 4-sided zippered netting panels to the gazebo frame. Ensure the zippers are aligned for easy opening and closing. The netting can be tied back to the posts when not in use.

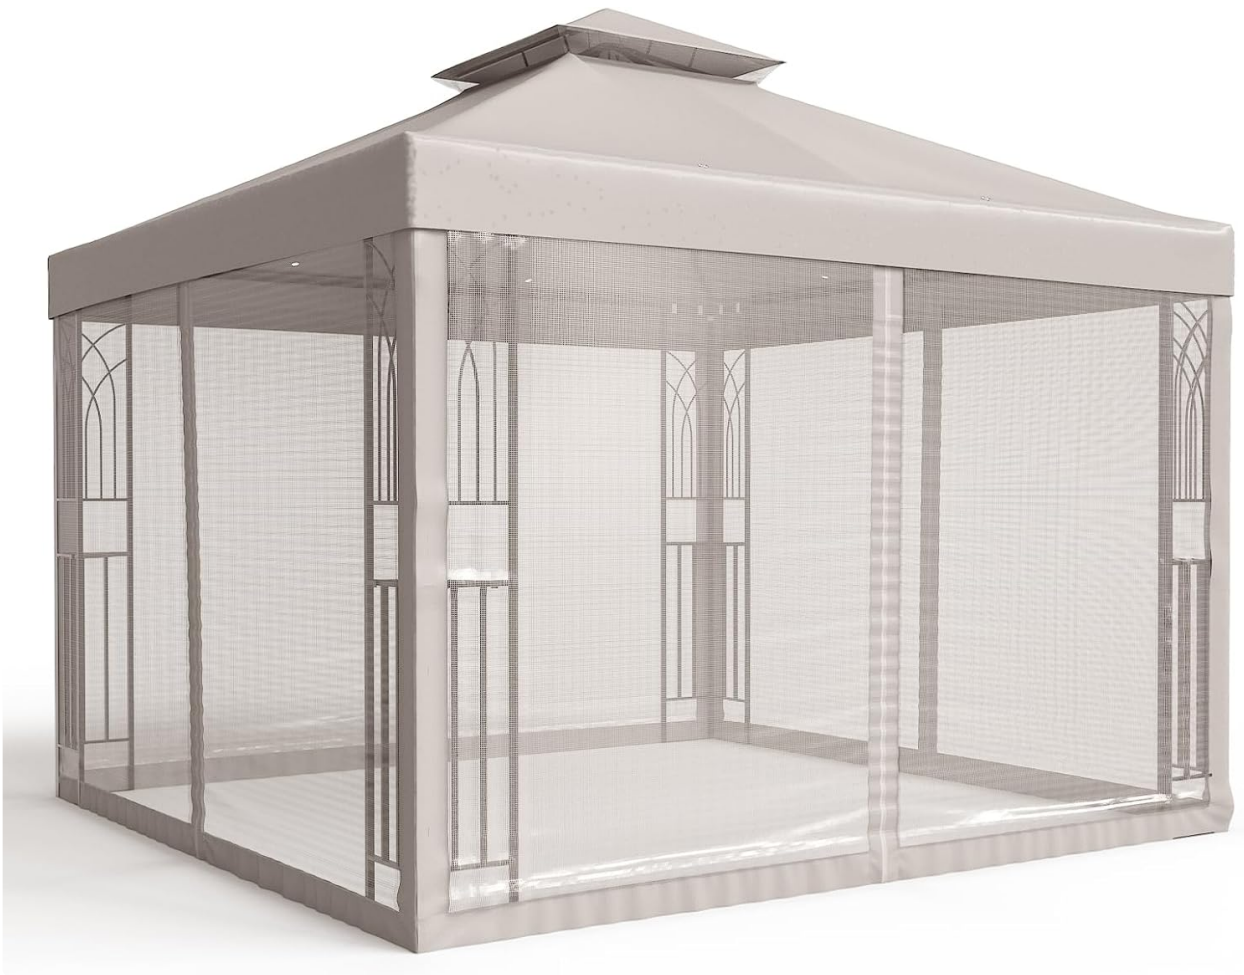


Image 4.3: The gazebo with its 4-sided zippered netting fully closed, providing protection from insects.

4.3 Corner Shelves Installation

Install the triangular corner shelves onto each decorative leg. These shelves provide convenient storage or display space for small outdoor items.

CONVENIENT CORNER SHELF

Shelf for **Flowers** or **Essential Outdoor Items**



Image 4.4: A close-up view of one of the functional corner shelves, ideal for holding plants or other small items.

5. OPERATING INSTRUCTIONS

5.1 Using the Netting

The gazebo features 4-sided zippered netting panels. To close the netting, simply pull the zippers together along each side. To open, unzip and use the long tiebacks to secure the netting to the gazebo posts, allowing for an open-air feel.

5.2 Utilizing the Ceiling Hook

A built-in hook is located at the center of the gazebo's ceiling. This hook can support up to 60 lbs and is suitable for hanging outdoor lighting, decorative elements, or a small fan to enhance comfort during warmer weather.

BUILT-IN CEILING HOOK

Convenient to Hang Your Fan and Light

✓ Max. Weight: **60 lbs**



Image 5.1: The built-in ceiling hook, designed for hanging lights or a fan, with a maximum weight capacity of 60 lbs.

6. MAINTENANCE

Regular maintenance will prolong the life and appearance of your COOS BAY gazebo.

- **Canopy Cleaning:** Clean the polyester canopy fabric with mild soap and water. Rinse thoroughly and allow to air dry completely before storage or prolonged closure.
- **Frame Care:** Inspect the alloy steel frame periodically for any signs of rust or damage. Clean with a damp cloth and mild detergent. Apply rust-preventative paint if necessary.
- **Netting Maintenance:** The netting can be gently wiped clean with a damp cloth. Ensure it is dry before zipping up for extended periods to prevent mildew.
- **Seasonal Storage:** In regions with harsh winters or extreme weather conditions, it is recommended to remove the canopy and netting for storage indoors to prevent damage and extend product life.
- **Water Pooling:** The two-tier roof is designed with drainage holes to minimize water pooling. However, during heavy rain, periodically check for any accumulated water and gently push it off to prevent stretching or damage to the fabric.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Assembly Difficulties:** If you encounter difficulties during assembly, ensure you have followed all steps in the instruction manual. Having a second person can significantly ease the process, especially when attaching the canopy or lifting the frame.
- **Water Accumulation on Canopy:** While the canopy has drainage holes, extreme rainfall might lead to some water pooling. Gently push up on the underside of the canopy to release accumulated water. Ensure the canopy is tautly installed to minimize sagging.
- **Gazebo Instability:** Ensure all frame connections are fully locked and secured. If using on soft ground, utilize ground stakes (if included) for added stability. For decks, consider bolting the gazebo down as per local regulations and safety guidelines.
- **Insect Entry:** Ensure all netting zippers are fully closed and there are no gaps between the netting and the ground or frame. Check for any tears in the netting and repair as needed.

8. SPECIFICATIONS

Feature	Specification
Brand	COOS BAY
Material	Alloy Steel, Polyester
Product Dimensions	118"L x 118"W x 110.8"H (10x10 feet)
Item Weight	75 Pounds
Frame Material	Alloy Steel
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Color	Beige

9. WARRANTY AND SUPPORT

COOS BAY offers a 1-year limited after-sale protection from the original date of purchase. This warranty covers manufacturing defects and ensures your satisfaction with the product.

For any questions, concerns, or warranty claims, please do not hesitate to contact COOS BAY customer support. You can typically find contact information on the product packaging or through the retailer where you purchased the gazebo.

Additional support options may include:

- Online FAQs and troubleshooting guides.
- Replacement parts ordering.

