

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Arkaia](#) /

› Replacement Remote Control for Metz TV 32TQ93 Sirius | 32TR14 Linea 32FHD S2 | 32TR37M2 PUROS 32 - User Manual

Arkaia 32TQ93 Sirius, 32TR14 Linea 32FHD S2, 32TR37M2 PUROS 32

User Manual: Arkaia Replacement Remote Control

For Metz TV Models: 32TQ93 Sirius, 32TR14 Linea 32FHD S2, 32TR37M2 PUROS 32

INTRODUCTION

This manual provides comprehensive instructions for the Arkaia replacement remote control, designed to be fully functional with specific Metz TV models including 32TQ93 Sirius, 32TR14 Linea 32FHD S2, and 32TR37M2 PUROS 32. Please read this manual carefully to ensure proper use and longevity of your remote control.



Figure 1: Arkaia Replacement Remote Control (Left) and a similar model (Right).

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

OPERATING INSTRUCTIONS

This replacement remote control is pre-programmed for the specified Metz TV models and typically requires no additional setup or pairing. Simply point the remote control towards your TV and begin using it.

Keys & Functions LAYOUT











	ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
		POWER	YELLOW / 	YELLOW
		MUTE	BLUE / 	BLUE
MENU		MENU	F1	SHIFT+1
EXIT		EXIT	F2	SHIFT+2
1/2/3/4/5		1/2/3/4/5	F3	SHIFT+3
6/7/8/9/0		6/7/8/9/0		
AV		 / SOURCE		
R		-/--		
TEXT				
VOL+		VOL+		
VOL-		VOL-		
P+		P+		
P-		P-		
UP		UP		
DOWN		DOWN		
LEFT		LEFT		
RIGHT		RIGHT		
OK		OK		
TV		TV/DTV		
INFO		INFO		
EPG		EPG		
WHITE / 		FAV		
 				
RED / 		RED		
GREEN / 		GREEN		

Figure 2: Keys & Functions Layout for the Arkaia Replacement Remote Control.

Button Functions Overview:

Button Name	Function
POWER	Turns the TV on or off.
MUTE	Mutes or unmutes the TV sound.
MENU	Accesses the TV's main menu.
EXIT	Exits the current menu or on-screen display.
0-9	Direct channel selection.
AV / SOURCE	Selects input source (HDMI, AV, etc.).
VOL+ / VOL-	Adjusts volume up or down.
P+ / P-	Changes channels up or down.
Navigation Arrows (UP, DOWN, LEFT, RIGHT)	Navigates through menus and options.
OK	Confirms selections in menus.
INFO	Displays program information.
EPG	Accesses the Electronic Program Guide.

Button Name	Function
FAV	Accesses favorite channels list.
Color Buttons (RED, GREEN, YELLOW, BLUE)	Perform specific functions within menus or applications, as indicated on the TV screen.

Note: Some buttons may have dual functions or specific uses depending on the TV model and current mode (e.g., TV, DVD, SAT). Refer to your TV's original manual for detailed button functionalities.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaners, as they may damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to the "Battery Installation" section for instructions.

Storage:

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
	Obstruction between remote and TV.	Ensure a clear line of sight between the remote's IR emitter and the TV's IR receiver.
	Remote control is out of range.	Move closer to the TV (within 10 meters).
Some buttons do not function.	Specific TV model compatibility.	Verify that your TV model is listed as compatible. Not all buttons may be supported by every TV model.
	Dirty contacts under buttons.	This typically requires professional cleaning or replacement.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Brand:** Arkaia
- **Compatible Devices:** Metz Television (Models: 32TQ93 Sirius, 32TR14 Linea 32FHD S2, 32TR37M2 PUROS 32)
- **Connectivity Technology:** Infrared, Radiofrequency
- **Controller Type:** Button Control
- **Maximum Range:** 10 Meters
- **Battery Description:** Alkaline (AAA, not included)

WARRANTY AND SUPPORT

This Arkaia replacement remote control comes with a **2-year warranty** from the date of purchase, as stated by the manufacturer. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding the product, please contact the seller or manufacturer directly through the platform where the purchase was made. Please have your purchase details ready when contacting support.