

Prism

6' Pre-Lit Prismatic Snowman Christmas Decoration User Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your 6' Pre-Lit Prismatic Snowman Christmas Decoration. This Prismatic Snowman features innovative materials to create a unique prismatic effect, enhanced by 450 cool white LED lights with a twinkle effect. Designed for both indoor and outdoor use, this 6-foot tall snowman is an ideal addition to your holiday decor.



Figure 1: The 6-foot Pre-Lit Prismatic Snowman in an outdoor setting, showcasing its illuminated prismatic design.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembly and operation. Failure to follow these instructions may result in injury or damage.

- **Outdoor use only.** Do not use in inclement weather conditions such as heavy rain, snow, or strong winds.
- **Unplug when not in use.** Always disconnect the power cord from the outlet when the decoration is not in operation or when unattended.
- Do not allow children to play on or near the display. This is not a toy.
- Keep away from flammable materials. Ensure the decoration is placed a safe distance from any combustible items.
- This product is intended for holiday use only and should be stored in a cool, dry place when not in use.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- 1 x 6' Prismatic Snowman Unit (with pre-installed 450 cool white LED lights and 5' lead cord)
- 4 x Yard Stakes



Figure 2: The product packaging, indicating the 6-foot height and inclusion of 4 yard stakes.

SETUP INSTRUCTIONS

Follow these steps to set up your Prismatic Snowman.

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage.
2. **Positioning:** Choose a flat, stable location for the snowman, ensuring it is away from foot traffic and flammable materials. The 5-foot (1.52 m) lead cord provides flexibility for placement near a power outlet.
3. **Assembly (if required):** The snowman unit is largely pre-assembled. Ensure all sections are securely connected.
4. **Secure with Stakes:** For outdoor use, use the provided 4 yard stakes to secure the snowman to the ground. Insert the stakes through the designated loops or points at the base of the snowman and firmly push them into the soil to prevent tipping, especially in windy conditions.
5. **Connect Power:** Plug the 5-foot lead cord into a suitable outdoor-rated electrical outlet. Ensure the outlet is protected from moisture.



Figure 3: The snowman positioned, illustrating its full height and structure before staking.

OPERATING INSTRUCTIONS

Operating your Prismatic Snowman is straightforward.

- 1. Power On:** Once plugged into a power source, the 450 cool white LED lights will illuminate automatically, displaying a twinkle effect.

2. **Power Off:** To turn off the snowman, simply unplug the lead cord from the electrical outlet.

Note: There are no additional controls or settings for light patterns; the twinkle effect is integrated.



Figure 4: Detail of the snowman's illuminated surface, highlighting the prismatic effect and LED lights.

MAINTENANCE

Proper care will extend the life of your Prismatic Snowman.

- **Cleaning:** Disconnect from power before cleaning. Wipe the surface gently with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, especially after the holiday season, unplug the unit and allow it to dry completely. Disassemble if necessary and store in its original packaging or a similar protective container. Store in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Bulb Replacement:** The LED bulbs are designed for long life (approximately 25,000 hours) and are generally not user-replaceable. If a section of lights fails, inspect the wiring for any visible damage.



Figure 5: Detailed view of the snowman's prismatic surface, illustrating the material and light distribution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Snowman does not light up.	Not plugged in. Power outlet is not active. Damaged power cord or internal wiring.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another device. Inspect the cord for cuts or damage. If damaged, discontinue use and contact customer support.
Snowman tips over easily.	Not properly secured with stakes. Uneven ground. Strong winds.	Ensure all 4 yard stakes are fully inserted into the ground. Relocate to a more level surface. Consider additional anchoring in very windy conditions or temporarily bring indoors.
Lights are dim or flickering.	Voltage fluctuation. Partial circuit issue.	Ensure the power source is stable. Unplug and re-plug the unit. If the issue persists, contact customer support.

SPECIFICATIONS

Model Number	Prism
Brand	Generic
Assembled Dimensions (L x W x H)	58" x 27" x 72" (approx. 147 cm x 68.5 cm x 183 cm)
Assembled Weight	19.9 lbs (approx. 9 kg)
Frame Material	Coated Metal
Light Type	LED
Number of Lights	450
Light Color	Cool White (with twinkle effect)
Lead Cord Length	5 feet (1.52 m)
Intended Use	Indoor and Outdoor Holiday Decoration
Included Accessories	4 Yard Stakes


WARRANTY AND SUPPORT


Specific warranty information for this product is not provided in the available documentation. For any product support, replacement parts, or inquiries, please refer to the contact information provided on the product packaging or the retailer's website where the product was purchased.

For replacement parts, the packaging indicates: "Should you require replacement parts, please call 1-800-833-5390 from 8 A.M. to 5 P.M. CST Monday-Friday."

You may also find more information at SamsClub.com or by emailing membersmark@samsclub.com.


Related Documents - Prism

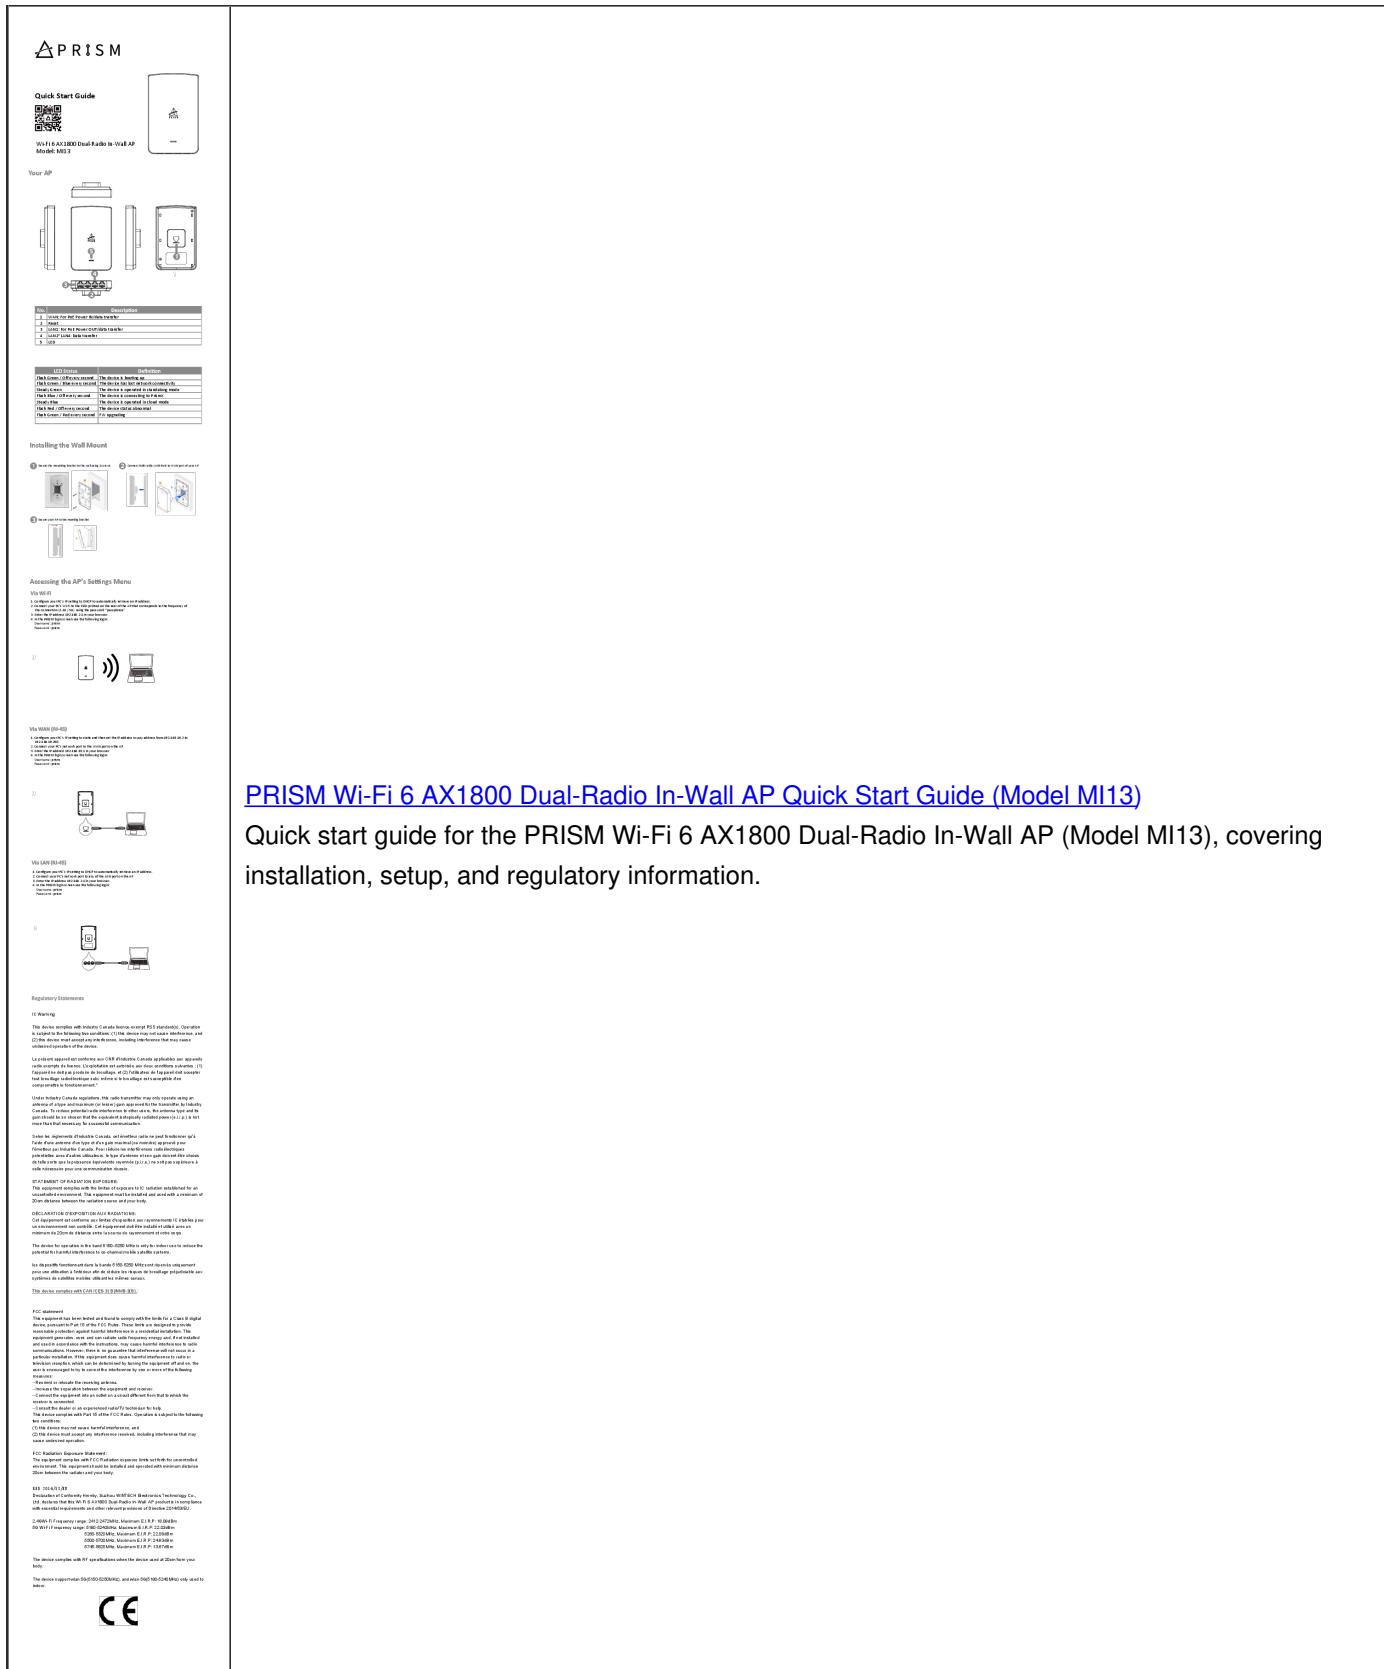

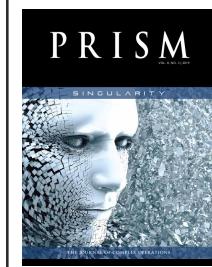


[PRISM Journal Vol. 8, No. 3: Singularity - Defense and Technology Insights](#)

Explore the 'Singularity' theme in PRISM, National Defense University's quarterly journal. Features articles on Cyber Physical Systems, Directed Energy Weapons, Neuroweapons, and global telecommunications competition, offering insights for defense and national security professionals.

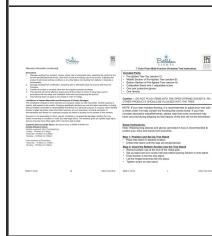

[Bethlehem Lights 7' Color Prism Multi-Function Christmas Tree: Setup, Operation, and Warranty Guide](#)

Comprehensive guide for the Bethlehem Lights 7' Color Prism Multi-Function Christmas Tree, covering setup instructions, remote control operation, app control, tree storage, troubleshooting, and warranty information.

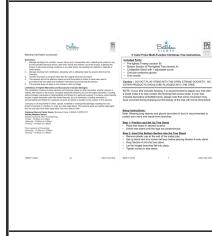

[Bethlehem Lights 5' Color Prism Multi-Function Christmas Tree: Setup, Operation, and Warranty Guide](#)

Detailed instructions for setting up, operating, and maintaining your Bethlehem Lights 5' Color Prism Multi-Function Christmas Tree. Includes remote control and app usage, troubleshooting, storage, and warranty information.



[Bethlehem Lights 10.5' Color Prism Christmas Tree: Setup, Operation, and Warranty Guide](#)

Detailed instructions for setting up, operating the remote and app, troubleshooting, and warranty information for the Bethlehem Lights 10.5' Color Prism Multi-Function Christmas Tree.



[Manuale di Upgrade Prism Smart Cover: da Prism Basic a Prism Solar](#)

Guida dettagliata per l'aggiornamento del caricatore Silla Prism Basic a Prism Solar utilizzando la Smart Cover. Include istruzioni passo-passo, note importanti e informazioni sul prodotto.