

- Manuals.plus /
- > [WTTHAI](#) /
 - > WTTHAI Replacement Remote Control for SEIKI TV User Manual

WTTHAI For SEIKI TV

WTTHAI Replacement Remote Control for SEIKI TV - User Manual

1. INTRODUCTION

This manual provides instructions for the WTTHAI Replacement Remote Control, designed for various SEIKI TV models. This remote offers full functionality without the need for programming or pairing, serving as a direct replacement for your original remote.

2. PRODUCT OVERVIEW

The WTTHAI Replacement Remote Control is engineered to seamlessly operate your compatible SEIKI TV. It features an ergonomic design for comfortable handling and provides easy access to all essential TV functions, including channel selection, volume control, menu navigation, and dedicated app buttons.





Image: Front view of the WTTHAI Replacement Remote Control, displaying all buttons including power, mute, number pad, navigation, volume, channel, and dedicated app buttons like Netflix, YouTube, and Pandora.

3. SETUP

3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.





Image: Rear view of the WTTHAI Replacement Remote Control with the battery compartment open, showing two AAA batteries inserted and the battery cover detached.

No programming or pairing is required. The remote is ready to use once batteries are installed.

4. OPERATING INSTRUCTIONS

This remote control provides full access to all standard functions of your compatible SEIKI TV.

4.1 Basic Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **MENU:** Accesses the TV's main menu.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.

4.2 Media Playback Controls

- **PLAY/PAUSE:** Starts or pauses media playback.
- **STOP:** Stops media playback.
- **REWIND:** Rewinds media.
- **FAST FORWARD:** Fast forwards media.

4.3 Dedicated App Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **NETFLIX**
- **YouTube**
- **PANDORA**
- **vudu**
- **Toon Goggles**
- **AccuWeather**







Image: Angled view of the WTTHAI Replacement Remote Control, highlighting the layout of the buttons and their labels.

5. COMPATIBILITY

This replacement remote control is compatible with the following SEIKI TV models:

- SE40HYT
- SE40FYT
- SE50FYT
- SE32HY27-D
- SE55UET
- SE32HYT
- SE48UXC4T
- SE40FYP1T
- SE58UY06
- SE65UY06
- SE43FYT
- SE32HY19T
- SE-50FYT
- SE43FGT

Note: This is an IR (Infrared) remote control and does not support auxiliary functions beyond standard IR commands.

6. MAINTENANCE

6.1 Battery Replacement

When the remote control's performance degrades or it stops responding, replace the batteries. Always use new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

7. TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are installed correctly with the correct polarity. Replace with new batteries if necessary.
- **Remote range is limited:** Check for obstructions between the remote and the TV's IR receiver. Ensure the batteries are not low.
- **Specific buttons not working:** Verify that the remote is pointed directly at the TV. If only certain buttons fail, the remote might be faulty and require replacement.

If issues persist after troubleshooting, please refer to the support information.

8. SPECIFICATIONS

- **Model:** For SEIKI TV
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Dimensions:** 9.65 x 3.03 x 0.79 inches (24.5 x 7.7 x 2 cm)
- **Weight:** 3.36 ounces (95.2 grams)
- **Color:** Black
- **Connectivity:** Infrared (IR)
- **Manufacturer:** WTTTHAI





Image: Side view of the WTTHAI Replacement Remote Control, illustrating its ergonomic profile and compact dimensions.

9. SUPPORT

For any issues or questions regarding your WTTHAI Replacement Remote Control, please contact your retailer or the manufacturer directly. Provide your product model number and a detailed description of the issue for efficient assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMNQ7JSB>

More documents and user manuals: **<https://manuals.plus/>**