

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smartby](#) /

› [Smartby Universal Remote Control Instruction Manual for Multi-Brand TVs](#)

Smartby Universal Remote for All TVs

Smartby Universal Remote Control Instruction Manual

Model: Universal Remote for All TVs

INTRODUCTION

This manual provides instructions for setting up and operating your Smartby Universal Remote Control. This remote is designed to control a wide range of television brands, including LG, Samsung, Sony, Hisense, TCL, Philips, Vizio, Panasonic, Sanyo, Insignia, Toshiba, Sharp, and many others. Please read this manual thoroughly before use to ensure proper setup and functionality.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period.
- Dispose of batteries according to local regulations.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.

PACKAGE CONTENTS

- 1 x Smartby Universal Remote Control
- 1 x Instruction Manual (this document)

Note: Two (2) AAA batteries are required and not included.

PRODUCT OVERVIEW


Familiarize yourself with the buttons and layout of your universal remote control.



Universal Remote Control Compatible with All Brand TVs

LG/ Samsung/ Sony/ Vizio/ Hisense/ TCL

Sanyo
Toshiba
Maganvox
JVC

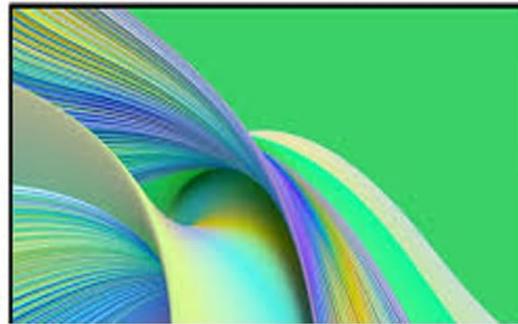

Philips
Panasonic
Sharp
Seiki

RCA/ Hitachi/ Haier/ Westinghouse/ Vestel

This image displays the front of the Smartby Universal Remote Control, highlighting its various buttons such as Power, Input, CC, Smart, Netflix, 3D, Menu, Apps, directional pad with OK button, Volume, Channel, and number pad. It also shows dedicated brand buttons for LG, Samsung, Sony, Philips, Panasonic, Sharp, Toshiba, Hitachi, Vizio, TCL, JVC, Hisense, Sanyo, Insignia, Magnavox, RCA, Haier, Westinghouse, and Vestel.



Avoid setting:
directly using LG
SAMSUNG SONY
PHILIPS PANASONIC
SHARP TV.
Brand setting:
After pressing the button
of the corresponding
brand for 5 seconds, the
LED flashes three times,
then the setting is
completed

This image shows the side profile and the back of the Smarty Universal Remote Control. The back view includes the battery compartment cover and a small label with setting instructions for preprogrammed and other brands.

SETUP INSTRUCTIONS

1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover.

2. Setting Up Your TV

The Smartby Universal Remote Control offers two primary methods for setting up your television: Code Setup and Brand Search. Some popular brands like LG, Samsung, Sony, Panasonic, Philips, and Sharp may be preprogrammed for direct control.

Method A: Code Setup (Recommended for specific models)

1. Press and hold the **MUTE** and **POWER** buttons simultaneously for 3 seconds until the LED indicator light illuminates.
2. Release both buttons. The LED light will remain on.
3. Refer to the provided code list (see image below) and input the 3-digit TV code for your television brand.
4. If the code is correct, the LED light will turn off, indicating successful setup.
5. If the LED light remains on, the code was incorrect. Repeat the process from step 1 with a different code from the list for your brand.



Universal Remote Control

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.


! Note on batteries

! Do not mix old batteries with ones or mix different types of batteries together.
! If the remote doesn't work in using process, please reinstall the batteries.
! When the remote control is not sensitive, please renew the batteries.

How TO SET UP YOUR REMOTE:

○ A. SET UP BY CODE

Step.1 Press [MUTE ] + [POWER ] buttons together for 3 sec until led light is lit, then release it.

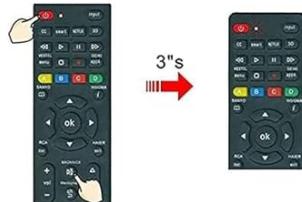

Step.2 Input your 3 digit TV CODE from code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time. (If the TV not


BRAND	CODE LIST_TV	BRAND	CODE LIST_TV
LG	023,001,024,025,026,027	JVC	012,077,079,078,080,081
SAMSUNG	028,002,030,029,031,032	HISENSE	019,014,049,050,058,057,056,055,054,053,052,051
SONY	033,003,034	VESTEL	015
PHILIPS	005,004,038,039,040,041,035,038,037	SEIKI	016
Panasonic	006,042,043,044	SANYO	017
SHARP	045,007,046,047,048,049,050,058,057,056,055,054,053,052,051	INSIGNIA	018
TOSHIBA	059,008,060,061,062,063,064,065,066	MAGNAVOX	021,035,036,037
HITACHI	009,067	RCA	019
VIZIO	068,010,069,070,071,072	Haier	020
TCL	011,073,075,074,076	WESTINGHOUSE	022

Step.3 Please check the function of Remote . If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.

NOTE: During setting process, If no key is pressed in 10 seconds it will exit automatically.

○ B. Brand Search

1). Turn on TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, then the setting is completed

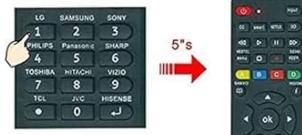

Default Mode:

- Under the default setting, RC-G008 can directly control many brands, include LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please and hold the [OK] + [0] buttons about 3sec, the LED light will be blink four times, now it is in initial setting.

This image provides a comprehensive guide for setting up the universal remote. It details the steps for code setup, including a table of 3-digit codes for brands like LG, Samsung, Sony, Philips, Panasonic, Sharp, Toshiba, Hitachi, Vizio, TCL, JVC, Hisense, Sanyo, Insignia, Magnavox, RCA, Haier, and Westinghouse. It also illustrates the brand search method.

Method B: Brand Search (For quick setup or if code is unknown)

1. Locate the corresponding brand button on the remote (e.g., LG, Samsung, Sony, etc.).
2. Press and hold the brand button for 5 seconds.
3. The LED indicator light on the remote will flash three times.
4. Release the button. The setting is now complete. Test the remote's functions.



Preprogrammed

It can directly control many brand TV, including LG, SAMSUNG, SONY, PANASONIC, PHILIPS, SHARP TV.

Other Brand Setting

Press the button of corresponding brand for 5 seconds, the LED flashed three times, then the setting is completed.

This image shows the universal remote and explains that it is preprogrammed for direct control of many TV brands like LG, Samsung, Sony, Panasonic, Philips, and Sharp. It also describes the "Other Brand Setting" method, which involves pressing a brand button for 5 seconds until the LED flashes three times.

OPERATING INSTRUCTIONS

Once set up, your Smartby Universal Remote Control functions similarly to your original TV remote. Below are common button functions:

- **Power Button:** Turns your TV on or off.
- **Input Button:** Cycles through video input sources (HDMI 1, HDMI 2, AV, etc.).
- **Number Pad (0-9):** Directly enter channel numbers.
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button:** Mutes or unmutes the television's audio.
- **Directional Pad (Up/Down/Left/Right) & OK Button:** Navigate menus and confirm selections.
- **Smart/Netflix/3D Buttons:** Access specific smart TV features or streaming services, if supported by your TV.
- **Menu/Apps Buttons:** Access your TV's main menu or application list.
- **CC (Closed Captioning):** Toggles closed captions on or off.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.

- **Color Buttons (A, B, C, D):** Function as context-sensitive buttons within TV menus or apps.

Note: Specific button functions may vary slightly depending on your TV model and brand.

MAINTENANCE

- Clean the remote control regularly with a soft, dry cloth. Do not use liquid cleaners.
- Avoid dropping the remote or subjecting it to strong impacts.
- If the remote becomes unresponsive or less sensitive, replace the batteries.
- Store the remote in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

- **Remote not working after setup:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AAA batteries.
 - Try re-entering the 3-digit code for your TV brand.
 - If using Brand Search, ensure you held the button for the full 5 seconds until the LED flashed three times.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Some functions not working:**
 - Not all functions of your original TV remote may be supported by a universal remote.
 - Ensure the remote is correctly programmed for your specific TV model. Try alternative codes if available.
- **LED light stays on after code entry:**
 - This indicates an incorrect code. Re-enter the code or try a different one from the list.
- **Remote controls another device unintentionally:**
 - If programming in a multi-device environment, temporarily unplug other devices (e.g., other TVs) to prevent interference during the setup process.

SPECIFICATIONS

- **Product Dimensions:** 6 x 1.6 x 0.7 inches
- **Item Weight:** 2.08 ounces
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 1
- **Color:** Black
- **Special Feature:** Lightweight, Universal
- **Model Number:** Universal Remote for All TVs
- **Manufacturer:** Smartby

WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the retailer's return policy or contact Smartby customer support for warranty inquiries.

SUPPORT

For further assistance or troubleshooting not covered in this manual, please contact Smartby customer support.

Contact information was not available in the provided product data. Please refer to the product packaging or retailer's website for support details.

© 2026 Smartby. All rights reserved.