

## Beko CEG 3194 B

# Beko CEG 3194 B Espresso Coffee Machine User Manual

Model: CEG 3194 B

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Beko CEG 3194 B Espresso Coffee Machine. Please read these instructions carefully before first use and keep them for future reference. This machine is designed to prepare espresso, cappuccino, and latte beverages.

## 2. SAFETY INSTRUCTIONS

---

- Always ensure the machine is placed on a stable, level surface away from heat sources and water.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Unplug the machine from the power outlet before cleaning, maintenance, or if it will not be used for an extended period.
- Keep children and unauthorized persons away from the appliance during operation.
- Use only cold, fresh water in the water tank.
- Do not operate the machine if the power cord or plug is damaged, or if the machine malfunctions or has been damaged in any way.
- Exercise caution when handling hot surfaces and steam.

## 3. PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your Beko CEG 3194 B Espresso Coffee Machine:

- **Control Panel:** Buttons and indicators for various functions.
- **Coffee Bean Hopper:** For whole coffee beans.

- **Water Tank:** Removable tank for water supply.
- **Milk Container/Frother:** For preparing milk-based beverages.
- **Coffee Dispenser:** Where brewed coffee exits.
- **Drip Tray:** Collects excess liquid.
- **Grounds Container:** Collects used coffee grounds.



Overall view of the Beko CEG 3194 B Espresso Coffee Machine with the milk container attached.



Front view of the Beko CEG 3194 B Espresso Coffee Machine, highlighting the coffee dispenser and drip tray.



Top control panel of the Beko CEG 3194 B Espresso Coffee Machine, displaying various function icons and buttons.



Top view of the Beko CEG 3194 B Espresso Coffee Machine with the lid open, revealing the integrated coffee bean hopper.



Side view of the Beko CEG 3194 B Espresso Coffee Machine, showing the removable water tank.

## 4. SETUP

---

1. **Unpacking:** Carefully remove all packaging materials. Check for any damage during transit.
2. **Initial Cleaning:** Before first use, wash the water tank, milk container, and drip tray with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Fill Water Tank:** Remove the water tank, fill it with fresh, cold water up to the MAX level, and reinsert it securely.
4. **Add Coffee Beans:** Open the lid of the coffee bean hopper and fill it with whole coffee beans. Close the lid.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.
6. **First Use Cycle:** Follow the instructions in the quick start guide or on the control panel for the initial rinse cycle to prime the system.

## 5. OPERATING INSTRUCTIONS

---

## 5.1 Powering On/Off

- Press the power button on the control panel to turn the machine on. The machine will perform a brief self-check.
- Press the power button again to turn the machine off.

## 5.2 Making Espresso

1. Ensure the water tank is filled and coffee beans are in the hopper.
2. Place a cup under the coffee dispenser.
3. Select your desired espresso strength and volume using the control panel buttons.
4. Press the espresso button to start brewing. The machine will grind the beans, tamp, and extract the coffee.
5. The machine will stop automatically when the selected volume is reached.

## 5.3 Making Cappuccino or Latte

1. Fill the milk container with fresh, cold milk. Attach it to the machine.
2. Place a cup under the coffee dispenser and milk frother.
3. Select either the cappuccino or latte button on the control panel.
4. The machine will automatically froth the milk and then brew the espresso into your cup.
5. After preparation, clean the milk frother system as described in the maintenance section.

## 5.4 Adjusting Grind Levels

The machine features 5 grind levels. To adjust, locate the grind adjustment knob inside the bean hopper. Turn the knob while the grinder is operating (e.g., during a brewing cycle) to select a finer or coarser grind. A finer grind typically results in a stronger espresso, while a coarser grind yields a milder taste.

# 6. MAINTENANCE AND CLEANING

---

## 6.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily.
- **Grounds Container:** Empty the grounds container when prompted or daily. Wash with warm soapy water.
- **Milk System:** After each use of the milk frother, perform a quick rinse cycle to prevent milk residue buildup. Regularly disassemble and clean the milk container components.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth.

## 6.2 Descaling

The machine will indicate when descaling is required. Follow the specific descaling instructions provided in the full product manual or on the manufacturer's website. Use only descaling solutions recommended for espresso machines.

# 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No coffee is dispensed.	Water tank empty, coffee beans empty, or system not primed.	Fill water tank/bean hopper. Perform initial rinse cycle.
Coffee is too weak/strong.	Incorrect grind setting or coffee strength selection.	Adjust grind level (finer for stronger, coarser for weaker). Select desired strength on control panel.
Milk not frothing correctly.	Milk system dirty, milk too warm, or incorrect milk type.	Clean milk system thoroughly. Use cold, fresh milk. Ensure milk container is correctly assembled.
Machine leaks water.	Water tank not seated correctly or drip tray full.	Ensure water tank is properly inserted. Empty drip tray. If problem persists, contact support.

## 8. SPECIFICATIONS

- **Brand:** Beko
- **Model Number:** CEG 3194 B
- **Type:** Espresso Maker
- **Pressure:** 19 Bar
- **Power:** 1350 Watts
- **Capacity:** 1.5 Liters (Water Tank)
- **Special Features:** Integrated Coffee Grinder, Built-in Milk Frother
- **Grind Levels:** 5 levels
- **Material:** Aluminum
- **Product Dimensions:** Approximately 2 x 2 x 2 cm (Note: This dimension seems incorrect from source, refer to actual product for accurate size)
- **Item Weight:** Approximately 150 g (Note: This weight seems incorrect from source, refer to actual product for accurate weight)

## 9. WARRANTY AND SUPPORT

Your Beko CEG 3194 B Espresso Coffee Machine comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Beko customer support. Refer to the official Beko website or your purchase documentation for contact details specific to your region.