

[Manuals.plus](#) /

› [USARMT](#) /

› Universal Roku TV Remote Control User Manual

USARMT Universal Roku TV Remote Control

Universal Roku TV Remote Control User Manual

Model: Universal Roku TV Remote Control

Brand: USARMT

1. INTRODUCTION

Thank you for choosing the USARMT Universal Roku TV Remote Control. This remote is designed to provide seamless control for a wide range of Roku TVs without the need for complex setup or programming. It comes pre-programmed for immediate use.

This remote control is compatible with various brands of Roku TVs, including but not limited to:

- TCL Roku TVs
- JVC Roku TVs
- RCA Roku TVs
- Philips Roku TVs
- ONN Roku TVs
- Element Roku TVs
- LG Roku TVs
- Westinghouse Roku TVs
- Hisense Roku TVs
- Sharp Roku TVs
- Insignia Roku TVs
- Toshiba Roku TVs
- Sanyo Roku TVs
- Magnavox Roku TVs
- Hitachi Roku TVs
- Haier Roku TVs

Important Note: This remote control is NOT compatible with Roku Streaming Sticks or Roku Streaming Boxes.



2. SETUP

The USARMT Universal Roku TV Remote Control is designed for immediate use without any programming required. Simply insert batteries, and it will be ready to operate your compatible Roku TV.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Battery compartment with cover removed.

Once batteries are installed, the remote is ready to control your Roku TV.

3. OPERATING INSTRUCTIONS

This remote control provides all essential functions for navigating your Roku TV interface and controlling media playback.



Figure 3: Angled view of the remote control.

3.1 Button Functions

Button	Function
Power ()	Turns the TV on or off.
Back (←)	Goes back to the previous screen or menu.
Home (⬆)	Returns to the Roku TV home screen.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and content.
OK	Selects an item or confirms an action.
Instant Replay (⏮)	Replays the last few seconds of video.
Sleep (⏸)	Activates the sleep timer function (if supported by TV).
Asterisk / Options (*)	Accesses options or settings for the current content or app.
Rewind ()	Rewinds media playback.
Play/Pause ()	Plays or pauses media playback.
Fast Forward ()	Fast forwards media playback.
Volume Up/Down	Adjusts the TV volume. (Buttons on the side of the remote)
Mute	Mutes or unmutes the TV sound. (Button on the side of the remote)
Quick Access Buttons (Netflix, Prime Video, Apple TV+, Disney+)	Directly launches the corresponding streaming application.



Figure 4: Detailed view of the remote control buttons.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

4.2 Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote and the TV's infrared receiver.
 - Make sure you are pointing the remote directly at the TV.
- **Specific buttons not working:**
 - This remote is pre-programmed and does not require pairing. If a button is not working, ensure the remote is compatible with your specific Roku TV model (refer to the compatibility list in Section 1).
 - Clean the remote's surface, especially around the non-working button, to ensure no debris is interfering.
- **Remote works intermittently:**
 - Batteries may be low. Replace them.
 - Ensure consistent line of sight to the TV.

If the issue persists after trying these steps, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	6 x 2 x 0.5 inches
Item Weight	3 ounces
Brand	USARMT
Manufacturer	USARMT
Special Feature	Ergonomic
Color	Black
Max Number of Supported Devices	1 (Roku TV)

Feature	Detail
Compatible Devices	Television (Roku TVs)
ASIN	B0CMPLWCSR
Date First Available	November 6, 2023

7. WARRANTY AND SUPPORT

For any questions, concerns, or technical support regarding your USARMT Universal Roku TV Remote Control, please contact the seller or manufacturer directly through the platform where the purchase was made.

Please refer to your purchase documentation for specific warranty information, as it may vary by retailer and region.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CMPLWCSR>

More documents and user manuals: <https://manuals.plus/>