

Qaba 3B0-011V80GN

Qaba 3-in-1 Kids Art Easel Instruction Manual

MODEL: 3B0-011V80GN

1. Introduction

Thank you for choosing the Qaba 3-in-1 Kids Art Easel. This versatile easel is designed to inspire creativity in children aged 3-8, offering multiple ways to engage in artistic expression. It features a double-sided board with a blackboard and a whiteboard, a convenient paper roll, and integrated storage solutions.



Image 1: The Qaba 3-in-1 Kids Art Easel, showcasing its double-sided design with a whiteboard on one side and a blackboard on the other, along with two fabric storage baskets below.

2. Safety Information

- Adult assembly is required. Please ensure all parts are securely fastened before use.
- Supervise children during use, especially with small parts or art supplies.
- Keep away from open flames or heat sources.
- Use only appropriate art supplies: chalk for the blackboard, water-based markers for the whiteboard.
- Regularly check for loose parts or damage. Discontinue use if any damage is found.
- This easel has a stable A-frame structure. Ensure it is placed on a flat, stable surface.

3. Package Contents

Please verify that all components are present before beginning assembly. Refer to the assembly video for a visual guide to parts.

Video 1: This video demonstrates the assembly process for a 3-in-1 kids easel, showing various components and steps involved in putting the easel together.

4. Setup and Assembly

Follow these steps to assemble your Qaba 3-in-1 Kids Art Easel. For a detailed visual guide, please refer to Video 1 in the Package Contents section.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the parts list in the assembly video.
2. **Assemble the Main Frame:** Connect the vertical and horizontal wooden pieces using the provided screws and tools, forming the A-frame structure.
3. **Attach the Boards:** Securely attach the blackboard and whiteboard panels to the main frame. Ensure they are correctly oriented.
4. **Install the Paper Roll Holder:** Mount the paper roll holder at the top of the easel. Insert the paper roll onto the holder.
5. **Assemble Storage Baskets:** Construct the fabric storage baskets and attach them to the designated slots at the bottom of the easel.
6. **Final Checks:** Ensure all screws are tightened and the easel is stable before allowing children to use it.

5. Operating Instructions

The Qaba 3-in-1 Kids Art Easel offers multiple creative options:

- **Blackboard:** Use chalk for drawing and writing. The blackboard side encourages traditional chalk art.
- **Whiteboard:** Use water-based markers for drawing and writing. This side is easy to clean and ideal for vibrant colors.
- **Paper Roll:** Pull down paper from the integrated roll for painting or drawing with pencils and crayons. The paper can be easily torn off once the artwork is complete.
- **Storage Baskets:** Utilize the two fabric storage baskets located below the boards to keep art supplies organized and within easy reach.
- **Adjustable Height:** The easel's height can be adjusted to accommodate your child's growth, ensuring comfortable use and promoting proper posture.

Video 2: An official product video demonstrating the features and use of the Qaba 3B0-011V80GN Kids Easel, including drawing on both sides and utilizing storage.



Image 2: A visual representation of the easel's three primary functions: a whiteboard for markers, a blackboard for chalk, and a paper roll for drawing and painting.

A GREAT GIFT FOR YOUR KIDS



For 3-8
Years Old



Safe
Material



Sturdy
Construction



Inspire
Creativity



Image 3: This image focuses on the practical storage baskets and the smooth, child-safe edges of the easel, emphasizing its thoughtful design.

6. Maintenance

- **Cleaning the Whiteboard:** Use a soft, damp cloth or a whiteboard eraser to clean the whiteboard surface. For stubborn marks, a mild whiteboard cleaner can be used.
- **Cleaning the Blackboard:** Use a damp cloth or a blackboard eraser to clean the blackboard surface.
- **General Cleaning:** Wipe down the wooden frame with a soft, damp cloth. Avoid abrasive cleaners.
- **Storage Baskets:** The fabric baskets can be spot cleaned with a mild detergent and air-dried.

7. Troubleshooting

- **Easel is Wobbly:** Ensure all screws are securely tightened. Check that the easel is placed on a flat, even surface.
- **Markers Not Erasing:** Ensure you are using water-based markers specifically designed for whiteboards. Use a clean eraser or damp cloth.
- **Paper Roll Not Dispensing Smoothly:** Check that the paper roll is correctly installed in its holder and that there are no obstructions.

8. Specifications

Feature	Detail
Model Name	Kids Easel
Item Model Number	3B0-011V80GN
Overall Dimensions	21.3" L x 18" W x 37" H (54 cm L x 45.7 cm W x 94 cm H)
Board Size	18.5" L x 15" W (47 cm L x 38.1 cm W)
Single Basket Dimensions	10.6" L x 9.4" W x 5.7" H (27 cm L x 24 cm W x 14.5 cm H)
Material	Engineered Wood, Pine
Item Weight	13 Pounds (5.9 kg)
Color	Green
Assembly Required	Yes



Image 4: A detailed diagram illustrating the key dimensions of the easel, providing measurements for overall size and the drawing board area.

9. Warranty and Support

For warranty information or product support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. The manufacturer is Aosom LLC.

© 2026 Qaba. All rights reserved.