Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Umiconty /
- > Umiconty Replacement Voice Remote Control for LG Smart TVs Instruction Manual

Umiconty 34ba9402-a3b7-47ea-b83f-95b3fc12ab5d

Umiconty Replacement Voice Remote Control for LG Smart TVs - Instruction Manual

Model: 34ba9402-a3b7-47ea-b83f-95b3fc12ab5d

INTRODUCTION

This manual provides instructions for the Umiconty Replacement Voice Remote Control, designed for use with various LG Smart TV models. It features pointer, click, scroll, and voice control functions, along with dedicated shortcut keys for popular streaming services.

What's Included:

- 1x Replacement Voice Remote Control
- 1x Instruction Manual (this document)





Image: Front view of the Umiconty Replacement Voice Remote Control, showing all buttons and its ergonomic design.

COMPATIBILITY

This remote control is compatible with the following LG Smart TV models from 2022, including various OLED, QNED, NanoCell, and UHD 4K/8K series:

- OLED Models: Z2, G2, C2, B2, A2 series
- QNED Models: QNED99, QNED90, QNED85, QNED80 series
- NanoCell Models: NANO80, NANO75 series
- UHD 4K Models: UQ90, UQ80, UQ75, UQ70 series

Specific compatible models include: 28LM400B-PU, 32LQ630BPSA, 32LQ630BPUA, 42LX1QPUA, 42LX3QPUA, 43NANO75SQA, 43NANO75UQA, 43UQ7070ZUD, 43UQ7070ZUM, 43UQ7400PSF, 43UQ7500PSF, 43UQ7590PUB, 43UQ7590PUK, 43UQ8000AUB, 43UQ8000AUK, 43UQ8000PSB, 43UQ8000PSB, 43UQ8050PSB, 43UQ8050PSB,

43UQ9000PUD, 43UQ9050PSC, 48LX1QPUA, 50NANO75SQA, 50NANO75UQA, 50NANO80AQA, 50NANO80SQA, 50QNED80AQA, 50QNED80UQA, 50UQ7070ZUE, 50UQ7070ZUN, 50UQ7400PSF, 50UQ7500PSF, 50UQ7570PUA, 50UQ7570PUJ, 50UQ7590PUB, 50UQ7590PUK, 50UQ8000AUB, 50UQ8000AUK, 50UQ8000PSB, 50UQ8000PSK, 50UQ8050PSB, 50UQ8050PSK, 50UQ9000PUD, 50UQ9050PSC, 55LX1QPUA, 55NANO75SQA, 55NANO75UQA, 55NANO80AQA, 55NANO80SQA, 55QLEDB2AUA, 55QNED80AQA, 55QNED80SQA, 55QNED80UQA, 55QNED85AQA, 55QNED85SQA, 55QNED85UQA, 55UQ7070ZUE, 55UQ7070ZUN, 55UQ7400PSF, 55UQ7500PSF, 55UQ7570PUA, 55UQ7570PUJ, 55UQ7590PUB, 55UQ7590PUK, 55UQ8000AUB, 55UQ8000AUK, 55UQ8000PSB, 55UQ8000PSK, 55UQ8050PSB, 55UQ8050PSK, 55UQ9000PUD, 55UQ9050PSC, 60UQ798BFPSB, 60UQ7900PSB, 60UQ8000PSB, 60UQ8000PSK, 60UQ8050PSB, 60UQ8050PSK, 60UQ9000PSA, 65NANO75SQA, 65NANO75UQA, 65NANO80AQA, 65NANO80SQA, 65OLEDB2AUA, 65QNED80AQA, 65QNED80SQA, 65QNED80UQA, 65QNED85AQA, 65QNED85SQA, 65QNED85UQA, 65QNED90SQA, 65QNED90UQA, 65QNED99UQA, 65UQ7070ZUE, 65UQ7070ZUN, 65UQ7400PSF, 65UQ7500PSF, 65UQ7570PUA, 65UQ7570PUJ, 65UQ7590PUB, 65UQ7590PUK, 65UQ8000AUB, 65UQ8000AUK, 65UQ8000PSB, 65UQ8000PSK, 65UQ8050PSB, 65UQ8050PSK, 65UQ9000PUD, 65UQ9050PSC, 70NANO75SQA, 70NANO75UQA, 70UQ7070ZUD, 70UQ7070ZUM, 70UQ7590PUB, 70UQ7590PUK, 70UQ8000AUB, 70UQ8000AUK, 70UQ8050PSB, 70UQ8050PSK, 70UQ9000PUD, 75NANO75SQA, 75NANO75UQA, 75NANO80AQA, 75NANO80SQA, 750LEDB2AUA, 75QNED80AQA, 75QNED80SQA, 75QNED80UQA, 75QNED85AQA, 75QNED85SQA.



Follow these steps to set up and pair your new remote control with your LG Smart TV:

- 1. **Insert Batteries:** Turn on your LG TV. Open the battery compartment on the back of the remote control and insert two (2) AAA batteries, ensuring correct polarity.
- 2. **Reset Remote Control:** Hold down the **HOME** button (house icon) and the **SETTINGS** button (gear icon) simultaneously for approximately 5 seconds. This action initializes the remote control.
- 3. **Pairing:** Aim the remote control at your Smart TV. Press the Wheel (OK) button located in the center of the directional pad. A message should appear on your TV screen confirming that the Magic Remote Control is connected.

Note: This remote is a replacement for MR18GA, MR19GA, and MR20GA models. It is not a replacement for MR22GN.



Image: Visual guide demonstrating the pairing process, showing the Home and Settings buttons for initialization, followed by pressing the Wheel (OK) button.

The Umiconty Replacement Voice Remote Control offers multiple ways to interact with your LG Smart TV:

Pointer, Click, and Scroll Functions

Once paired, you can use the remote as a pointer. Move the remote in the air to control an on-screen cursor. Click the **Wheel (OK)** button to select items, and rotate the wheel to scroll through menus and web pages.



Image: A user demonstrating the pointer function by moving the remote, and the scroll function using the central wheel.

Voice Control

Press and hold the **Microphone** button to activate voice commands. Speak clearly into the remote to search for content, control TV functions, or ask questions. Release the button when finished speaking.

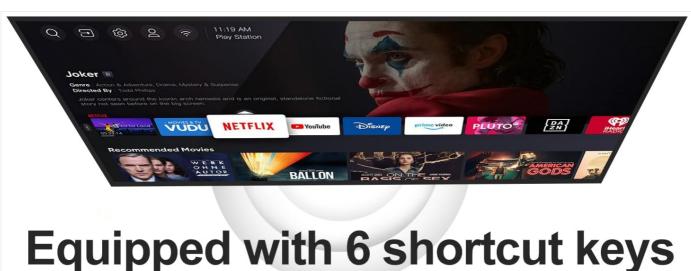


Image: The remote control with an overlay indicating voice command examples such as "listen to music" or "I want to watch Netflix."

Shortcut Keys

The remote includes dedicated shortcut keys for quick access to popular applications and voice assistants:

- NETFLIX
- Prime Video
- Disney+
- LG Channels
- Alexa
- Google Assistant



Comfotrable buttons, comfortable feelings, Make the remote control better in your hands



Image: The remote control with six shortcut buttons clearly labeled for Netflix, LG Channels, Disney+, Prime Video, Alexa, and Google Assistant.

MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- Battery Replacement: Replace batteries when the remote's responsiveness decreases or it stops functioning. Always use new AAA batteries and ensure correct polarity.
- Cleaning: Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Storage: Store the remote in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

• Remote Not Responding:

- Ensure batteries are correctly inserted and not depleted. Replace with new AAA batteries if necessary.
- Re-pair the remote by following the "Setup and Pairing" instructions.
- Ensure there are no obstructions between the remote and the TV's sensor.

• Pointer Function Not Working:

- Ensure the remote is properly paired.
- Check your TV's settings for any "Audio Guidance" features. Some users have reported that disabling Audio Guidance can resolve pointer issues.
- Perform a remote reset by holding **HOME** and **SETTINGS** for 5 seconds, then re-pair.

Voice Control Not Working:

- Ensure the remote is properly paired and the microphone button is being held down while speaking.
- Verify that your TV's software is up to date.
- Check TV settings for voice control activation or microphone permissions.

• Buttons Require Double Press:

- This can sometimes indicate low battery power. Replace batteries.
- If the issue persists after battery replacement and re-pairing, contact customer support.

SPECIFICATIONS

Brand	Umiconty		
Model Number	34ba9402-a3b7-47ea-b83f-95b3fc12ab5d		
Product Dimensions	6.69 x 1.18 x 0.79 inches		
Item Weight	3.84 ounces		
Color	Black		
Special Feature	Voice Search		
Max Number of Supported Devices	5 (Television)		

WARRANTY AND SUPPORT

Umiconty offers a 100% refund policy for this product. If the remote control does not function as expected or if you are not satisfied with your purchase for any reason, you may contact customer support for a full refund at any time.

For further assistance or inquiries, please contact Umiconty customer service through the platform where the product was purchased.

© 2024 Umiconty. All rights reserved.