

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MoKo](#) /

> [MoKo Foldable Bluetooth Keyboard Instruction Manual](#)

MoKo P840401404331

MoKo Foldable Bluetooth Keyboard Instruction Manual

Model: P840401404331

INTRODUCTION

The MoKo Foldable Bluetooth Keyboard is a versatile and portable input device designed for enhanced productivity across multiple platforms. Featuring an upgraded 2-in-1 design, it combines a full-size keyboard with a multi-functional touchpad that can also convert into a numeric keypad. Its compact, tri-fold design makes it ideal for travel and on-the-go use, ensuring a comfortable and efficient typing experience wherever you are.

PACKAGE CONTENTS

- 1 x MoKo Wireless Folding Keyboard
- 1 x Stand Holder for Phones or 12.9" Tablets
- 1 x USB Type-C Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW

The MoKo Foldable Bluetooth Keyboard features a durable ABS material construction with a sleek dark gray finish. Its tri-fold design allows for extreme portability, folding down to a palm-sized unit. The keyboard integrates a full QWERTY layout with a dedicated touchpad/numeric keypad section on the right.



Figure 1: MoKo Foldable Bluetooth Keyboard in its unfolded state, showcasing the full keyboard layout and the integrated touchpad/numeric keypad. A phone stand is visible in the background.

Key Features:

- **Folding Design:** Tri-fold mechanism for compact storage and portability.
- **2-in-1 Touchpad & Numeric Keypad:** Seamlessly switch between touchpad mode for mouse functions and numeric keypad mode for data entry.
- **Multi-Device Connectivity:** Pair and switch between up to 3 Bluetooth-enabled devices simultaneously.
- **Scissor Keys:** Low-profile scissor-switch keys provide a quiet, comfortable, and precise typing experience.
- **Rechargeable Battery:** Built-in 140mAh lithium battery offers up to 60 hours of working time on a single charge.

Wide Compatibility

MacOS / Windows / iOS / Android / Linux



Figure 2: Detailed dimensions of the keyboard when folded and unfolded, highlighting its compact and portable nature.

SETUP

1. Charging the Keyboard

Before first use, fully charge the keyboard using the provided USB Type-C cable. Connect the USB-C end to the keyboard's charging port and the USB-A end to a compatible power source (e.g., computer USB port, wall adapter).

USB-C Rechargeable Keyboard



1.5-2 Hrs Full Charge



60 Hrs Working Time



280 Days Standby Time



Figure 3: The keyboard's USB-C charging port, illustrating the connection for recharging the internal battery.

A full charge typically takes 1.5-2 hours. The indicator light will turn red during charging and turn off when fully charged.

2. Power On/Off

To power on the keyboard, simply unfold it. The power indicator light will illuminate. To power off, fold the keyboard closed.

3. Bluetooth Pairing

The keyboard supports pairing with up to three devices simultaneously. Follow these steps to pair your devices:

1. **Select a Channel:** Press **Fn + Q** for Channel 1 (BT1), **Fn + W** for Channel 2 (BT2), or **Fn + E** for Channel 3 (BT3). The selected channel's indicator light will flash.

2. **Enter Pairing Mode:** Press **Fn + C** to enter pairing mode. The indicator light for the selected channel will flash rapidly.
3. **Enable Bluetooth on Your Device:** On your smartphone, tablet, or laptop, go to Bluetooth settings and turn on Bluetooth.
4. **Connect:** Search for "MoKo Foldable Keyboard" (or similar name) in the list of available devices and select it to connect. The indicator light will stop flashing once successfully paired.
5. **Repeat for Additional Devices:** To pair another device, select a different channel (e.g., BT2) and repeat steps 1-4.



Figure 4: The keyboard demonstrating simultaneous Bluetooth connectivity with a laptop, tablet, and smartphone, highlighting the multi-device capability.

Your browser does not support the video tag.

Video 1: Demonstrates the multi-device pairing process and quick switching between connected devices for the MoKo

OPERATING INSTRUCTIONS

1. Touchpad Mode

The integrated touchpad supports various multi-gesture commands, functioning as a mouse replacement. It supports left and right mouse button functions. Refer to the user manual for a complete list of supported gestures for Windows, iOS, and Android systems.



Figure 5: Illustrates the two primary modes of the right-hand section: Touchpad Mode for navigation and Number Pad Mode for numerical input.

2. Numeric Keypad Mode

To switch the touchpad to numeric keypad mode, press **Fn + Space**. The touchpad area will then function as a dedicated number pad, greatly improving efficiency for data input. Press **Fn + Space** again to revert to touchpad mode.

3. System Switching

The keyboard is compatible with Windows, Mac OS, iOS, and Android devices. To optimize key functions for your operating system, use the following shortcuts:

- **Windows:** Press **Fn + A**
- **iOS/Mac OS:** Press **Fn + S**
- **Android:** Press **Fn + D**

Your browser does not support the video tag.

Video 2: Shows the MoKo Portable Folding Wireless Keyboard in action, demonstrating its compact design and ease of use for various tasks.

MAINTENANCE

Cleaning

To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish or internal components. Ensure the keyboard is powered off before cleaning.

Battery Care

The keyboard is equipped with a 140mAh lithium rechargeable battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the keyboard in a cool, dry place when not in use for extended periods.
- The keyboard features an auto-sleep function, entering sleep mode after 10 minutes of inactivity to conserve power. Press any key to wake it up.

TROUBLESHOOTING

Connection Issues

- Ensure the keyboard is fully charged and powered on.
- Verify Bluetooth is enabled on your device and the keyboard is in pairing mode (rapidly flashing channel light).
- If the keyboard was previously paired, try forgetting the device on your host device and re-pairing.
- Ensure no other Bluetooth devices are causing interference.

Typing Errors / Unresponsive Keys

- Ensure the keyboard is placed on a flat, firm surface to prevent accidental folding or instability during use.
- Check the selected operating system mode (Windows, iOS, Android) to ensure it matches your device. Incorrect mode can lead to unexpected key behavior.
- If specific keys are unresponsive, ensure no debris is lodged beneath them.

Touchpad / Numeric Keypad Not Working

- Ensure you are in the correct mode. Press **Fn + Space** to toggle between touchpad and numeric keypad modes.
- For touchpad gestures, ensure you are using the correct number of fingers and swipe direction as per the user manual.

SPECIFICATIONS

Feature	Detail
Brand	MoKo
Model Number	P840401404331
Connectivity Technology	Bluetooth
Compatible Devices	Laptop, PC, Tablet, Smartphone, iPhone, iPad, Mac
Operating System	Mac OS, iOS, Android, Windows
Item Weight	7.2 ounces
Product Dimensions (unfolded)	12.01 x 3.88 x 0.79 inches
Color	Dark Gray
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Capacity	140mAh
Working Time	Up to 60 hours
Standby Time	Up to 280 days
Material	Acrylonitrile Butadiene Styrene (ABS)

WARRANTY & SUPPORT

MoKo products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the contact details provided in your product packaging

or visit the official MoKo website. You can also visit the [MoKo Store on Amazon](#) for additional resources and customer service.