

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ANPABO](#) /

› [ANPABO 24V 4x4 Ride-On Toy Instruction Manual \(Model HC-305\)](#)

ANPABO HC-305

ANPABO 24V 4x4 Ride-On Toy Instruction Manual

Model: HC-305

1. SAFETY INFORMATION

Read and understand all instructions before operating the ANPABO 24V 4x4 Ride-On Toy. Failure to follow safety guidelines may result in injury or damage.

- **Parental Supervision:** Constant adult supervision is required during operation.
- **Age and Weight Limits:** Suitable for children aged 3-12 years. Maximum weight capacity is 130 lbs (59 kg).
- **Protective Gear:** Always ensure the child wears appropriate safety gear, including a helmet and knee/elbow pads.
- **Operating Environment:** Use on flat, dry surfaces away from traffic, swimming pools, and steep inclines. Avoid operating in wet conditions, mud, or on public roads.
- **Remote Control Safety:** The 2.4G remote control allows parents to override child control and stop the vehicle in emergencies using the 'P' button.
- **Material Safety:** The vehicle is constructed from non-toxic and odorless materials.
- **Battery Safety:** Only use the provided charger and battery. Do not modify the electrical system.

2. PRODUCT OVERVIEW

The ANPABO 24V 4x4 Ride-On Toy (Model HC-305) is designed for children aged 3-12, offering an engaging driving experience with robust features.



ANPABO 24V 4x4 Ride-On Toy in Rose Red.

Key Features:

- **Powerful Drive System:** Equipped with a 24V battery and four 200W drive motors, providing stable power and speeds between 3.1-5 mph. Features 2 speed gears and selectable 2WD/4WD.
- **Adjustable Seating:** A spacious 15.8x13.8 inch (LxW) seat with a 3.14-inch adjustable range to accommodate growing children.
- **Durable Construction:** Features a robust metal frame, four large spring suspensions, and 14-inch wear-resistant wheels for off-road capability.
- **High Chassis Design:** An 11-inch high chassis allows for navigation over uneven surfaces like gravel and small mounds.
- **Entertainment System:** Includes built-in music and supports external device connection via Bluetooth and USB.
- **Parental Remote Control:** A 2.4G remote control enables parents to manage direction and activate an emergency stop.
- **Convenient Towing:** A front handle allows for easy manual towing when the battery is depleted.

DIMENSION: 48.5" X 31.1" X 28.5"



Diagram highlighting key features and dimensions of the ride-on toy, including padded seat, spacious legroom, cool headlights, power button, charging port, and dragging handle.

3. SETUP

3.1 Unboxing and Component Check

Carefully remove all components from the packaging. Verify that all parts listed in the assembly guide (provided separately with the product) are present and undamaged.

3.2 Assembly

Follow the detailed assembly instructions provided in the product's dedicated assembly manual. General steps include:

1. Attach the wheels to the axles.
2. Install the steering wheel.
3. Secure the seat to the vehicle frame.
4. Connect any necessary wiring as indicated in the manual.

3.3 Initial Battery Charge

Before first use, fully charge the battery for 8-12 hours. Refer to the charging section for detailed instructions.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Locate the power button on the dashboard. Press to turn the vehicle on or off.

4.2 Driving the Vehicle

- **Manual Control:** The child can operate the vehicle using the steering wheel for direction and the foot pedal for acceleration.
- **Speed Selection:** Use the speed selector switch (if present) to choose between low and high-speed gears.
- **2WD/4WD Selection:** Engage 2-wheel drive or 4-wheel drive as needed for different terrains.

24V OFF-ROAD VEHICLE



Child operating the ANPABO 24V Off-Road Vehicle, highlighting 4x200W motors, max 5 MPH speed, and 4WD/2WD options.

4.3 Using the Parental Remote Control

The 2.4G remote control allows parents to safely guide younger children or intervene when necessary.

- **Pairing:** Follow the remote control's specific pairing instructions (usually involves holding a button on the remote while turning on the vehicle).
- **Controls:** Use the directional buttons for forward, reverse, left, and right.
- **Emergency Stop:** Press the 'P' button on the remote to immediately stop the vehicle.
- **Speed Adjustment:** The remote may also allow for speed selection. Note that if the remote was used at top speed, the vehicle may default to that speed when re-engaged.

MANUAL & REMOTE CONTROL MODE



Adult using a remote control while a child drives the ride-on toy, demonstrating both manual and remote control operation modes.

4.4 Adjusting the Seat

The seat can be adjusted to provide optimal comfort and legroom for the child.

1. Pull out the handle located under the seat.
2. Slide the seat forward or backward to the desired position.
3. Release the handle to lock the seat in place.

HOW TO ADJUST THE SEAT?



1. Pull out the handle under the seat



2. Adjust the seat to desired place




3. Restore the handle to its original position

Step-by-step visual guide on how to adjust the seat.

4.5 Music System Operation

The vehicle includes pre-loaded music and connectivity options.

- **Built-in Music:** Use the controls on the dashboard to play integrated music.
- **Bluetooth Connection:** Pair a mobile device via Bluetooth to play custom music.
- **USB Playback:** Insert a USB drive with audio files into the designated port for playback.

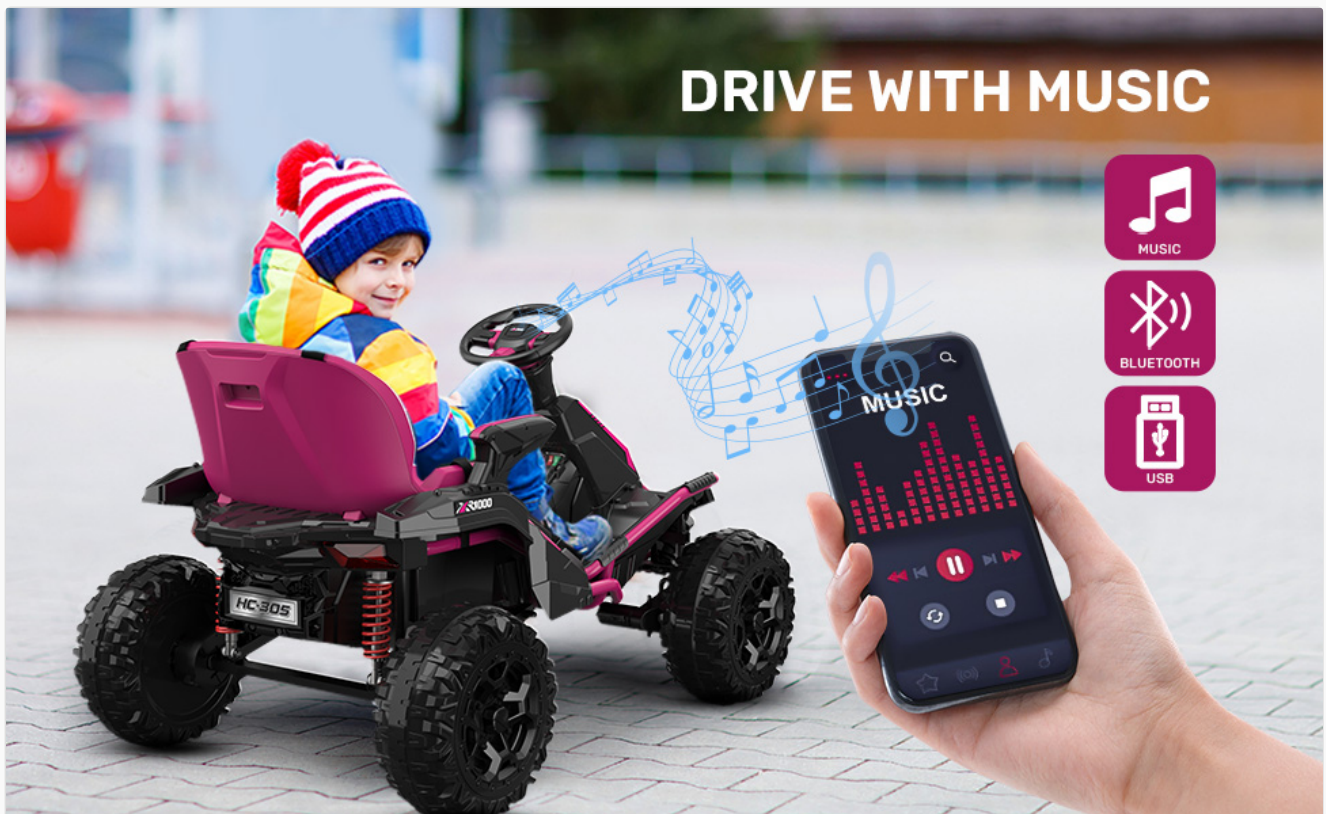

Child driving the ride-on toy with integrated music playback via Bluetooth or USB.

5. MAINTENANCE

5.1 Battery Charging

The battery indicator on the music board will show the current charge level. Charge the battery when the indicator is low.

- Connect the charger to the charging port on the vehicle.
- Plug the charger into a standard wall outlet.
- Charge time for a full charge is typically 8-12 hours. Do not overcharge.
- Disconnect the charger once charging is complete.

5.2 Cleaning

Clean the vehicle regularly to maintain its appearance and functionality.

- Wipe surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or solvents that could damage the plastic or paint.
- Do not spray water directly onto electrical components.

5.3 Storage

When not in use, store the vehicle in a dry, covered area.

- Store away from direct sunlight and extreme temperatures.
- If storing for extended periods, charge the battery fully before storage and recharge every 3 months to prolong battery life.

5.4 Towing Mode

If the battery runs out, the vehicle can be manually towed using the front handle.

- **Important:** Turn the power switch to the OFF position before towing.
- Grasp the front handle firmly and pull the vehicle.

HANDLE VARIABLE TERRAINS



The front handle allows for easy towing across various terrains.

6. TROUBLESHOOTING

If you encounter issues with your ANPABO Ride-On Toy, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vehicle does not move or has no power.	Battery is low or not connected. Power switch is off. Loose wire connection.	Charge the battery. Ensure battery connectors are secure. Turn the power switch on. Check all visible wire connections.
Vehicle moves slowly or lacks power.	Low battery charge. Overload (exceeding weight limit). Operating on unsuitable terrain. Worn motors.	Fully charge the battery. Ensure child's weight is within limits. Operate on appropriate surfaces. Contact customer support if motors are suspected to be faulty.
Remote control is not working.	Remote batteries are dead. Remote is not paired. Interference.	Replace remote control batteries. Re-pair the remote control with the vehicle (refer to remote manual). Move away from sources of electronic interference.
Loud clicking sound during operation.	Potential motor issue or gear damage.	Discontinue use and contact customer support for assistance.

If these solutions do not resolve the issue, please contact ANPABO customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	48.5 x 31.1 x 28.5 inches
Item Weight	70.6 pounds
Item Model Number	HC-305
Manufacturer Recommended Age	3 years and up
Battery Type	1 Nonstandard Battery (included)
Motors	4 x 200W
Speed Range	3.1 - 5 MPH
Max Load Capacity	130 lbs
Manufacturer	ANPABO

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included with your product or contact ANPABO customer service directly. Contact details can typically be found on the ANPABO official website or through your purchase platform.

