

## W1 K5, Y61 5G

# Generic Replacement Remote Control User Manual

For Wimius W1 K5 and Yaber Y61 5G Projectors

## 1. INTRODUCTION

This document provides essential instructions for the Generic IR replacement remote control, designed for use with Wimius W1 K5 and Yaber Y61 5G Mini DLP Portable 1080P WiFi Movie Projectors. This remote functions as a direct infrared replacement. For optimal compatibility, ensure that the button layout on this remote matches your original remote control.

**Important Note:** This remote control does not include batteries or a separate instruction manual in its packaging. Please refer to this guide for all operational details.



Image 1.1: Front view of the remote control, displaying its button layout.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires **one (1) AAA battery** for operation. Follow these steps to install the battery:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 2.1: Back view of the remote control with the battery compartment open.

## 2.2 Initial Use

This is an infrared (IR) replacement remote. No pairing is typically required. Ensure there is a clear line of sight between the remote control and the IR receiver on your projector for proper function.

## 3. OPERATING INSTRUCTIONS

---

Familiarize yourself with the functions of each button on your remote control:

- **Power Button (Red Circle with Line):** Turns the projector on or off.
- **Mute Button (Speaker with X):** Mutes or unmutes the projector's audio.
- **BASS+ / BASS- Buttons:** Adjust the bass level of the audio output.
- **INPUT Button:** Cycles through available input sources (e.g., HDMI, USB).
- **VOL+ / VOL- Buttons:** Increase or decrease the volume level.
- **Playback Controls (Previous, Play/Pause, Next):** Control media playback (e.g., for content played from USB).
- **TRE+ / TRE- Buttons:** Adjust the treble level of the audio output.
- **PAIR Button:** (If applicable) Initiates pairing mode for certain projector models or features. Refer to your projector's manual for specific pairing instructions.

- **Sound Mode Buttons (MUSIC, DIALOG, MOVIE):** Select preset audio equalization modes for different content types.

## 4. MAINTENANCE

---

### 4.1 Battery Replacement

Replace the AAA battery when the remote control's response becomes inconsistent or stops working. Always use a new, high-quality AAA battery. Do not mix old and new batteries or different types of batteries.

### 4.2 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

### 4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the battery to prevent leakage.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the battery is correctly installed and has sufficient charge. Replace with a new AAA battery if necessary.
  - Ensure there is a clear line of sight between the remote's IR emitter and the projector's IR receiver. Remove any obstructions.
  - Verify that the remote control is compatible with your specific projector model (Wimius W1 K5 or Yaber Y61 5G). The button layout should match your original remote.
- **Some functions do not work:**
  - While this remote is a replacement, it may not offer all identical functions as your original remote. Functionality is generally limited to the buttons present on this replacement unit.
  - Ensure your projector's firmware is up to date, as this can sometimes affect remote compatibility.
- **Remote works intermittently:**
  - This could indicate a low battery. Replace the AAA battery.
  - Ensure you are within the effective range of the projector's IR receiver.

If issues persist after following these steps, please contact the seller for further assistance.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Generic
Manufacturer	Easytry

Compatible Devices	Wimius W1 K5, Yaber Y61 5G Projectors (Home Theater)
Connectivity Technology	Infrared (IR)
Power Source	1 x AAA Battery (not included)
Color	Black
Special Feature	Ergonomic design. Requires matching button layout to original remote for full compatibility.

## 7. WARRANTY AND SUPPORT

---

Information regarding specific warranty terms for this Generic replacement remote control is not provided in the product details. For any warranty inquiries, technical support, or assistance with product functionality, please contact the seller directly through your purchase platform.