

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› **VINABTY RAV345 WT92810 Replacement Remote Control User Manual for Yamaha AV Receiver RX-V867 / RX-V867BL**

VINABTY RAV345 WT92810

VINABTY RAV345 WT92810 Replacement Remote Control User Manual

For Yamaha AV Receiver Models: RX-V867, RX-V867BL

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your VINABTY RAV345 WT92810 replacement remote control. This remote is designed to be compatible with Yamaha AV Receiver models RX-V867 and RX-V867BL. Please read these instructions carefully before use.

PRODUCT OVERVIEW

The VINABTY RAV345 WT92810 is a direct replacement remote control for specific Yamaha AV Receiver models. It offers full functionality without the need for complex programming. The remote is designed to replicate the functions of the original RAV345 WT92810 remote.



Image 1: Front view of the VINABTY RAV345 WT92810 replacement remote control. This image displays the layout of all control buttons, including power, input selection, volume, navigation, and various function keys for AV receiver operation.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: No programming is required for this replacement remote control. Once batteries are installed, it is ready for use with compatible Yamaha AV Receivers.





Image 2: Back view of the VINABTY RAV345 WT92810 replacement remote control. This image highlights the battery compartment, which requires two AAA batteries for operation.

OPERATING INSTRUCTIONS

After installing the batteries, point the remote control directly at your Yamaha AV Receiver. The remote functions are identical to the original remote. Press the corresponding buttons to control your receiver's power, volume, input selection, and other features.

- **Power On/Off:** Press the **POWER** button to turn the receiver on or off.
- **Input Selection:** Use the **SOURCE** or specific input buttons (e.g., HDMI, AV, CD) to select your desired audio/video source.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the sound level.
- **Mute:** Press the **MUTE** button to temporarily silence the audio.
- **Navigation:** Use the arrow keys and **ENTER** button to navigate menus on your receiver's display.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** If the batteries are old or depleted, replace them with fresh AAA batteries.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the AV receiver's infrared sensor.
- **Distance:** Make sure you are within the effective operating range of the remote control.
- **Receiver Power:** Confirm that your Yamaha AV Receiver is powered on.

SPECIFICATIONS

Feature	Detail
Model Number	RAV345 WT92810
Compatibility	Yamaha AV Receiver RX-V867, RX-V867BL
Battery Type	2 x AAA (not included)
Dimensions	8.5 x 2 x 0.7 inches
Item Weight	3 ounces
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.