

[Manuals.plus](#) /

> [flexman](#) /

> flexman MP3 MP4 Player Instruction Manual

flexman MP3 MP4 Player

flexman MP3 MP4 Player Instruction Manual

Model: MP3 MP4 Player

1. SAFETY INFORMATION

Please read all safety instructions before using the device to ensure safe and proper operation.

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This may void the warranty and cause damage.
- Use only the provided charging cable or a certified equivalent.
- Prolonged listening at high volume levels can cause hearing damage. Adjust volume to a moderate level.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x flexman MP3 MP4 Player
- 1 x USB Charging Cable
- 1 x Earphone



The flexman MP3 MP4 Player alongside its included USB charging cable and wired earphones.

3. PRODUCT OVERVIEW

The flexman MP3 MP4 Player is a portable digital media player designed for music, video, and other media playback. It features a compact design and a 1.8-inch LCD screen.





Front view of the flexman MP3 MP4 Player, showcasing its 1.8-inch LCD screen and control buttons.

Controls and Ports:

- **LCD Screen:** 1.8-inch display for navigation and media playback.
- **M Button:** Menu/Return button.
- **Play/Pause Button:** Initiates or pauses playback.
- **Directional Buttons:** Navigate through menus and skip tracks.
- **VOL Buttons:** Adjust volume level.
- **ON/OFF Switch:** Power control.
- **Headphone Jack:** 3.5mm audio output.
- **USB Port:** For charging and data transfer.
- **Memory Card Slot:** For external storage (Micro SD card).



Rear view of the flexman MP3 MP4 Player, highlighting the ON/OFF switch, headphone jack, and charging port.

4. SETUP

4.1 Charging the Device

1. Connect the small end of the USB charging cable to the player's USB port.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.

3. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2 hours.

4.2 Inserting a Memory Card

The player supports a Micro SD card (not included) up to 32GB for expanded storage. An original memory card is recommended for optimal performance.

1. Locate the memory card slot on the side of the player.
2. Insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card inward until it springs out.

4.3 Transferring Files

1. Connect the player to your computer using the USB charging cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your music, video, or other compatible files into the appropriate folders on the player or memory card.
4. Safely eject the removable disk from your computer before disconnecting the cable.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Slide the ON/OFF switch to the 'ON' position.
- **To Power Off:** Slide the ON/OFF switch to the 'OFF' position.

5.2 Navigating the Menu



Lossless sound

Supports MP3, WMA, FLAC, APE, AAC, OGG and ACELP

Supports up to 32G memory capacity
(note: card is not included)

Original memory card recommended

The flexman MP3 MP4 Player's main menu interface, displaying icons for Music, Video, Radio, Photo, Record, Text, Explorer, Tools, and Settings.

- Use the directional buttons (Up, Down, Left, Right) to highlight menu options.
- Press the Play/Pause button (center button) to select a highlighted option.
- Press the 'M' button to return to the previous menu or the main menu.

5.3 Music Playback

1. From the main menu, select 'Music'.
2. Navigate through your folders and files to select a song.
3. Press the Play/Pause button to start playback.
4. During playback:
 - Press Play/Pause to pause or resume.
 - Use the Left/Right directional buttons to skip to the previous/next track.
 - Use the VOL buttons to adjust the volume.

5.4 Video Playback

1. From the main menu, select 'Video'.
2. Navigate to and select your desired video file.
3. Press the Play/Pause button to begin playback.

5.5 Other Functions

- **Radio:** Select 'Radio' from the main menu to access the FM radio function.
- **Photo:** View image files stored on the device.
- **Record:** Use the built-in microphone for voice recordings.
- **Text:** Read text files.
- **Explorer:** Browse files and folders on the device and memory card.
- **Settings:** Adjust device parameters such as display, time, language, and format device.

6. ADVANCED FEATURES

- **Lossless Sound Quality:** The player supports various audio formats including MP3, WMA, FLAC, APE, AAC, OGG, and ACELP, providing high-fidelity audio playback.
- **Playlist Management:** Create and manage playlists to organize your favorite songs.
- **Random Playback:** Enjoy your music in a shuffled order.
- **Sleep Shutdown:** Set a timer for the device to automatically power off, conserving battery life.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently and do not leave it uncharged for extended periods.

8. TROUBLESHOOTING

If you encounter issues with your flexman MP3 MP4 Player, refer to the following common problems and solutions:

- **Device will not turn on:**
 - Ensure the ON/OFF switch is in the 'ON' position.
 - Charge the device for at least 30 minutes. The battery may be completely depleted.
- **No sound from earphones:**
 - Check if the earphones are properly plugged into the headphone jack.
 - Increase the volume using the VOL buttons.
 - Test with a different pair of earphones to rule out faulty earphones.
- **Cannot transfer files to the device:**
 - Ensure the USB cable is securely connected to both the player and the computer.
 - Verify that the player is recognized as a removable disk on your computer.
 - Check if the memory card is properly inserted and not full.
- **Device is frozen or unresponsive:**

- Slide the ON/OFF switch to 'OFF', wait a few seconds, then slide it back to 'ON' to restart the device.

9. SPECIFICATIONS

Feature	Specification
Item Type	Music Player
Material	ABS
Built-in Battery	Lithium Battery 200mAh
Memory Card Support	Up to 32GB (Micro SD, not included)
Display	1.8 Inch LCD Screen
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Battery Life (Playback)	Up to 8 hours (approx.)
Charging Time	Approximately 2 hours
Item Weight	2.11 ounces (0.06 Kilograms)
Color	Black

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.

