

[Manuals.plus](#) /

› [Accutime](#) /

› Hello Kitty LED Digital Watch User Manual

Accutime HK4222AZ

Hello Kitty LED Digital Watch User Manual

Brand: Accutime | **Model:** HK4222AZ

INTRODUCTION

This manual provides instructions for the Hello Kitty LED Digital Watch, designed for children. This timepiece features a light-up digital display, a comfortable pink silicone strap with an all-over Hello Kitty and apple print, and an adjustable strap for various wrist sizes. It is an officially licensed Sanrio product, combining fashion and functionality for young users.



Image: Front view of the Hello Kitty LED Digital Watch, displaying the time 10:10 and a small apple icon on its black digital screen. The watch has a silver-colored case and a pink silicone strap with Hello Kitty and apple patterns.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Ensure all components are present.

2. Adjusting the Strap

The watch features an adjustable pink silicone strap designed to fit wrist sizes from 5.5 inches to 8 inches. To adjust, simply use the buckle closure to find a comfortable and secure fit on the wearer's wrist.



Image: The Hello Kitty LED Digital Watch worn on a child's wrist, demonstrating its fit and appearance during use.

3. Setting the Time

The Hello Kitty LED Digital Watch is typically pre-set. If adjustment is needed, follow these steps:

1. Locate the small button on the side of the watch case.
2. Press and hold the button until the hour digits begin to flash.
3. Press the button repeatedly to advance the hour.
4. Once the correct hour is set, press and hold the button again until the minute digits begin to flash.
5. Press the button repeatedly to advance the minutes.
6. After setting the minutes, press and hold the button one last time to confirm and exit the setting mode. The display will stop flashing.



Image: Side view of the Hello Kitty LED Digital Watch, highlighting the small button used for time adjustment.

OPERATING INSTRUCTIONS

Activating the Display

The LED digital display is touch-activated. Simply touch the watch face to illuminate the time. The display will light up for a few seconds, showing the current time, and then turn off automatically to conserve battery life.



MAINTENANCE

Cleaning

To clean the watch, gently wipe the case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or printed lens.

Storage

When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures. This helps preserve the battery life and the integrity of the materials.

Battery Replacement

The watch uses a 1XCR2032 (3V) battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and functionality. Refer to the back of the watch for battery type information.



Image: Back view of the Hello Kitty LED Digital Watch, displaying the model number HK4222BU, battery type 1XCR2032 (3V), and manufacturing details.

TROUBLESHOOTING

- Display Not Lighting Up:**
Ensure the watch face is being touched firmly. If the display still does not light up, the battery may need replacement. Refer to the "Battery Replacement" section under Maintenance.
- Incorrect Time Display:**
The time may need to be reset. Follow the "Setting the Time" instructions in the Setup section.
- Strap Discomfort:**
Adjust the strap to a looser or tighter setting using the buckle. Ensure it is not too tight to restrict circulation or too loose to slide around.

SPECIFICATIONS

Feature	Detail
Model Number	HK4222AZ
Display Type	LED Digital
Activation	Touch-activated
Strap Material	Silicone
Adjustable Wrist Size	5.5" to 8"
Case Material	Metallic
Battery Type	1XCR2032 (3V)
Manufacturer	Accutime Watch Corp.
Package Dimensions	4.45 x 2.99 x 2.95 inches
Item Weight	3.77 ounces

WARRANTY AND SUPPORT

For specific warranty information regarding your Hello Kitty LED Digital Watch, please refer to the documentation included with your purchase or contact the manufacturer directly. Accutime Watch Corp. is the manufacturer of this product. For further assistance or technical support, please visit the official Accutime website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question