

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [acer](#) /
- › [Acer Aspire XC-840-UB11 Desktop Computer User Manual](#)

acer XC-840-UB11

# Acer Aspire XC-840-UB11 Desktop Computer User Manual

## 1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Acer Aspire XC-840-UB11 desktop computer. Please read these instructions carefully before using your device.



## 2. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Acer Aspire XC-840-UB11 Desktop Computer
- Power Cord
- Keyboard
- Microphone
- Documentation (Quick Start Guide, Warranty Card)

## 3. SETUP INSTRUCTIONS

---

### 3.1 Connecting Peripherals

Before powering on your computer, connect all necessary peripherals.

1. **Connect the Monitor:** Use an HDMI or VGA cable to connect your monitor to the corresponding port on the back of the computer.
2. **Connect Keyboard and Mouse:** Plug your USB keyboard and mouse into any available USB ports on the front or back of the computer.
3. **Connect to Network (Optional):**
  - **Wired Connection:** Connect an Ethernet cable from your router or modem to the Ethernet port on the back of the computer.
  - **Wireless Connection:** The computer supports Wi-Fi 6. Configuration will be prompted during initial Windows setup.
4. **Connect Power:** Plug the power cord into the power connector on the back of the computer, then plug the other end into a grounded electrical outlet.



Figure 2: Rear view with port connections.

### 3.2 Initial Power On

After connecting all peripherals and power:

1. Press the power button located on the front of the computer.
2. Follow the on-screen instructions to complete the Windows 11 Home setup process. This includes setting up your user account, network connection, and privacy settings.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power Management

- **Power On:** Press the power button.
- **Shut Down:** Click the Start button in Windows, then select Power > Shut down.
- **Restart:** Click the Start button in Windows, then select Power > Restart.
- **Sleep:** Click the Start button in Windows, then select Power > Sleep.

### 4.2 Using USB Ports

The computer features multiple USB ports for connecting external devices such as external hard drives, printers, and other peripherals. Simply plug the device into an available USB port.

## 4.3 Network Connectivity

- **Wi-Fi:** To connect to a wireless network, click the Wi-Fi icon in the taskbar, select your desired network, and enter the password if prompted.
- **Ethernet:** If an Ethernet cable is connected, the system will automatically establish a wired network connection.
- **Bluetooth:** To connect Bluetooth devices, go to Windows Settings > Bluetooth & devices, and follow the instructions to pair your device.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Computer

- Ensure the computer is powered off and unplugged before cleaning.
- Use a soft, lint-free cloth to wipe the exterior surfaces.
- For dust accumulation in vents, use compressed air. Do not spray liquids directly onto the computer.

### 5.2 Software Updates

Regularly update your Windows operating system and drivers to ensure optimal performance and security. Windows Update can be accessed via Settings > Windows Update.

### 5.3 Data Backup

It is recommended to regularly back up your important data to an external drive or cloud storage to prevent data loss.

## 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter.

- **No Power:**
  - Check if the power cord is securely connected to both the computer and the electrical outlet.
  - Verify the power outlet is functional by plugging in another device.
- **No Display on Monitor:**
  - Ensure the monitor is powered on and its power indicator light is active.
  - Check that the video cable (HDMI or VGA) is securely connected to both the computer and the monitor.
  - Confirm the monitor's input source is set correctly (e.g., HDMI 1, VGA).
- **Slow Performance:**
  - Close unnecessary applications running in the background.
  - Ensure Windows and drivers are up to date.
  - Check for malware or viruses using reputable antivirus software.
  - Verify available storage space on the 512GB SSD.

For further assistance, please refer to the Acer support website or contact customer service.

## 7. SPECIFICATIONS

---

<b>Model Name</b>	Acer Aspire XC-840-UB11
<b>Part Number</b>	DT.BJEAA.001
<b>Processor</b>	Intel Celeron N4505 (2.0 GHz, up to 2.9 GHz)
<b>Memory (RAM)</b>	8 GB DDR4
<b>Storage</b>	512 GB PCIe-based SSD
<b>Operating System</b>	Windows 11 Home
<b>Graphics</b>	Integrated Intel UHD Graphics
<b>Wireless Connectivity</b>	Wi-Fi 6, Bluetooth 5.0
<b>Dimensions (D x W x H)</b>	13 x 3.9 x 11.6 inches (33.02 x 9.91 x 29.46 cm)
<b>Weight</b>	11.9 pounds (5.4 kg)
<b>Ports</b>	Multiple USB, HDMI, VGA, Ethernet, Audio Jacks

## 8. WARRANTY AND SUPPORT

---

Your Acer Aspire XC-840-UB11 desktop computer is covered by a manufacturer's warranty. For detailed warranty information, technical support, driver downloads, and service inquiries, please visit the official Acer support website:

[www.acer.com/support](http://www.acer.com/support)

Please have your model number (XC-840-UB11) and serial number ready when contacting support.