

Accutime HK4147AZ

Accutime Hello Kitty Kids' LED Watch HK4147AZ Instruction Manual

Model: HK4147AZ

1. INTRODUCTION

Welcome to the instruction manual for your Accutime Hello Kitty Kids' LED Watch, model HK4147AZ. This watch is designed for children, featuring a bright digital display and a comfortable silicone strap with Hello Kitty graphics. This manual provides essential information on how to set up, operate, and maintain your watch.

Key Features:

- Bold LED digital display with Hello Kitty's signature bow and design.
- Durable and fun printed silicone strap showcasing colorful Hello Kitty graphics.
- Adjustable fit for wrists 5.5" to 8", offering comfort and versatility.
- Bright digital time display for easy readability.
- Designed with vibrant colors and durable materials for daily wear.

2. INITIAL SETUP

2.1 Adjusting the Strap

The silicone strap is adjustable to fit wrist sizes from 5.5 inches to 8 inches. To adjust, simply use the buckle closure to find a comfortable and secure fit on the wearer's wrist. Ensure the watch is not too tight or too loose for optimal comfort and display visibility.



The Hello Kitty Kids' LED Watch comfortably worn on a child's wrist, demonstrating its size and fit for young users.

2.2 Setting the Time and Date

Your Hello Kitty LED Watch features a single button for all settings. Follow these steps carefully to set the time and date:

1. **Activate Display:** Press the button once to illuminate the LED display and show the current time.
2. **Enter Hour Setting Mode:** While the time is displayed, press and hold the button for approximately 3 seconds. The hour digits will begin to flash.
3. **Adjust Hour:** With the hour digits flashing, press the button repeatedly in short intervals to advance the hour. The hours will cycle from 1 to 12 (or 24, depending on the mode) and then back to 1.
4. **Enter Minute Setting Mode:** Once the correct hour is displayed, press and hold the button again for approximately 5 seconds. The minute digits will begin to flash.
5. **Adjust Minute:** With the minute digits flashing, press the button repeatedly in short intervals to advance the minutes. The minutes will cycle from 00 to 59 and then back to 00.
6. **Exit Setting Mode:** After setting the minutes, press and hold the button briefly (less than 3 seconds) to exit the setting mode. The display will stop flashing, and the time will be set.
7. **Setting Date (if applicable):** Some models may allow setting the date by continuing to press and hold after setting minutes. If the month or day digits begin to flash, use short presses to adjust and a long press to confirm and move to the next setting or exit.

Important Note: *Be prompt when adjusting the time. If there is no button activity for approximately one minute during setting, the watch may exit setting mode automatically.*



Front view of the Hello Kitty Kids' LED Watch, showcasing its vibrant pink casing, black digital display, and the iconic Hello Kitty bow below the time.

3. BASIC OPERATION

3.1 Checking the Time

To view the time, simply press the single button on the watch face once. The LED display will illuminate, showing the current time for a few seconds before turning off to conserve battery life.

3.2 Checking the Date

If your watch model supports date display, after pressing the button once to show the time, press it again quickly to cycle to the date display. The date will appear for a few seconds before the display turns off.

4. CARE AND MAINTENANCE

4.1 Cleaning Your Watch

To keep your watch clean, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the watch's finish or the silicone strap. Ensure the watch is dry before wearing.

4.2 Battery Replacement

The watch is powered by one CR2032 (3V) coin cell battery. When the display becomes dim or stops working, the battery may need replacement. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and function. If attempting DIY replacement, carefully remove the small screws on the back casing, replace the battery with a new CR2032, and ensure the back cover is securely reattached to maintain any water resistance.



Rear view of the Hello Kitty Kids' LED Watch, displaying the engraved product information including the model number HK4147BU and battery type CR2032.

5. TROUBLESHOOTING

- **Display Not Lighting Up:**

Ensure the button is pressed firmly. If the display remains dark, the battery may be depleted and

require replacement.

- **Incorrect Time Display:**

The time may have been accidentally reset or not set correctly. Follow the 'Setting the Time and Date' instructions in Section 2.2 to re-adjust the time.

- **Display is Dim:**

A dim display often indicates a low battery. Replace the CR2032 battery as described in Section 4.2.

6. PRODUCT SPECIFICATIONS

Item Model Number	HK4147AZ
Manufacturer	Accutime Watch Corp.
Battery Type	1 x CR2032 (3V)
Strap Material	Silicone
Wrist Fit Range	5.5" to 8"
Display Type	LED Digital
Package Dimensions	3.03 x 2.95 x 2.83 inches
Item Weight	3.53 ounces

7. WARRANTY AND SUPPORT

This Accutime Hello Kitty Kids' LED Watch is covered by the manufacturer's standard warranty against defects in materials and workmanship. Please refer to the packaging or contact Accutime Watch Corp. directly for specific warranty terms and conditions.

For further assistance or support, please contact Accutime Watch Corp. customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.