

[Manuals.plus](#) /

› [Accutime](#) /

› Hello Kitty Kids Touchscreen LED Watch Instruction Manual

Accutime HK4161AZ

Hello Kitty Kids Touchscreen LED Watch Instruction Manual

Brand: Accutime | Model: HK4161AZ

INTRODUCTION

This manual provides essential information for the proper use and care of your Hello Kitty Kids Touchscreen LED Watch. Designed for young fans, this watch features a vibrant digital LED display and a durable silicone band with colorful Hello Kitty artwork. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image: The Hello Kitty Kids Touchscreen LED Watch, showcasing its digital display and colorful silicone strap.

SETUP

1. Unboxing

Carefully remove the watch from its packaging. Ensure all components are present and undamaged. The watch comes pre-assembled with the strap attached.

2. Initial Activation

The LED display is activated by a simple touch. Upon first use, gently tap the watch face to illuminate the display and check if it is functioning correctly.

3. Adjusting the Strap

The durable silicone band is adjustable to fit wrists from 5.5 inches to 8 inches. Use the buckle closure to find a comfortable and secure fit on the wearer's wrist. Ensure it is snug but not too tight to allow for proper circulation.



Image: The Hello Kitty watch being worn on a child's wrist, demonstrating its size and fit.

OPERATING INSTRUCTIONS

1. Checking the Time

To view the time, simply tap the center of the watch face. The bright LED display will illuminate, showing the current time in a digital format. The display will automatically turn off after a few seconds to conserve battery life.

2. Setting the Time

To set the time:

1. Tap the watch face to activate the display.
2. Press and hold the watch face for approximately 3-5 seconds until the hour digits begin to flash.
3. While the hour digits are flashing, tap the watch face repeatedly to advance the hour. Tap once for each hour increment.
4. Once the correct hour is set, press and hold the watch face again for 3-5 seconds until the minute digits begin to flash.
5. While the minute digits are flashing, tap the watch face repeatedly to advance the minutes.
6. After setting the minutes, press and hold the watch face one last time for 3-5 seconds to confirm the setting and exit time-setting mode. The display will stop flashing and return to normal operation.





Image: A detailed front view of the Hello Kitty watch face, showing the digital LED display.

MAINTENANCE

1. Cleaning

To clean your watch, gently wipe the silicone band and plastic case with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish or materials. Ensure the watch is dry before wearing.

2. Storage

When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to heat or cold can affect the battery life and material integrity.

3. Battery Care

This watch uses a sealed, non-replaceable battery. To maximize battery life, avoid excessive tapping of the display. If the display becomes dim or unresponsive, the battery may be depleted. Battery replacement should only be performed by a qualified technician to avoid damaging the watch.

TROUBLESHOOTING

- **Display Not Lighting Up:**
Ensure the watch face is tapped firmly. If still unresponsive, the battery may be depleted.
- **Incorrect Time Display:**
Follow the 'Setting the Time' instructions in the Operating section to reset the correct time.
- **Watch Feels Loose or Too Tight:**
Adjust the buckle on the silicone strap to achieve a comfortable and secure fit.

SPECIFICATIONS



Image: Graphic highlighting key features: Bright LED Display, Comfortable Silicone Strap, Kid Tough Design.

Feature	Detail
Model Number	HK4161AZ
Display Type	Touchscreen LED Digital
Band Material	Durable Silicone
Case Material	Silver-toned Plastic
Recommended Age	6+ Years
Wrist Fit Range	5.5" to 8"
Dimensions (Package)	7.05 x 3.11 x 1.42 inches
Weight (Item)	1.45 ounces

Feature	Detail
Manufacturer	Accutime Watch Corp.

Key Features:

- Bright touchscreen LED display for easy time-telling.
- Printed silicone strap with adorable Hello Kitty artwork.
- Soft and durable silicone band for comfortable all-day wear.
- Kid-tough materials and simple functionality.
- Adjustable buckle to fit a range of wrist sizes.

WARRANTY & SUPPORT

This Hello Kitty Kids Touchscreen LED Watch is manufactured by Accutime Watch Corp. For specific warranty details, please refer to the warranty information provided with your purchase or contact the manufacturer directly. Accutime is committed to providing quality products.

For product support, inquiries, or to report any issues, please contact Accutime customer service through their official website or the retailer from whom the watch was purchased. Please have your model number (HK4161AZ) and purchase details ready when contacting support.