



Manuals.plus /

› USHINING /

› USHINING 4G Unlocked Flip Phone User Manual

## USHINING T3105

# USHINING 4G Unlocked Flip Phone User Manual

Model: T3105 | Brand: USHINING

## INTRODUCTION

---

This manual provides comprehensive instructions for the USHINING 4G Unlocked Flip Phone, Model T3105. Designed for ease of use, this phone features a classic flip design, large physical buttons, dual screens, and essential functionalities like GPS positioning and voice functions. Please read this manual thoroughly to ensure proper operation and maintenance of your device.



Figure 1: USHINING 4G Unlocked Flip Phone (Closed and Open)

## SETUP

### 1. Battery and SIM Card Installation

The USHINING T3105 uses a removable battery and requires a SIM card (not included) for cellular network access.

Ensure the phone is powered off before installation.

1. Remove the back cover of the phone by gently prying it open from the notch.
2. Insert your SIM card into the designated SIM card slot. If activating a new SIM, you may need to provide the IMEI number of your old smartphone to your carrier for activation before inserting it into this phone.
3. Insert the 1400mAh removable battery into its compartment, ensuring the contacts align correctly.
4. Replace the back cover, pressing firmly until it clicks into place.



Figure 2: SIM Card and Battery Compartment

## 2. Initial Charging

Before first use, fully charge the phone's battery. Connect the provided charger to the phone's charging port and plug it into a power outlet. The charging indicator will show the charging status.



Figure 3: Charging the Phone

## 3. Powering On/Off

- To power on: Press and hold the Power/End Call button until the screen lights up.
- To power off: Press and hold the Power/End Call button, then select "Power off" from the options.

### 1. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the Green Call button.
- **Receiving a Call:** Flip open the phone or press the Green Call button to answer an incoming call. Press the Red End Call button to end a call.
- **Speed Dial:** Assign frequently called numbers to speed dial buttons (2-9). Refer to the phone's settings for detailed instructions on setting up speed dial.



Figure 4: Speed Dial Feature

### 2. Text Messaging (SMS)

The phone supports T9 predictive text input for convenient messaging. Navigate to the 'Messages' application from the main menu.

- To compose a new message: Select 'New Message' and enter the recipient's number and your message using the keypad.

- The T9 input system suggests words as you type, simplifying text entry.

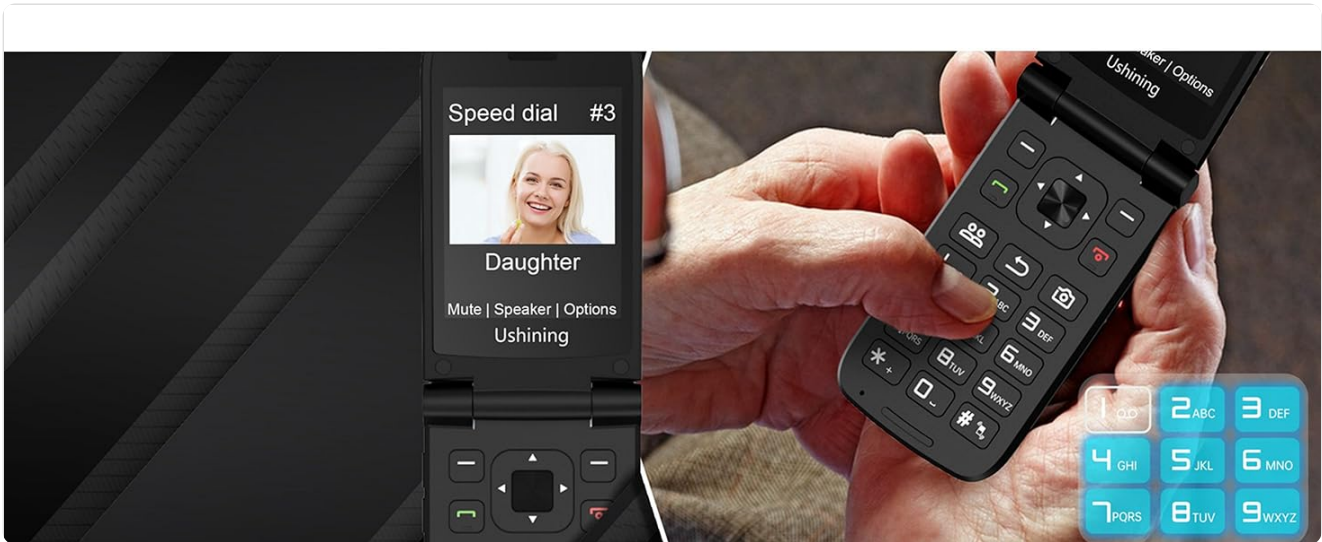


Figure 5: Text Messaging with T9 Input

### 3. Voice Function (Text-to-Speech)

The phone features a voice function that can convert text to speech, reading out menu functions and text messages. This feature enhances accessibility for users with visual impairments.

Your browser does not support the video tag.

Video 1: Demonstration of USHINING Flip Phone Features, including voice function and ease of use.

### 4. Dual Screens and Display Settings

The phone is equipped with a 2.8-inch HD main display and a 1.77-inch external screen. The external screen shows missed calls and SMS reminders. The main display offers large icons and font options for improved readability.

- To adjust font size: Navigate to 'Settings' > 'Display' > 'Font size' and select your preferred size (e.g., Normal, Large, MagniFont).



Figure 6: Dual Screens and Physical Buttons

## 5. GPS Positioning

The built-in GPS positioning feature allows for quick location identification, which can be crucial in emergencies. In case of danger, the phone can dial 911 and help locate your position.



**Built in GPS positioning, dials 911 when encountering danger, they can quickly find the location of the phone, and prevent danger from happening.**

Figure 7: GPS Positioning Feature

## 6. Camera Functionality

The phone includes a 2MP rear camera for capturing photos. Access the camera application from the main menu to take pictures.

# 2MP Rear Camera

Record Every Wonderful Moment



Figure 8: Accessing Call History (Camera icon is visible on keypad)

## 7. Connectivity (Bluetooth, Wi-Fi, 4G LTE)

The phone supports Bluetooth and Wi-Fi for wireless communication. It operates on 2G, 3G, and 4G LTE networks, compatible with most GSM carriers like T-Mobile and AT&T (not compatible with CDMA carriers like Verizon or Sprint).

- **Bluetooth:** Enable Bluetooth in settings to connect to compatible devices like headsets.
- **Wi-Fi:** Connect to available Wi-Fi networks for internet access.
- **Hotspot:** The phone can function as a wireless hotspot or use USB tethering to share data with other devices.



Figure 9: Qualcomm Chip for Stable Network Connectivity

## MAINTENANCE

### 1. Battery Care

The 1400mAh removable battery provides up to 7 hours of talk time and 96 hours of standby. To maximize battery life:

- Avoid extreme temperatures.
- Charge the battery regularly, but avoid overcharging for extended periods.
- If storing the phone for a long time, charge the battery to about 50% before storage.

# Long Lasting & Removable Battery

Always prepared 24/7



Figure 10: Battery Life Overview

## 2. Cleaning and Storage

- Wipe the phone with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your USHINING T3105, refer to the following common troubleshooting steps:

- **Phone not powering on:** Ensure the battery is correctly installed and charged. Connect the charger and try again.
- **No network signal:** Check if the SIM card is properly inserted. Verify that your SIM card is active and compatible with 4G LTE GSM networks. Move to an area with better network coverage.

- **Cannot make/receive calls:** Check network signal strength. Ensure the number is dialed correctly. Verify that your account is active with your carrier.
- **Low call volume:** Adjust the volume using the side buttons during a call. Ensure the speaker is not obstructed.
- **Camera not working:** Restart the phone. Ensure there are no physical obstructions on the camera lens.
- **Phone unresponsive:** Remove the battery, wait a few seconds, and reinsert it to perform a hard reset.

For persistent issues, please contact USHINING customer support.

## SPECIFICATIONS

---

Feature	Description
Model Number	T3105
Brand	USHINING
Product Dimensions	4.09 x 2.11 x 0.83 inches
Item Weight	3.95 ounces (112 Grams)
Operating System	Linux
RAM	1 GB
Memory Storage Capacity	8 GB
Wireless Communication Technologies	Bluetooth, Cellular, Wi-Fi
GPS	True
Main Screen Size	2.8 Inches
External Screen Size	1.77 Inches
Resolution	240 x 320
Camera	Rear (2MP)
Audio Jack	3.5 mm
Form Factor	Flip
Color	Black
Battery Capacity	1400 mAh
Phone Talk Time	7 Hours
Standby Time	96 Hours
Wireless Carrier Compatibility	Most GSM carriers (e.g., T-Mobile, AT&T). Not compatible with CDMA carriers (e.g., Verizon, Sprint).

## WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries regarding your USHINING 4G Unlocked Flip Phone, please contact the manufacturer directly. Refer to the product packaging or the manufacturer's official website for contact details.

Always retain your proof of purchase for warranty claims.

