

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [ANPABO](#) /

> [ANPABO 24V Ride-On UTV \(Model HC301\) Instruction Manual](#)

## ANPABO HC301

# ANPABO 24V Ride-On UTV (Model HC301) Instruction Manual

Model: HC301 | Brand: ANPABO

### IMPORTANT SAFETY INFORMATION

**WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.**

Always ensure children are supervised when operating the ANPABO 24V Ride-On UTV. Read all instructions before assembly and use. Keep children away from moving parts. Ensure all safety harnesses are properly secured before operation.

### WHAT'S IN THE BOX

Before beginning assembly, verify that all components listed below are present and undamaged:

- Kids Ride-On UTV Car
- Charger
- Remote Control (Requires two 1.5V AAA batteries, not included)
- Steering Wheel

### SETUP AND INITIAL CHARGE

#### 1. Assembly

Follow the detailed assembly instructions provided in the separate assembly guide. Ensure all screws and connections are secure before proceeding.

#### 2. Battery Connection

Locate the battery compartment, typically under the hood at the front of the vehicle. Connect the battery terminals as instructed. Ensure a secure connection to prevent power interruptions.

## 2-WHEEL DRIVE

Longer using time



## 4-WHEEL DRIVE

Go over obstacles with ease



Figure 1: Battery compartment location.

### 3. Initial Charging

Before first use, fully charge the vehicle's 24V battery for 8-12 hours. The charging port is usually located near the battery compartment. Plug the charger into the port and then into a standard wall outlet. Do not overcharge the battery.



Figure 2: Fully assembled ANPABO 24V Ride-On UTV.

## OPERATING INSTRUCTIONS

### 1. Starting the Vehicle

Insert the key into the ignition and turn it to the ON position. The vehicle will emit a startup sound and the dashboard lights will illuminate.



Figure 3: Key start and dashboard controls.

## 2. Driving Modes

- **Manual Mode:** For older children, use the foot pedal for acceleration and the steering wheel for direction. The vehicle features a soft start for smooth acceleration.
- **Remote Control Mode:** For younger children or parental supervision, use the included remote control. The remote has 3 variable speeds (2.1-4.5 Mph) and an emergency brake (P button) to stop the vehicle instantly.



Figure 4: Remote control operation for parental supervision.

### 3. 4WD/2WD Switchable Function

The vehicle can switch between 4-wheel drive (4WD) and 2-wheel drive (2WD) modes. Use 4WD for powerful traction on uneven terrain and 2WD for longer battery life on flat surfaces. The switch is located on the dashboard.



Figure 5: 4WD/2WD switchable feature for varied terrains.

#### 4. Speed and Direction

- Use the High/Low speed switch on the dashboard for manual mode.
- The forward/reverse switch controls the direction of travel.

#### 5. Entertainment Features

The UTV includes a built-in music player, Bluetooth connectivity, and a USB port. Connect your device via Bluetooth or USB to play your child's favorite tunes. Realistic horn and engine sounds enhance the driving experience. LED lights provide visibility and fun.



Figure 6: Dashboard with music player, Bluetooth, and USB port.

Your browser does not support the video tag.

Video 1: Official ANPABO video demonstrating the 4WD/2WD switchable feature and overall operation of the ride-on car.

## MAINTENANCE

### 1. Charging the Battery

Regularly charge the 24V battery after each use. The charging port is conveniently located under the front hood. A full charge typically takes 8-12 hours. Avoid completely draining the battery to prolong its lifespan.

### 2. Cleaning

Wipe the vehicle with a damp cloth to remove dirt and debris. Avoid using harsh chemicals or abrasive cleaners that could damage the plastic. Do not spray water directly onto electrical components.

### 3. Storage

Store the UTV in a dry, cool place away from direct sunlight and moisture. If storing for an extended period, ensure the battery is fully charged and disconnect it if recommended by the manufacturer to prevent deep

discharge.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not start	Low battery; loose battery connection; blown fuse.	Charge battery; check battery terminals; replace fuse if necessary.
Vehicle runs slowly	Low battery; overloaded vehicle; driving on soft terrain (e.g., thick grass).	Charge battery; reduce load; switch to 4WD mode or drive on harder surfaces.
Remote control not working	Remote batteries low/dead; remote not paired.	Replace remote batteries; re-pair remote control (refer to remote manual).
Unusual noises	Loose parts; debris in wheels/motors.	Inspect and tighten loose parts; clear any obstructions.

## PRODUCT SPECIFICATIONS

- **Model Number:** HC301
- **Brand:** ANPABO
- **Product Dimensions:** 45 x 31 x 31 inches
- **Item Weight:** 59.5 pounds
- **Battery:** 24V Rechargeable
- **Motors:** 4 x 75W
- **Maximum Speed:** 4.5 MPH
- **Drive Modes:** 4WD/2WD Switchable
- **Shock Absorbers:** 4-wheel spring suspensions
- **Seat:** 19-inch spacious seat with adjustable 4-point harness
- **Weight Capacity:** 110 lbs
- **Recommended Age:** 3 years and up (under 4.5 ft tall for single rider, under 3.4 ft tall for two toddlers)
- **Features:** Key-start, Soft Start, LED Lights, Built-in Music Player, Bluetooth, USB Connectivity, Rear Storage Compartment


# PERFECT SIZE FOR KIDS



Figure 7: Product dimensions and capacity details.

# 14" LARGE WHEELS 4 SHOCK ABSORBERS

Suitable in any occasion

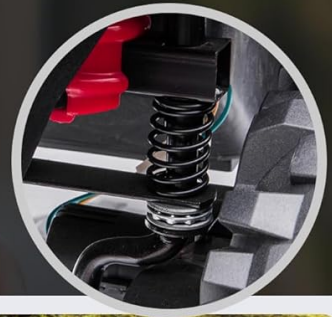

14in

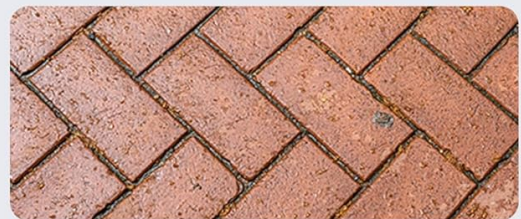


Figure 8: Large wheels and shock absorbers for all-terrain capability.

## WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact ANPABO customer service. Refer to your purchase documentation for specific warranty terms and contact details.

ANPABO is committed to providing quality products and excellent customer service. If you encounter any issues, please reach out to us for assistance.